

7866

Goodmans Extra Brass Party Speaker

USER MANUAL

Introduction

Thank you for purchasing the Goodmans Extra Brass Party Speaker. This manual provides essential information for the safe and efficient operation of your new speaker. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage or injury.
- Use only the specified power adapter for charging.
- Keep the speaker away from heat sources and direct sunlight.
- Ensure proper ventilation around the speaker during operation.

Package Contents

Please check the box for the following items:

- Goodmans Extra Brass Party Speaker
- Microphone
- Remote Control
- USB Charging Cable
- User Manual

Product Features



This image displays the Goodman's Extra Brass Party Speaker packaged in its retail box. The speaker itself is black with two prominent blue LED-lit speaker rings. The top panel shows various control buttons. The box highlights features such as 'EXTRA BASS', 'PARTY SPEAKER', 'WITH DYNAMIC MULTICOLOURED LED LIGHTS', 'Bluetooth', '100 Watts Max Power', 'LED Multi Colour Lighting', 'Extra Bass', 'Up to 5 Hours Playback', 'USB Playback', and 'Line In'. A microphone and remote control are also depicted at the bottom of the box, indicating their inclusion.

- **Powerful Audio:** 100 Watts maximum output power for robust sound.
- **Extra Bass:** Enhanced bass for a deeper audio experience.
- **Bluetooth Connectivity:** Seamless wireless streaming from compatible devices.
- **LED Multicolour Lighting:** Dynamic LED lights to enhance the party atmosphere.
- **Long Playback Time:** Up to 5 hours of continuous music playback.
- **USB Playback:** Direct audio playback from USB storage devices.
- **Microphone Input:** Includes a microphone for karaoke or announcements.
- **Remote Control:** Convenient control of speaker functions from a distance.

Setup

1. **Charging the Speaker:** Before first use, fully charge the speaker using the provided USB charging cable. Connect the cable to the speaker's charging port and a suitable USB power source (e.g., a USB wall adapter or computer USB port). The charging indicator will show the charging status.
2. **Powering On/Off:** Press and hold the Power button on the speaker's control panel to turn the speaker on or off.
3. **Bluetooth Pairing:**
 - Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
 - Enable Bluetooth on your mobile device (smartphone, tablet, etc.).

- Search for "Goodmans Speaker" (or similar name) in your device's Bluetooth list and select it to connect.
 - Once connected, the LED indicator will stop flashing and remain solid.
4. **Connecting the Microphone:** Insert the microphone cable into the designated microphone input jack on the speaker.

Operating Instructions

1. **Volume Control:** Use the volume up (+) and volume down (-) buttons on the speaker or remote control to adjust the audio level.
2. **Music Playback (Bluetooth):** Once paired, play music from your connected Bluetooth device. Use the Play/Pause, Next Track, and Previous Track buttons on the speaker or remote to control playback.
3. **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically switch to USB mode and begin playing music. Use the playback controls to navigate tracks.
4. **Microphone Usage:** Ensure the microphone is connected. Adjust the microphone volume knob (if available) on the speaker for desired vocal level.
5. **LED Light Control:** Press the LED button on the speaker or remote control to cycle through different lighting modes or turn the lights off.

Maintenance

- **Cleaning:** Wipe the speaker surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
No sound.	Volume is too low or muted.	Increase volume on speaker and connected device. Check if muted.
Bluetooth not connecting.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in pairing mode. Move device closer. Turn off other Bluetooth devices. Forget device on phone and re-pair.
Microphone not working.	Microphone not properly connected; microphone volume too low.	Ensure microphone is fully plugged in. Adjust microphone volume knob.

Specifications

Feature	Specification
Model Name	7866
Brand	Generic
Speaker Type	Portable Speaker
Speaker Maximum Output Power	100 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Frequency Response	100 GHz
Input Voltage	100 Volts
Mounting Type	Floor Standing
Material	Metal
Product Dimensions	60 x 60 x 60 cm
Manufacturer	Tijara
ASIN	B0DHT3TRK2

Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact the retailer.

For technical support, troubleshooting assistance, or service inquiries, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase for warranty claims.