

Manuals.plus /

- › Izzo /
- › Swami KISS 2.0 Handheld Golf GPS Rangefinder User Manual

## Izzo KISS 2.0

# Swami KISS 2.0 Handheld Golf GPS Rangefinder User Manual

Model: KISS 2.0 | Brand: Izzo

## INTRODUCTION

Thank you for choosing the Swami KISS 2.0 Handheld Golf GPS Rangefinder. This device is designed to provide accurate distance measurements to greens, hazards, and doglegs on over 38,000 preloaded golf courses worldwide. Its compact design, integrated magnets, and user-friendly interface make it an essential tool for golfers seeking to improve their game. Please read this manual thoroughly to understand the features and proper operation of your new GPS device.



**Figure 1:** The Swami KISS 2.0 Handheld Golf GPS Rangefinder in use on a golf course, displaying distances to the front, center, and back of the green.

## SAFETY INFORMATION

---

Please observe the following safety precautions to prevent damage to your device or injury to yourself or others.

- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Keep the device away from extreme temperatures, direct sunlight, and excessive moisture.
- Use only the charging cable provided or approved by Izzo.
- Avoid dropping the device or subjecting it to strong impacts.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

## SETUP

---

### 1. Charging the Device

Before first use, fully charge your Swami KISS 2.0.

1. Connect the small end of the USB charging cable to the charging port on the device.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging status. A full charge typically takes 2-3 hours.

### 2. Initial Power On

To turn on the device, press and hold the Power button (usually located on the side) until the screen illuminates.

### 3. Course Selection

The Swami KISS 2.0 automatically detects nearby golf courses.

1. Once powered on, the device will begin searching for GPS signals and nearby courses.
2. A list of available courses will appear. Use the navigation buttons to scroll and select your desired course.
3. Confirm your selection to begin your round.

## OPERATING INSTRUCTIONS

---

### 1. Understanding the Display

The main display shows critical information for your current hole.

- **Hole Number:** Current hole being played.
- **Par:** Par for the current hole.
- **Distances:** Front, Center, and Back distances to the green.
- **Battery Indicator:** Shows remaining battery life.
- **Time:** Current time.

### 2. Navigating Holes

The device automatically advances to the next hole as you move. If manual adjustment is needed:

- Press the "Next Hole" button (refer to device diagram for button layout) to manually advance.
- Press the "Previous Hole" button to go back.

### 3. Hazard and Layup Distances

The Swami KISS 2.0 provides distances to various hazards and layup points.

- While on a hole, press the "Hazard" button to cycle through distances to bunkers, water hazards, and other key points.

#### 4. Shot Distance Measurement

Measure the distance of your shots.

1. At your starting point, press the "Measure Shot" button.
2. Walk to where your ball landed. The device will display the distance traveled.
3. Press the "Measure Shot" button again to reset for the next shot.

#### 5. Landscape Mode

The device supports a landscape display mode for alternative viewing.



Figure 2: Illustration of the Swami KISS 2.0 transitioning from portrait to landscape display mode.

To activate or deactivate landscape mode, refer to the device's settings menu or a dedicated button if available. This feature allows for a wider view of course information.

#### 6. Integrated Magnets

The Swami KISS 2.0 features integrated magnets for convenient attachment.



Figure 3: The Swami KISS 2.0 securely attached to a metal surface on a golf cart using its integrated magnets.

The powerful magnets allow you to securely attach the device to any metal surface, such as a golf cart frame or club head, for easy access during your round. Ensure the surface is clean and dry for optimal magnetic adhesion.

## MAINTENANCE

---

- **Cleaning:** Wipe the device regularly with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid harsh chemicals.
- **Storage:** Store the device in a cool, dry place when not in use. Avoid prolonged exposure to direct sunlight or extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.
- **Software Updates:** Periodically check the Izzo Golf website for any available software or course map updates to ensure optimal performance and accuracy.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device won't turn on.	Low or no battery charge.	Charge the device for at least 30 minutes.
No GPS signal.	Obstructed view of sky; indoors.	Move to an open outdoor area with a clear view of the sky. Wait a few minutes for signal acquisition.
Incorrect course or hole displayed.	Manual selection error; device not updated.	Manually select the correct course/hole. Ensure device software and course maps are updated.
Distances seem inaccurate.	Poor GPS signal; outdated course map.	Ensure clear view of sky. Update course maps from the Izzo Golf website.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact Izzo customer support.

## SPECIFICATIONS

- **Model:** Swami KISS 2.0
- **Display Type:** LCD
- **Preloaded Courses:** Over 38,000 worldwide
- **Battery Life:** Up to 16 hours (approx. 3-4 rounds of golf)
- **Dimensions:** Approximately 2.25" (W) x 3" (H)
- **Features:** Front/Center/Back distances, Hazard distances, Shot distance measurement, Integrated magnets, Auto course/hole recognition.



Figure 4: Dimensions of the Swami KISS 2.0 Handheld Golf GPS Rangefinder.



**Figure 5:** Various views of the Swami KISS 2.0 device, highlighting its compact design and magnetic back.

## WARRANTY AND SUPPORT

---

### Warranty Information

The Swami KISS 2.0 Handheld Golf GPS Rangefinder comes with a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Izzo Golf website. Keep your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting, or general inquiries, please contact Izzo Golf customer support.

- **Website:** [www.izzogolf.com](http://www.izzogolf.com) (Check for support contact details and FAQs)
- **Email:** Refer to the Izzo Golf website for the most current support email address.
- **Phone:** Refer to the Izzo Golf website for the most current support phone number.

When contacting support, please have your device model (Swami KISS 2.0) and purchase date ready.

