

Country Living CL-18-CRM

Country Living 18 Inch Infrared Freestanding Electric Fireplace Stove Heater User Manual

Model: CL-18-CRM

1. IMPORTANT SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install this product. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

2. PACKAGE CONTENTS

Verify that all components are present before assembly. If any parts are missing or damaged, do not attempt to assemble or operate the product. Contact customer service for assistance.

- Electric Fireplace Stove Heater Unit
- Remote Control

- Instruction Manual

3. SETUP AND INSTALLATION

3.1 Placement

Place the electric fireplace stove heater on a firm, level surface. Ensure there is adequate clearance from combustible materials such as curtains, bedding, furniture, and walls. Maintain a minimum distance of 3 feet (0.9 meters) from the front, sides, and rear of the heater.

3.2 Power Connection

Plug the power cord into a 120-volt, 15-amp grounded outlet. Do not use an extension cord or power strip. Ensure the outlet is not shared with other high-wattage appliances to prevent circuit overload.



Image 1: Front view of the Country Living 18 Inch Cream Electric Fireplace Stove Heater.

Elevate Your Space Instantly

Designed for ultimate comfort



Energy Efficient



Easy Assembly



Quiet Operation



Multiple Heat Settings

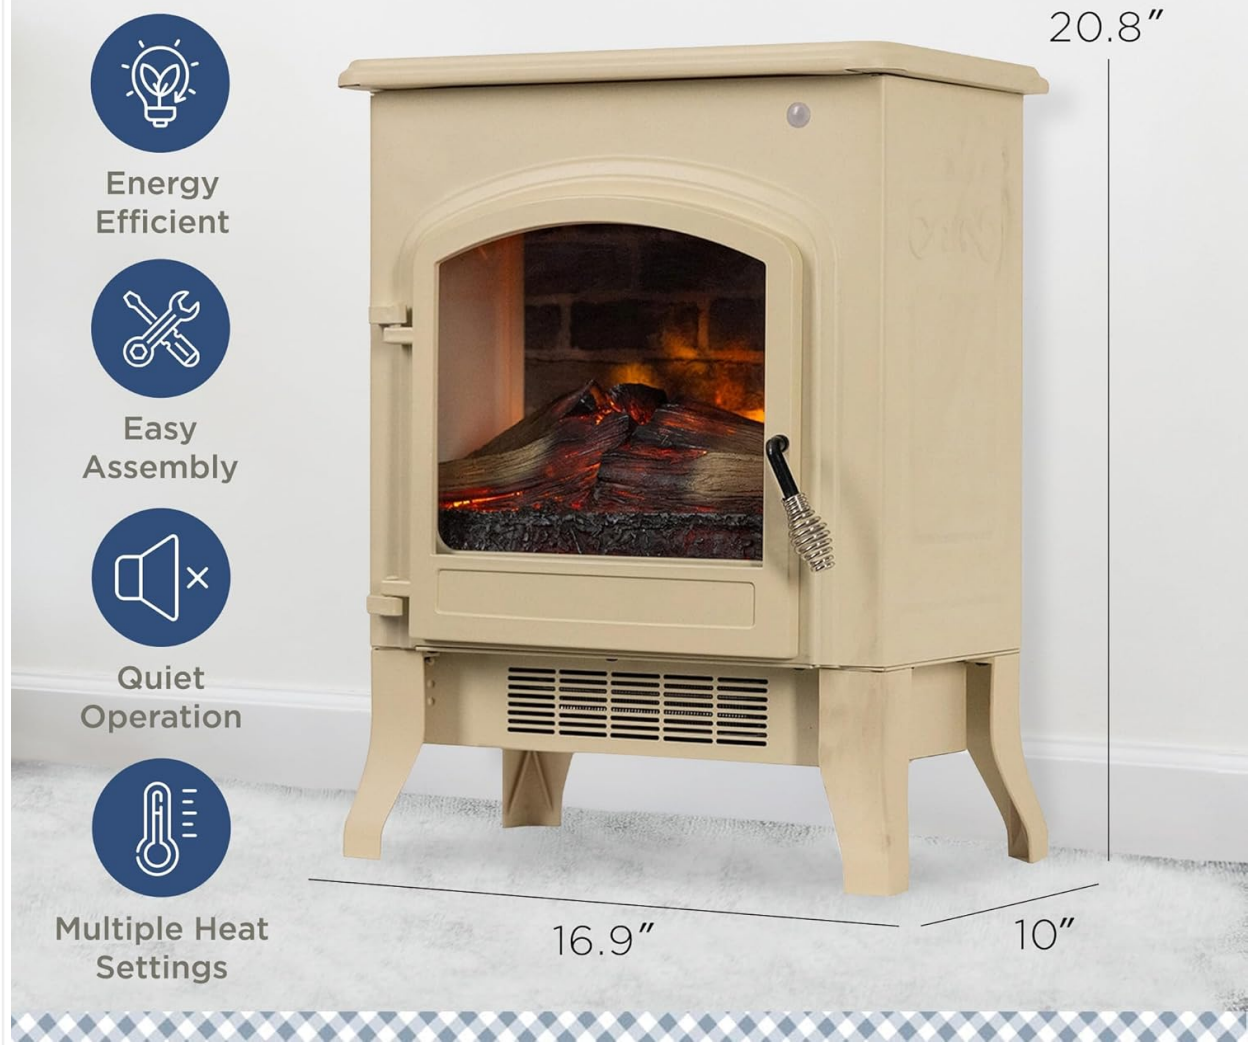


Image 2: Dimensions of the electric fireplace stove heater, showing a height of 20.8 inches, width of 16.9 inches, and depth of 10 inches.

4. OPERATING INSTRUCTIONS

The electric fireplace can be operated using the control panel located on the unit or the included remote control.

4.1 Control Panel and Remote Control Functions

Effortless Control

Enjoy the ease of adjusting your fireplace settings from any corner of the room



EASILY CHANGE SETTINGS

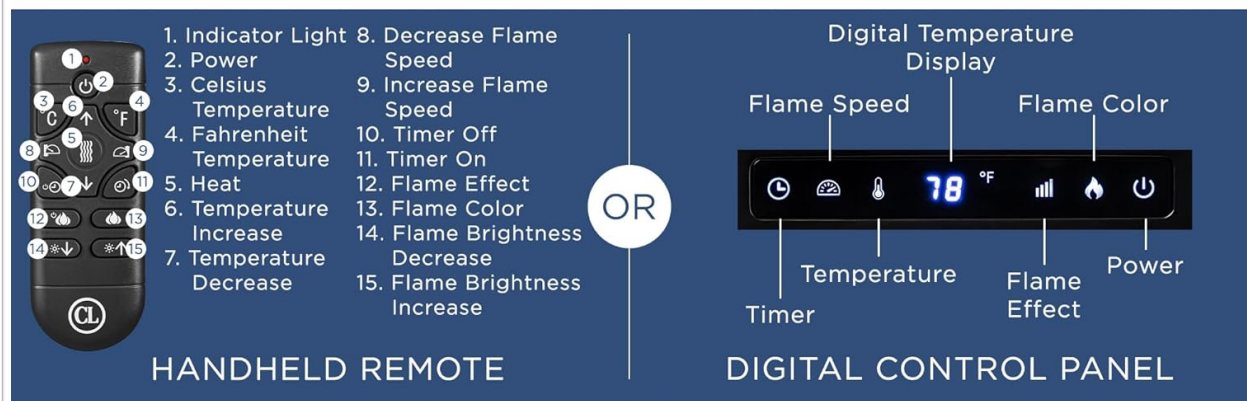


Image 3: Illustration of the handheld remote control and the digital control panel on the fireplace unit, detailing various settings.

The remote control and digital panel offer the following functions:

- **Power:** Turns the unit on or off.
- **Heat:** Activates or deactivates the heating function.
- **Temperature Control:** Adjusts the desired temperature setting. The unit provides supplemental zone heating for up to 400 square feet.
- **Flame Speed:** Adjusts the speed of the flame effect.
- **Flame Color:** Cycles through available flame color options (e.g., red, orange, mixed).
- **Flame Brightness:** Adjusts the intensity of the flame effect.
- **Timer:** Sets an automatic shut-off timer for the unit.

4.2 Year-Round Versatility

The flame effect can be operated independently of the heating function, allowing for aesthetic enjoyment without heat during warmer periods.



Image 4: The electric fireplace unit, highlighting its ability to operate with or without the heating function for year-round use.

Realistic Flame Effects

Choose from vibrant orange, bold red, or a mixed 3D flame effect in your electric fireplace



Image 5: The electric fireplace displaying various flame color options: Red Flame, Orange Flame, and Mixed Flame.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the heater before cleaning.
- Wipe the exterior surfaces with a slightly damp cloth. Do not use abrasive cleaners or solvents.
- Gently clean the glass viewing area with a soft, lint-free cloth.
- Ensure the air intake and exhaust vents are free from dust and debris. Use a vacuum cleaner with a brush attachment to clean these areas periodically.

5.2 Storage

When not in use, store the heater in a cool, dry location, preferably in its original packaging, to protect it from dust and damage.

6. TROUBLESHOOTING

If the heater is not operating correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit.	Check if the power cord is securely plugged into a grounded outlet. Verify the circuit breaker is not tripped.
No heat, but flames are visible.	Heat function is off.	Activate the heat function using the control panel or remote control.
Flame effect is not working.	Flame effect is off or bulb needs replacement.	Ensure the flame effect is turned on. If the issue persists, contact customer service for bulb replacement instructions.
Unit makes unusual noise.	Fan obstruction or internal issue.	Unplug the unit and check for any obstructions in the vents. If the noise continues, discontinue use and contact customer service.

7. SPECIFICATIONS

Brand	Country Living
Model Number	CL-18-CRM
Installation Type	Freestanding
Color	Cream
Product Dimensions	10 x 16.9 x 20.8 inches (Depth x Width x Height)
Item Weight	23.4 pounds
Heating Coverage	Up to 400 sq ft
Ventilation Type	Natural Vent
UPC	810116826346
Power Requirement	120V, 60Hz

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Country Living website. Keep your proof of purchase for warranty claims.

