

## SWOFY M4

# SWOFY M4 MP3 Player User Manual

Model: M4 | Brand: SWOFY

## 1. INTRODUCTION

Thank you for purchasing the SWOFY M4 MP3 Player. This device is designed to provide a versatile and high-quality audio experience, featuring Bluetooth 5.3 connectivity, a responsive touch screen, ample storage, and various multimedia functions. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.



Image: The SWOFY M4 MP3 Player in blue, shown with its 2.4-inch touch screen displaying app icons for Music, Movie, Radio, Bluetooth, EBook, Settings, Record, Folder, and Photo. Included are black wired earbuds and a clear protective case.

## 2. WHAT'S IN THE BOX

---

Please check the package contents to ensure all items are present:

- 1 x 64GB Bluetooth Mp3 Player
- 1 x Wired Earphone
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x User Manual
- 1 x Protective Case



Image: A flat lay of the SWOFY M4 MP3 Player package contents, including the MP3 player, wired earphones, USB charging cable, AUX cable, user manual, and protective case, alongside the product box.

### 3. PRODUCT FEATURES OVERVIEW

#### 3.1. Bluetooth 5.3 Connectivity

The SWOFY M4 is equipped with a Bluetooth 5.3 chip and AAC audio decoding, offering enhanced compatibility, stability, and faster data transfer. It functions as a unilateral transmitter, allowing easy pairing with Bluetooth headsets and speakers. Please note, it does not connect with mobile phones or computers via Bluetooth.

# Upgrade Bluetooth 5.3

More stable transmission, strong signal and wide compatibility  
easy to use and fast to connection



Bluetooth earbuds



Bluetooth headset



Bluetooth Speaker



Image: The SWOFY M4 MP3 Player demonstrating its Bluetooth 5.3 capability, showing connections to Bluetooth earbuds, a Bluetooth headset, and a Bluetooth speaker.

## 3.2. Full-Screen Touch Functions

Navigate effortlessly with the 2.4-inch 240\*320 full touch screen. This allows quick access to various functions including music, FM radio, recorder, eBooks, videos, and more. The device supports 29 languages, including English, German, and French.

# 2.4 inch Touch Screen

high sensitive and easy to use



Full touch screen

2.4



Image: A hand interacting with the 2.4-inch touch screen of the SWOFY M4 MP3 Player, highlighting its responsive interface and various application icons.

## 3.3. Ample Storage Capacity

The MP3 player comes with 64GB of built-in storage, capable of holding up to 8000 lossless music tracks. Storage can be expanded up to 128GB via a micro SD card (not included). It supports multiple music formats and allows sorting by title, artist, or album.



# 64GB Large Memory Storage

More than 16000 losses music tracks can be stored  
50 hours playing

**64GB**

Internal storage

**128GB**

SD card expansion (not Included)



Image: An illustration showing the SWOFY M4 MP3 Player with text indicating 64GB internal storage and support for up to 128GB SD card expansion, with a micro SD card depicted near the device.

## 3.4. Long-Lasting Battery

Equipped with a 300mAh lithium-ion battery and a low-power design, the device offers approximately 50 hours of playback with wired earbuds and 7.5 hours of FM radio recording. A full charge takes about 2 hours, making it suitable for extended use during travel or sports.

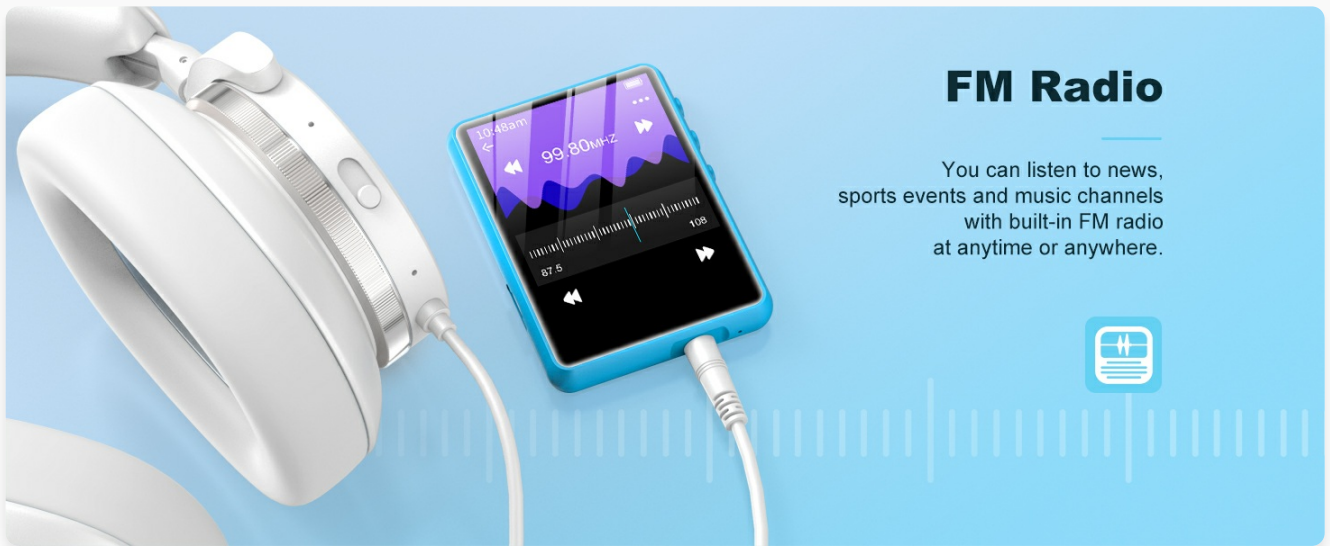



Image: The SWOFY M4 MP3 Player connected to a USB Type-C charging cable, illustrating its 300mAh long battery life and charging method.

### 3.5. HiFi Lossless Sound Quality

Experience superior audio quality with support for multiple lossless formats including MP3, WAV, APE, WMA, FLAC, and AAC-LC. The device features a DAC Audio Decoder and a Noise Reduction Chip for clear and immersive sound.

# FM Radio

You can easily listen to news, sports events and music channels you want

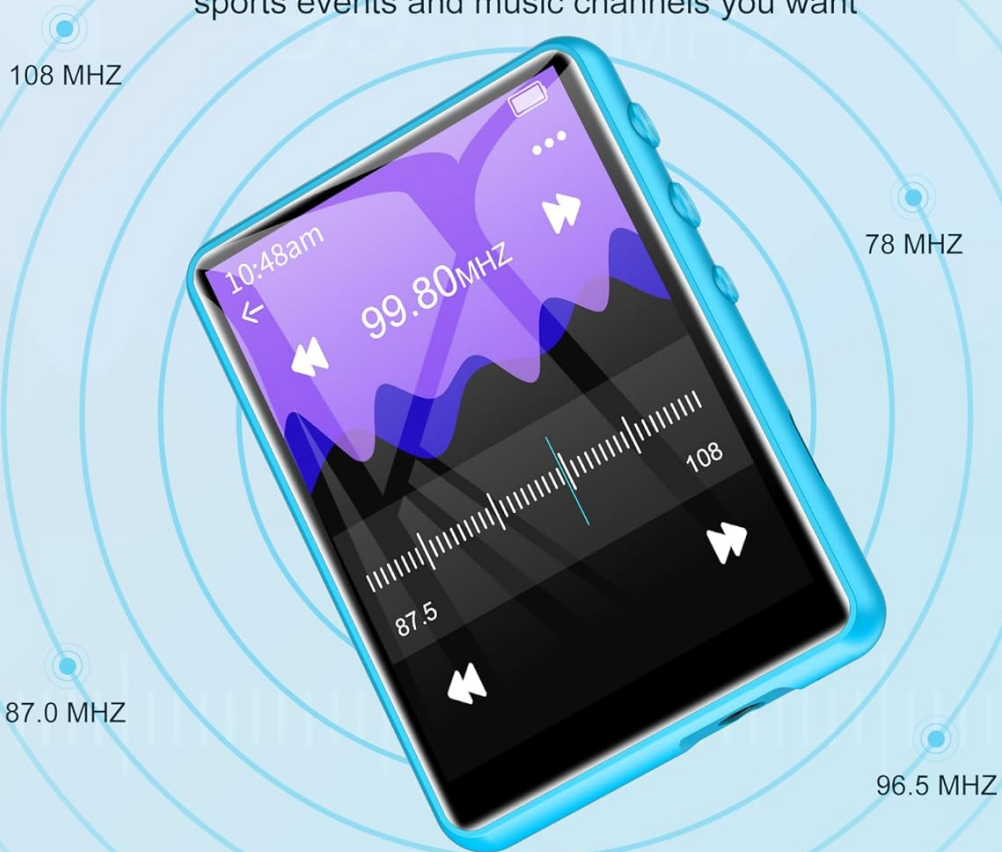

**Common Band**  
87.0MHz~108.0MHz

**European Band**  
87.0MHz~108.0MHz

**Japan Band**  
78.0MHz~90.0MHz

Note: Please insert the earphone as an antenna

Image: A person enjoying music with headphones, illustrating the HiFi Lossless Sound Quality of the SWOFY M4 MP3 Player, highlighting its DAC Audio Decoder and Noise Reduction Chip.

## 3.6. Multifunctionality

Beyond music playback, the SWOFY M4 offers a range of functions including Bluetooth 5.3, recording, TF card slot support, e-book reading, FM radio, and an alarm clock, enriching your daily use.



# Multifunction Mp3 Player

Enrich your life



Music



Bluetooth 5.3



Recording



TF card slot



E-book



Full touchscreen



FM Radio



Alarm Clock



Image: The SWOFY M4 MP3 Player showcasing its various functions: Music, Bluetooth 5.3, Recording, TF card slot, E-book, Full touchscreen, FM Radio, and Alarm Clock.

## 4. SETUP GUIDE

### 4.1. Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB charging cable to the device's USB-C port and plug the other end into a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

### 4.2. Powering On/Off

To power on, press and hold the power button located on the side of the device until the screen lights up. To power off, press and hold the power button until the power-off prompt appears, then confirm on the screen.

### 4.3. Loading Music and Files

Connect the MP3 player to your computer using the USB charging cable. The device will appear as a removable disk. You can then drag and drop music files, videos, e-books, and other supported files into the respective folders on the device's internal storage or an inserted micro SD card.

## 4.4. Inserting a Micro SD Card

Locate the micro SD card slot on the side of the device. Gently insert a micro SD card (up to 128GB, not included) into the slot until it clicks into place. To remove, push the card inward until it springs out.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Navigating the Interface

The SWOFY M4 features a full touch screen. Tap icons to open applications, swipe to navigate through menus, and use the back arrow or home button (if present on screen) to return to previous screens or the main menu.

### 5.2. Music Playback

1. From the main menu, tap the "Music" icon.
2. Browse your music by Artist, Album, Songs, Playlists, or Folders.
3. Tap a song to begin playback.
4. Use the on-screen controls for Play/Pause, Next/Previous track, Volume adjustment, and Repeat/Shuffle modes.

### 5.3. Bluetooth Connection

1. From the main menu, tap the "Bluetooth" icon.
2. Ensure your Bluetooth headphones or speaker are in pairing mode.
3. The MP3 player will scan for available devices. Select your device from the list to pair.
4. Once paired, audio will be routed to the Bluetooth device.

### 5.4. FM Radio

To use the FM Radio, you must connect wired earphones as they act as the antenna.

# Upgrade Bluetooth 5.3

More stable transmission, strong signal and wide compatibility  
easy to use and fast to connection



Bluetooth earbuds



Bluetooth headset



Bluetooth Speaker



Image: The SWOFY M4 MP3 Player displaying its FM Radio interface, showing frequency ranges for Common, European, and Japan bands, with a note to insert earphones as an antenna.

1. Connect the wired earphones to the 3.5mm audio jack.
2. Tap the "Radio" icon from the main menu.
3. Use the on-screen controls to auto-scan for stations or manually tune to a frequency.
4. Save your favorite stations for quick access.

## 5.5. Recording

1. Tap the "Record" icon from the main menu.
2. Tap the record button to start recording.
3. Tap again to pause/resume, and tap the stop button to finish and save the recording.
4. Recordings are saved in the "Record" folder.



Image: The SWOFY M4 MP3 Player displaying its voice recording interface, showing a waveform and recording time, positioned next to a laptop.

## 5.6. E-book Reading

1. Tap the "EBook" icon from the main menu.
2. Select the e-book file you wish to read.
3. Swipe left/right to turn pages.



Image: The SWOFY M4 MP3 Player displaying text from an e-book, with open books in the background, illustrating its e-book reading capability.

## 5.7. Video Playback

The device supports video playback. Ensure your video files are in compatible formats (e.g., AMV, AVI) for optimal performance. Tap the "Movie" icon to access your video library.

## 5.8. Settings

Tap the "Settings" icon to customize various aspects of your device, including language, date and time, display brightness, backlight timer, and system information.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Drops:** While durable, avoid dropping the device to prevent damage to the screen or internal components.

## 7. TROUBLESHOOTING

---



- **Device does not turn on:** Ensure the battery is charged. Connect the device to a charger for at least 10 minutes before attempting to power on again. If unresponsive, try a soft reset by pressing and holding the power button for an extended period (e.g., 15-20 seconds).
- **Cannot connect to Bluetooth device:** Ensure the Bluetooth device (headphones/speaker) is in pairing mode. Make sure the MP3 player's Bluetooth is enabled. Try restarting both devices. Remember, the MP3 player cannot connect to mobile phones or computers via Bluetooth.
- **No sound:** Check the volume level. Ensure headphones are properly plugged in or Bluetooth device is connected and has its own volume adjusted. Verify the audio file format is supported.
- **Files not appearing on device:** After transferring files, ensure the device was safely ejected from the computer. Check if files are in the correct folders. If using an SD card, ensure it is properly inserted and recognized.
- **FM Radio not working:** Ensure wired earphones are plugged in, as they serve as the antenna. Try auto-scanning for stations again.
- **Bluetooth cuts out when walking outside:** This can be due to environmental interference or distance from the paired device. Try keeping the MP3 player closer to your Bluetooth headphones/speaker.

## 8. SPECIFICATIONS

Feature	Detail
Model	M4
Brand	SWOFY
Package Dimensions	5.83 x 5.79 x 0.75 inches
Item Weight	7 ounces
ASIN	B0DHTN2N1Q
Batteries	1 Lithium Polymer batteries required (included)
Date First Available	November 30, 2024
Special Features	Built-In Speaker / Equalizer / FM Radio / Touch Screen / Video Playback / Voice Recorder
Connectivity Technology	Bluetooth
Memory Storage Capacity	64 GB (expandable up to 128GB via Micro SD)
Color	Blue
Screen Size	2.4 Inches
Compatible Devices	Bluetooth Headphone / Personal Computer / Bluetooth Speaker
Media Type	Micro SD
Included Components	64GB Mp3 Player
Display Technology	LCD

## 9. WARRANTY AND SUPPORT





The SWOFY M4 MP3 Player comes with a one-year return policy from the manufacturer. For any inquiries or support needs, please contact SWOFY customer service. A 24-hour response guarantee is provided for customer support queries.

For additional support or to explore other products, you may visit the official SWOFY store on Amazon [SWOFY Store](#).



© 2024 SWOFY. All rights reserved.

### Related Documents

	<p><a href="#">SWOFY D50 MP3 Player User Manual</a></p> <p>User manual for the SWOFY D50 MP3 Player. This guide provides detailed instructions on features such as music playback, Bluetooth connectivity, FM radio, recording, e-book reading, and device settings. Learn to maximize your portable digital music experience.</p>
	<p><a href="#">SWOFY M2 MP3 Player User Manual</a></p> <p>Comprehensive user manual for the SWOFY M2 MP3 Player, detailing its features, functions, and specifications. Learn how to operate music playback, Bluetooth pairing, FM radio, recordings, e-book reading, and device settings.</p>
	<p><a href="#">SWOFY D50 MP3 Player User Manual</a></p> <p>User manual for the SWOFY D50 MP3 Player, covering button functions, charging, music playback, Bluetooth pairing, E-book reading, FM radio, settings, and specifications.</p>
	<p><a href="#">M4 Portable MP3 Player User Manual</a></p> <p>Comprehensive user manual for the M4 portable MP3 player, detailing features, operation, charging, data transfer, music playback, video, FM radio, Bluetooth connectivity, and specifications. Learn to use your M4 music player effectively.</p>