



Manuals.plus /

› KODAK /

› KODAK 10.1-inch WiFi Digital Picture Frame User Manual

KODAK RCF-1018 BURLYWOOD

KODAK 10.1-inch WiFi Digital Picture Frame User Manual

Model: RCF-1018 BURLYWOOD

Brand: KODAK

INTRODUCTION

Welcome to the user manual for your KODAK 10.1-inch WiFi Digital Picture Frame. This device allows you to easily share and display your cherished photos and videos with family and friends from anywhere in the world. Featuring a vibrant 1280x800 HD IPS touch screen and 32 GB of built-in memory, this frame offers a seamless experience for showcasing your digital memories. This manual provides detailed instructions on setting up, operating, and maintaining your digital picture frame to ensure optimal performance and enjoyment.



Image: The KODAK 10.1-inch WiFi Digital Picture Frame, showcasing its display capabilities.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- KODAK 10.1-inch WiFi Digital Picture Frame (Model: RCF-1018 BURLYWOOD)
- Power Adapter
- Quick Start Guide
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your digital picture frame.

Front View



Image: Front view of the digital picture frame, highlighting the 10.1-inch IPS touch screen and the KODAK branding.

- **10.1-inch HD IPS Touch Screen:** High-definition display for vivid photo and video playback, with intuitive touch

controls.

- **KODAK Logo:** Located at the bottom center of the frame's bezel.

Side and Back Views



Image: Side profile of the digital picture frame, illustrating its slim design.



Image: Rear view of the digital picture frame, displaying the integrated stand and various ports for power and connectivity.

- **Power Port:** For connecting the included power adapter.
- **USB Port:** For connecting USB drives (if supported for media import/export).
- **SD Card Slot:** For inserting SD/SDHC memory cards (if supported for media import/export).
- **Integrated Stand:** Allows the frame to be placed on a flat surface in landscape or portrait orientation.
- **Wall Mount Holes:** For mounting the frame on a wall (hardware not included).

SETUP GUIDE

Follow these steps to set up your KODAK Digital Picture Frame for the first time.

Step 1: Power On

1. Unpack the digital picture frame and all accessories.
2. Connect the power adapter to the DC IN port on the back of the frame.
3. Plug the power adapter into a wall outlet. The frame will automatically power on.

Step 2: Initial Setup Wizard

Upon first power-on, the frame will guide you through an initial setup wizard:

1. **Select Language:** Choose your preferred language from the list.
2. **Connect to Wi-Fi:**
 - Select your Wi-Fi network from the list of available networks.

- Enter the Wi-Fi password using the on-screen keyboard.
 - Tap "Connect" to establish the connection.
3. **Set Date & Time:** Adjust the date, time, and time zone settings.
 4. **Frame Name:** Give your frame a unique name (e.g., "Living Room Frame").

Step 3: Download the KODAK App

To share photos and videos to your frame, you need to download the KODAK App on your smartphone or tablet.

- Search for "KODAK App" in the Apple App Store (for iOS devices) or Google Play Store (for Android devices).
- Download and install the app.
- Create a new account or log in if you already have one.

Step 4: Pair Your Frame with the App

Once the app is installed and you are logged in:

1. On your digital picture frame, navigate to the "Settings" menu and find the "Manage Frames" or "Add Device" option. You will see a unique Frame ID or QR code.
2. In the KODAK App, tap "Add Frame" or the "+" icon.
3. Enter the Frame ID manually or use your phone's camera to scan the QR code displayed on the frame.
4. Once paired, you can start sending photos and videos to your frame.

OPERATING INSTRUCTIONS

Learn how to navigate the frame's interface and manage your media.

Navigating the Touch Screen

- **Tap:** Select an item or open a menu.
- **Swipe:** Scroll through lists or switch between photos/videos in slideshow mode.
- **Pinch-to-Zoom:** Zoom in or out on photos (if supported).

Sending Photos and Videos via KODAK App

The primary method for adding content to your frame is through the KODAK App.

1. Open the KODAK App on your smartphone.
2. Select the frame you wish to send content to.
3. Tap the "Send Photos" or "Upload" icon.
4. Choose photos or videos from your device's gallery.
5. Tap "Send" or "Upload." The content will be transferred to your frame via Wi-Fi.

Note: Videos sent via the app are typically limited in length (e.g., 15-30 seconds) to ensure smooth playback and efficient transfer.

Managing Content on the Frame

- **Gallery/Albums:** Access all received photos and videos. You can organize them into albums.
- **Delete Content:** Select individual photos/videos or entire albums to delete them from the frame's memory.
- **Favorite:** Mark photos as favorites for quick access or to create a dedicated favorites slideshow.

Settings Menu

Access the settings menu on the frame to customize its behavior:

- **Slideshow Settings:** Adjust transition effects, display order (sequential, shuffle), display time for each photo, and background music.
- **Display Settings:** Brightness, sleep mode (schedule when the frame turns off/on automatically).
- **Wi-Fi Settings:** Reconnect to a different network or check connection status.
- **Date & Time:** Manually adjust or sync with network time.
- **Storage:** View available memory and manage stored content.
- **About Frame:** View firmware version, Frame ID, and other device information.
- **Factory Reset:** Reset the frame to its original factory settings (*use with caution, this will erase all data*).

MAINTENANCE

Proper care will extend the life of your digital picture frame.

- **Cleaning the Screen:** Use a soft, lint-free cloth (e.g., microfiber cloth) to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquids directly onto the screen.
- **Cleaning the Frame Body:** Wipe the frame's body with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Placement:** Place the frame on a stable, flat surface away from direct sunlight, excessive heat, humidity, or dust. Ensure adequate ventilation around the device.
- **Power Off:** If you plan to store the frame for an extended period, unplug it from the power outlet.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect password, weak signal, or router issue.	Double-check the Wi-Fi password. Move the frame closer to the router. Restart your Wi-Fi router. Ensure your network is 2.4GHz (some frames do not support 5GHz).
Photos/Videos not appearing on frame.	Frame not connected to Wi-Fi, app not synced, or incorrect file format.	Verify the frame is connected to Wi-Fi. Ensure the KODAK App shows the frame as online. Check if the files are supported formats (JPEG, PNG for photos; MP4 for videos). Re-send the files.
Touch screen is unresponsive.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the frame.
Frame is slow or freezing.	Too many files, low memory, or software issue.	Delete unnecessary files to free up space. Restart the frame. If issues persist, consider a factory reset (backup important data first).

SPECIFICATIONS

Feature	Detail
Model Number	RCF-1018 BURLYWOOD
Screen Size	10.1 Inches
Display Resolution	1280x800 HD IPS
Internal Memory	32 GB (Built-in 1GB+32GB memory)
Connectivity	Wi-Fi
Operation	Touch panel, 1-key switch
Functions	Photo, Music, Video, Calendar, Clock, Alarm, Weather updates
Product Dimensions	10.6 x 7.4 x 0.99 inches
Item Weight	1.28 pounds
Material	Plastic

WARRANTY AND SUPPORT

KODAK products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official KODAK support website.

If you encounter any issues not covered in this manual or require further assistance, please contact KODAK Customer Support:

- **Online Support:** Visit the official KODAK support page for FAQs, troubleshooting guides, and contact options.
- **Contact Information:** Refer to the KODAK website or your product packaging for the most up-to-date customer service phone numbers or email addresses.

Please have your model number (RCF-1018 BURLYWOOD) and purchase information ready when contacting support.

IMPORTANT SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the provided power adapter.
- Keep out of reach of children.