



Manuals.plus /

› Electactic /

› Electactic S180 Electric Fireplace Stove User Manual

## Electactic S180

# Electactic S180 Electric Fireplace Stove

## USER MANUAL

### 1. Introduction

Thank you for purchasing the Electactic S180 Electric Fireplace Stove. This manual provides essential information for the safe operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

The Electactic S180 is a 1500W freestanding electric fireplace stove designed to provide supplemental heating for areas up to 450 sq. ft. It features realistic 3D flame effects, remote control operation, and multiple safety features including overheat protection.

### 2. Important Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an overheat protection device that automatically shuts off the heater if it overheats. If this occurs, unplug the heater, wait 10 minutes, and plug it back in.

### 3. Package Contents

Please check the package contents upon opening. If any items are missing or damaged, contact customer support.

- 1 x Electactic Electric Fireplace Stove
- 1 x Remote Control
- 1 x User Instruction Manual (this document)



Image 1: Electactic S180 Electric Fireplace Stove and its remote control.

## 4. Setup and Installation

---

### 4.1 Unpacking

1. Carefully remove the fireplace stove from its packaging.
2. Remove all protective packaging and plastic films.
3. Verify that all components listed in the "Package Contents" section are present and undamaged.

### 4.2 Assembly (Attaching Legs)

The Electactic S180 Electric Fireplace Stove requires minimal assembly, primarily attaching the legs.

1. Gently lay the fireplace stove on its side on a soft, non-abrasive surface to prevent scratches.
2. Align each leg with the pre-drilled holes on the bottom of the stove.
3. Secure each leg using the provided screws. Ensure they are tightened firmly but do not overtighten.
4. Carefully stand the fireplace stove upright on a level, stable surface.

### 4.3 Placement

- Place the fireplace stove on a firm, level surface.
- Ensure there is adequate clearance around the unit for proper ventilation. Maintain at least 3 feet (0.9 meters) from combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.
- Do not place the heater in an area where it may be exposed to water or excessive moisture.
- This appliance is designed for indoor use only.



Image 2: Product dimensions: 10.7"D x 16.8"W x 24.3"H.

#### 4.4 Power Connection

- Ensure the power cord is not damaged.
- Plug the power cord directly into a 120V AC, 60Hz grounded electrical outlet. Do not use extension cords or power strips.

#### 5. Operating Instructions

The Electactic S180 can be operated using the control panel on the unit or the included remote control.



Image 3: Overview of control panel and remote control functions.

### 5.1 Power ON/OFF

- Press the **Power** button on the control panel or remote control to turn the unit ON or OFF.

### 5.2 Heat Settings

- Press the **Heat** button to cycle through heat settings: 500W, 1500W, or OFF.
- Use the **Temperature** buttons (+ / -) on the remote to adjust the desired temperature from 50°F to 99°F. The unit will automatically maintain the set temperature.

### 5.3 Flame Effects

The Electactic S180 offers customizable flame effects to enhance ambiance.

- **Flame Color:** Press the **Flame Color** button to cycle through 4 different flame colors (red, yellow, blue, and a blue-yellow mix).
- **Flame Brightness:** Press the **Dimmer** button to adjust the flame brightness through 5 levels.

- **Flame Speed:** Press the **Flame Speed** button to adjust the flicker speed of the flames through 5 levels.

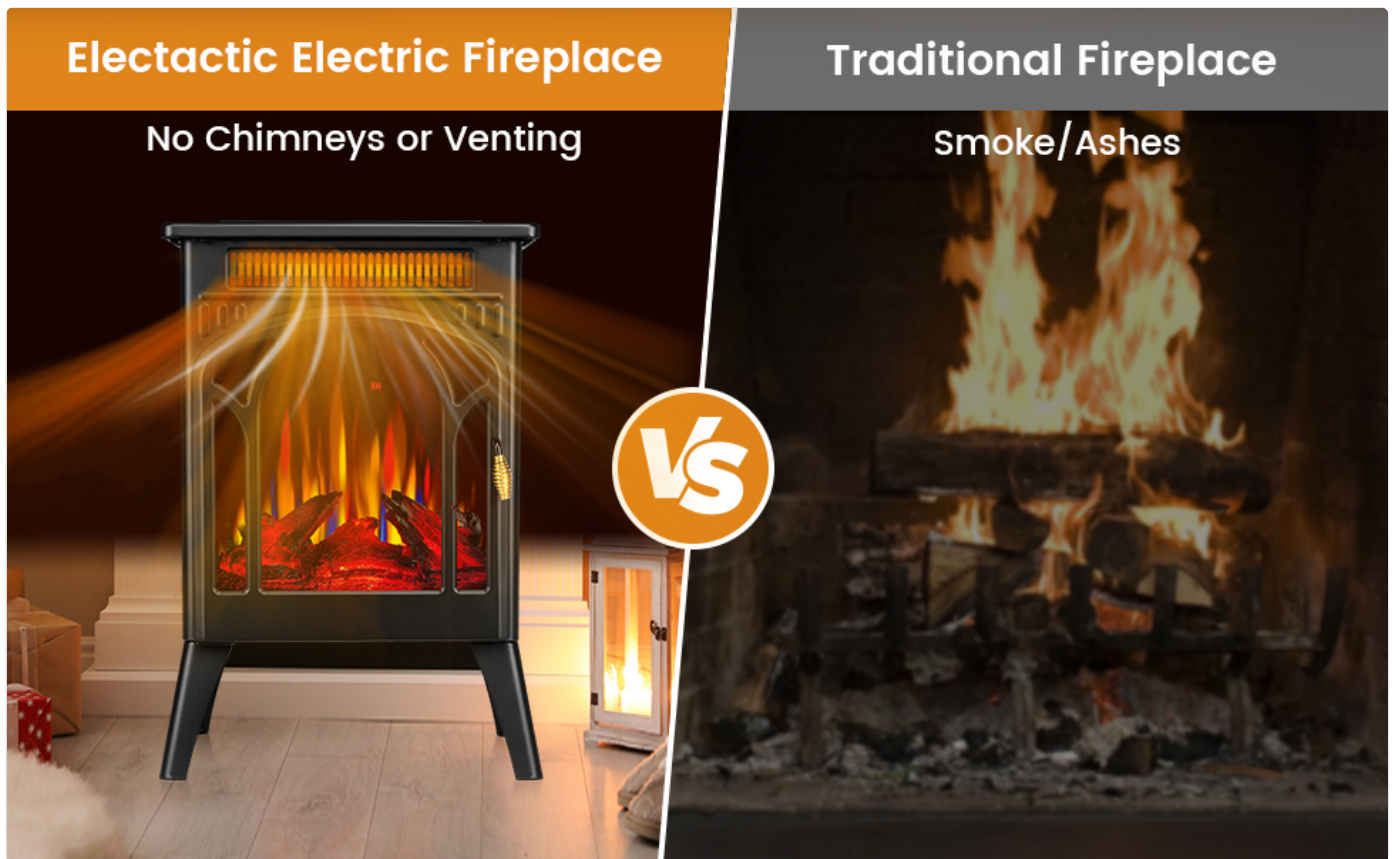


Image 4: Visual representation of 4 flame colors and 5 brightness levels.

#### 5.4 Timer Function

- Press the **Timer** button to set the automatic shut-off timer. The timer can be set for up to 8 hours. Each press will increase the timer duration.

#### 5.5 Remote Control

The remote control allows convenient operation from a distance. Ensure the remote has working batteries (not specified if included, assume user provides). Point the remote directly at the fireplace stove's receiver.

### 6. Maintenance

---

Regular maintenance ensures the longevity and efficient operation of your electric fireplace stove.

#### 6.1 Cleaning

1. Always unplug the unit from the power outlet and allow it to cool completely before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
3. For the glass viewing panel, use a soft cloth and a glass cleaner. Do not spray cleaner directly onto the unit.
4. Periodically vacuum the air intake and exhaust vents to prevent dust buildup.

#### 6.2 Storage

When not in use, store the fireplace stove in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

### 7. Troubleshooting

---

If you experience issues with your Electactic S180, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power cord not plugged in, circuit breaker tripped, unit overheated.	Ensure unit is plugged into a live outlet. Check circuit breaker. Unplug, wait 10 minutes, then plug back in if overheat protection activated.
No heat output.	Heat function is off, temperature setting too low.	Press the Heat button to activate heating. Increase the temperature setting.
Flame effect not working.	Flame effect is off.	Press the Flame Color/Dimmer/Speed buttons to activate and adjust the flame effect.
Remote control not working.	Dead batteries, obstruction, out of range.	Replace remote control batteries. Ensure no obstructions between remote and unit. Point remote directly at the unit.

If the problem persists after attempting these solutions, please contact Electactic customer support.

## 8. Specifications

Feature	Detail
Brand	Electactic
Model Number	S180
Power Source	Corded Electric
Product Dimensions (D x W x H)	10.7" x 16.8" x 24.3"
Material	Alloy Steel, Plastic
Heat Output	5100 British Thermal Units (BTU)
Heating Coverage	Up to 450 sq. ft.
Power (Adjustable)	500W / 1500W
Temperature Range	50°F to 99°F
Special Features	Adjustable Flame, Multicolor Flame, Overheat Protection, 8H Timer
Item Weight	25.3 Pounds

## 9. Warranty and Customer Support

The Electactic S180 Electric Fireplace Stove comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Electactic customer service. Contact information can typically be found on the product packaging or the official Electactic website.

*Note: Please have your model number (S180) and purchase date available when contacting support.*

