

[Manuals.plus](#) /

› [Loowoko](#) /

› Loowoko Heated Boots User Manual - Model B0DHTSM764

Loowoko B0DHTSM764

Loowoko Heated Boots User Manual

Model: B0DHTSM764

1. INTRODUCTION

Thank you for choosing Loowoko Heated Boots. These boots are designed to provide warmth and comfort in cold environments, featuring rechargeable batteries, three temperature control levels, waterproof construction, and slip-resistant ice cleats. This manual provides essential information for the safe and effective use of your heated boots.



Image 1.1: Loowoko Heated Boots with integrated battery pack and ice cleats.

2. SAFETY INFORMATION

Please read all safety instructions before using the product to prevent injury or damage.

- Do not use the boots if they are visibly damaged or if the heating elements are exposed.
- Keep batteries dry and away from extreme temperatures.
- Do not puncture, disassemble, or modify the batteries or heating system.
- If you have a medical condition affecting circulation, consult a physician before using heated products.
- Ensure the charging cable is disconnected before wearing the boots.

3. SETUP

3.1 Charging the Batteries

Before first use, fully charge both lithium-ion batteries. The charging port is typically located on the battery pack itself.

1. Locate the battery packs provided with your boots.
2. Connect the charging cable to each battery pack and then to a suitable power source.
3. Allow the batteries to charge until the indicator light shows a full charge (refer to battery indicator for specific status).



Image 3.1: Battery insertion and padded lining detail.

3.2 Inserting Batteries into Boots

Once charged, insert the batteries into the designated pockets within each boot.

1. Locate the battery pocket on the side or inside of each boot.
2. Carefully slide a charged battery into each pocket.
3. Connect the boot's internal power cable to the battery pack. Ensure a secure connection.
4. Close the pocket securely to protect the battery.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Temperature Control

The boots feature a one-touch control button to manage heating levels.

1. Press and hold the power button on the side of the boot for approximately 3 seconds to turn on the heating system. The indicator light will illuminate.
2. To cycle through temperature settings, briefly press the power button:
 - **High (Red Light):** Approximately 150°F (65°C) for up to 4 hours.
 - **Medium (Green Light):** Approximately 130°F (54°C) for up to 6 hours.
 - **Low (Blue Light):** Approximately 110°F (43°C) for up to 8 hours.
3. To turn off the heating system, press and hold the power button for approximately 3 seconds until the light turns off.



Image 4.1: Temperature control settings and indicator lights.

4.2 Wearing the Boots

Ensure a comfortable and secure fit for optimal warmth and support.

1. Lace up the boots firmly but comfortably.
2. The padded lining provides insulation and comfort, keeping your feet warm even in temperatures as low as -25°F (-31°C).
3. The rubber outsole with steel claw anti-slip clasps provides enhanced traction on slippery surfaces.



Rubber Outsole + Steel Claw Anti-Slip Clasp

Image 4.2: Slip-resistant outsole with steel claw clasps.

5. MAINTENANCE

5.1 Cleaning the Boots

To maintain the longevity and appearance of your boots:

- Disconnect and remove batteries before cleaning.
- Wipe the exterior with a damp cloth and mild soap. Do not submerge in water.
- Allow boots to air dry completely before reinserting batteries or storing.
- Do not machine wash or tumble dry.



Image 5.1: Waterproof exterior of the boots.

5.2 Battery Care and Storage

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries for extended periods. Charge them periodically if storing for a long time.
- Do not expose batteries to direct sunlight or heat sources.

6. TROUBLESHOOTING

If you encounter issues with your Loowoko Heated Boots, refer to the following common problems and solutions:

- **No Heat:**
 - Ensure batteries are fully charged and properly connected to the boot's internal cable.
 - Verify the power button has been pressed and held to activate the heating system.

- **Uneven Heating:**

- Check that both batteries are fully charged and correctly inserted.
- Ensure the heating elements are not creased or obstructed within the boot.

- **Zipper Malfunction:**

- Inspect the zipper for any fabric or debris obstruction.
- Ensure the zipper is aligned correctly before attempting to close it.

- **Short Battery Life:**

- Battery life varies with temperature setting; higher settings consume power faster.
- Ensure batteries are fully charged before each use. Battery performance can decrease in extremely cold conditions.

7. SPECIFICATIONS

Feature	Detail
Model Number	B0DHTSM764
Package Dimensions	13.46 x 10.98 x 5.24 inches
Weight	4.1 Pounds
Batteries	2 Lithium Ion batteries (included)
Sole Material	Rubber
Outer Material	Rubber
Closure Type	Lace-Up
Manufacturer	Guangdong Roops Intelligent Technology Co., LTD
Date First Available	September 28, 2024

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Loowoko customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

