

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Pro-Ject](#) /

› [Pro-Ject T1 Evo BT Turntable with OM10 Cartridge \(White\) User Manual](#)

Pro-Ject T1 Evo BT

Pro-Ject T1 Evo BT Turntable with OM10 Cartridge (White) User Manual

Brand: Pro-Ject | Model: T1 Evo BT

INTRODUCTION

The Pro-Ject T1 Evo BT Turntable is designed to deliver high-fidelity audio for vinyl enthusiasts. It combines premium materials with stylish aesthetics and advanced features for an exceptional listening experience. This manual provides essential information for setting up, operating, and maintaining your turntable.

Key Features:

- Bluetooth 5.0 aptX HD for high-quality wireless audio streaming.
- Pre-aligned Ortofon OM 10 moving magnet cartridge with elliptical diamond stylus tip and anti-skating.
- CNC-machined plinth, free of plastic, designed to minimize resonant hollow spaces.
- Heavy, zero-resonance glass platter for stable playback.
- Elegant dust cover with adjustable hinges.
- Low-capacitance Connect it Phono E RCA cable included.

WHAT'S IN THE BOX

- Pro-Ject T1 Evo BT Turntable Unit
- Dust cover
- RCA cables
- Ortofon OM 10 cartridge with diamond elliptical stylus tip (pre-mounted)
- Power supply
- Felt mat
- 45 RPM adapter

SETUP INSTRUCTIONS

Follow these steps to set up your Pro-Ject T1 Evo BT Turntable for optimal performance.

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the turntable on a stable, level surface away from direct sunlight, heat sources, and strong vibrations. Ensure adequate ventilation around the unit.



Image: The Pro-Ject T1 Evo BT Turntable in white, showcasing its minimalist design.

2. Platter Installation

Gently place the heavy glass platter onto the central spindle. Ensure it sits flush and rotates freely. The sub-platter and drive belt are typically pre-installed, but ensure the drive belt is correctly positioned around the sub-platter and motor pulley.



Image: A close-up view of the turntable's platter and tonearm assembly.

3. Tonearm and Cartridge Setup

The Ortofon OM 10 cartridge is pre-mounted and aligned. Remove any stylus guard. Ensure the anti-skating weight is correctly attached (if applicable) and the tonearm is balanced according to the manufacturer's instructions. The T1 Evo BT is designed for ease of use, with minimal user adjustment required for the tonearm.



Image: Detailed view of the Ortofon OM 10 cartridge attached to the tonearm.

4. Connecting to Audio System

Connect the supplied RCA cables from the turntable's output to your amplifier's Phono input (if your amplifier has a built-in phono stage) or to a dedicated phono preamplifier. If using the built-in phono stage of the turntable, ensure the switch is set to "Phono". For line-level input on an amplifier, set the switch to "Line".



Image: The rear connections of the turntable, highlighting the Phono and Line outputs and the ground screw.

5. Power Connection

Connect the power supply to the turntable and then to a wall outlet. The turntable is now ready for operation.

OPERATING INSTRUCTIONS

1. Playing a Record

1. Place a record on the platter.
2. Select the correct speed (33 or 45 RPM) using the speed selector switch.
3. Lift the tonearm using the cueing lever.
4. Carefully position the tonearm over the desired track of the record.
5. Lower the cueing lever to gently place the stylus onto the record.

2. Bluetooth Pairing

The T1 Evo BT features Bluetooth 5.0 aptX HD for wireless streaming to compatible Bluetooth speakers or headphones.

1. Ensure your Bluetooth receiving device (speaker/headphones) is in pairing mode.
2. Press and hold the Bluetooth pairing button on the turntable (usually indicated by a Bluetooth symbol) until the indicator light flashes.
3. Once paired, the indicator light will remain solid. You can now stream audio wirelessly.



Image: The Bluetooth pairing button and indicator light on the turntable's control panel.

3. Stopping Playback

To stop playback, lift the tonearm using the cueing lever and return it to its rest position. The platter will continue to spin until manually turned off or if auto-stop is engaged (if available on your model).

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your turntable.

- **Cleaning the Stylus:** Use a soft brush designed for stylus cleaning, brushing gently from back to front.
- **Cleaning the Record:** Use a carbon fiber brush or a record cleaning solution to remove dust and static before each play.
- **Cleaning the Turntable:** Wipe the plinth and dust cover with a soft, dry, anti-static cloth. Avoid abrasive cleaners.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust and debris.

TROUBLESHOOTING

If you encounter issues, refer to these common troubleshooting tips:

- **No Sound:** Check all cable connections (RCA, power). Ensure the Phono/Line switch is set correctly for your amplifier. Verify your amplifier's input selection and volume.
- **Distorted Sound:** Check stylus for damage or debris. Ensure the tonearm is properly balanced and anti-skating is set. Clean your records.
- **Skipping:** Ensure the turntable is on a stable, level surface. Check tonearm balance and anti-skating settings. Clean records.
- **Bluetooth Connection Issues:** Ensure your receiving device is in pairing mode and within range. Try restarting both the turntable and the Bluetooth device.
- **Incorrect Speed:** Verify the speed selector switch is set to the correct RPM for your record.

SPECIFICATIONS

Product Dimensions	13.19 x 4.33 x 16.34 inches
Item Weight	8.8 pounds (4 Kilograms)
Model Number	9120129864824
Brand	Pro-Ject

Maximum Rotational Speed	45 RPM (supports 33 and 45 RPM)
Special Feature	Built-in Bluetooth, ORTOFON Pre-Adjusted Cartridge, Anti-Skating, Low Capacity RCA Cable
Material	Aluminium, Glass, Metal
Style	T1 Evo BT
Color	White
Compatible Devices	Amplifier, Speaker, Headphone

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Pro-Ject website or contact your authorized dealer. Keep your proof of purchase for warranty claims.

For additional resources and product registration, visit: [Pro-Ject Audio Systems Store](#)