

[manuals.plus](#) /› [roborock](#) /› [Roborock F25 LT Wet Dry Vacuum Cleaner and Mop Instruction Manual](#)

roborock F25 LT

Roborock F25 LT Wet Dry Vacuum Cleaner and Mop Instruction Manual

1. INTRODUCTION

The Roborock F25 LT is an advanced wet and dry vacuum cleaner and mop designed for comprehensive hard floor cleaning. This all-in-one device combines powerful vacuuming with efficient mopping, featuring a 20,000 Pa suction power to tackle various messes. Key functionalities include a 194°F (90°C) high-temperature self-cleaning system for the roller brush, hot air flash drying, and a 180° lie-flat design for reaching under furniture. It also offers edge-to-edge cleaning within 1 mm of baseboards and a dual-scraper system to prevent hair tangles and streaks. The F25 LT is equipped with a long-lasting battery for extended cleaning sessions, ensuring your home remains spotless with minimal effort.

2. SETUP

2.1 Unboxing and Assembly

Carefully remove all components from the packaging. The main unit, handle, charging dock, and accessories are securely packed. Insert the handle into the top of the main vacuum cleaner unit until it clicks into place. Position the charging dock against a wall near a power outlet.



Founded in July 2014, Roborock specializes in the research, development, and production of robot vacuums and cordless wet/dry vacuums products that make people's lives more comfortable.

Roborock has achieved an incredible milestone: World's No.1 Robotic Vacuum Cleaner Brand in 2024! With a decade of dedication, Roborock has become a driving force in the smart cleaning industry worldwide.

Image: All components of the Roborock F25 LT, including the main vacuum unit, handle, charging dock, roller brush, filter, detergent, and user manual, are laid out on a wooden floor after unboxing.

2.2 Power Connection and Charging Dock

Connect the power cable to the charging dock and plug it into a standard wall outlet. Ensure the cable is neatly stored in the designated slot on the back of the charging dock to prevent tripping hazards. Place the vacuum cleaner onto the charging dock to begin charging. The display on the vacuum will indicate charging status.

2.3 Filling the Clean Water Tank

Before first use, remove the clean water tank from the main unit. Fill the tank with tap water up to the indicated line. For enhanced cleaning, add approximately 1/4 of a bottle cap of Roborock detergent into the designated detergent compartment. For F25 ACE and F25 ALT models, detergent can be added to the detergent cartridge for automatic dispensing.

Video: This official Roborock video demonstrates the assembly of the F25 series vacuum, including handle insertion, charging dock setup, and how to fill the clean water tank with water and detergent before use.

3. OPERATING THE VACUUM CLEANER

3.1 Powering On and Off

To start the vacuum, tilt the unit back and press the Power button on the handle. Press the Power button again to pause or turn off the vacuum.

3.2 Cleaning Modes

The Roborock F25 LT offers four distinct cleaning modes to suit various cleaning needs:

- **Eco Mode:** For light cleaning and extended battery life.
- **Sponge Mode:** For damp mopping.

- **Auto Mode:** Automatically adjusts suction and water flow based on detected dirt levels.
- **Max Mode:** Provides maximum suction power for heavy-duty cleaning.

Press and hold the Change Mode button on the handle to switch between these modes.

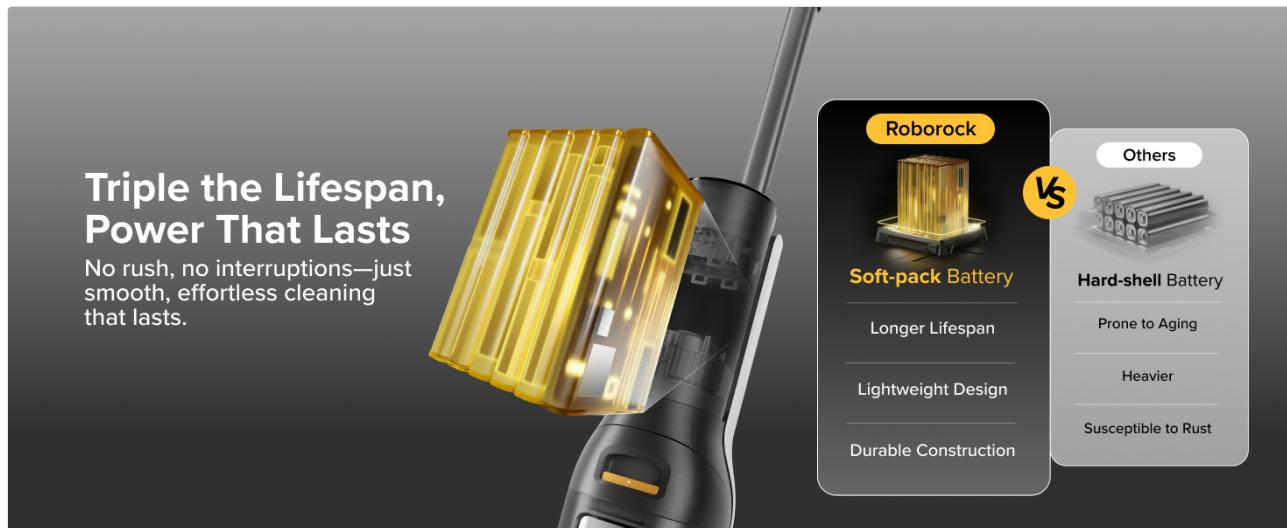


Image: A visual representation of the four cleaning modes available on the Roborock F25 LT, showing different levels of dirt and corresponding mode icons.

3.3 Advanced Cleaning Features

- **180° FlatReach Design:** The vacuum can lie completely flat, allowing it to effortlessly clean under low furniture such as beds, couches, and cabinets without sacrificing suction power.
- **Edge-to-Edge Cleaning:** Designed to clean within 1 mm of baseboards, staircases, and furniture, ensuring no spots are missed.
- **Effortless Maneuverability:** A 70-degree flexible head and strategically positioned water tank provide optimal balance and powerful forward traction, making it easy to glide across all hard floor types.
- **Dual-Scrapers Zero Tangle Design:** Innovative dual-scrapers and shark-tooth blades prevent hair tangles on the roller brush and ensure streak-free cleaning.

Image: The Roborock F25 LT is shown lying flat at a 180-degree angle, illustrating its ability to reach under low furniture with its 4.92-inch thickness while maintaining 20,000Pa suction.

Image: The Roborock F25 LT is shown cleaning along a wall, highlighting its triple-edge full-coverage cleaning capability, reaching within 0.03 inches of edges.

3.4 Battery Life and Voice Alerts

The high-quality soft-pack battery provides up to 60 minutes of runtime, allowing you to clean up to 4413 sq ft on a single charge in Eco mode. The device provides timely voice alerts for updates and notifications, such as when to empty the dirty water tank or when the cleaning rollers are active.

Image: An illustration highlights the upgraded soft-pack battery of the Roborock F25 LT, emphasizing its long-lasting power for up to 60 minutes of runtime and coverage of up to 4413 sq ft.

4. MAINTENANCE

4.1 Self-Cleaning and Drying

After each use, place the vacuum cleaner back on its charging dock. Press the Self-Clean button on the handle to initiate the self-cleaning cycle. The 194°F (90°C) high-temperature self-washing feature effectively dissolves stubborn dirt and grease from the roller brush. Following the wash, the hot air flash drying system dries the roller brush, preventing odors and ensuring it's ready for the next use. You can choose between a rapid 5-minute drying mode or a quiet 30-minute option.

Image: A visual breakdown of the Roborock F25 LT's self-cleaning process, showing the 194°F high-temperature self-washing and the subsequent hot air flash drying of the roller brush.

4.2 Emptying the Dirty Water Tank

The dirty water tank should be emptied after each cleaning session. Follow the voice prompts from the device to remove and empty the tank. The tank is designed for easy removal and cleaning.

4.3 Filter Maintenance

The F25 LT features a washable filter. Regularly remove and clean the filter according to the user manual to maintain optimal suction performance. Ensure the filter is completely dry before reinserting it into the dirty water tank.

5. TROUBLESHOOTING

If you encounter any issues with your Roborock F25 LT, please refer to the following common troubleshooting steps:

- No Power:** Ensure the device is properly charged and the power button is pressed firmly. Check the charging dock connection.
- Poor Suction:** Check if the dirty water tank is full or if the clean water tank is empty. Clean the roller brush and filter for any blockages.
- Streaks on Floor:** Ensure the roller brush is clean and properly installed. Verify that the correct amount of detergent is used.
- Unusual Noise:** Inspect the roller brush area for any foreign objects or debris that might be causing obstruction.

For more detailed troubleshooting, consult the full user manual or contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	roborock
Model Name	F25LT
Special Feature	Bagless, Cordless, Foldable, High Power, Washable Filter
Filter Type	Washable Filter
Included Components	Accessory Kit, Charging Dock, Dusting Brush

Is Cordless?	Yes
Capacity	0.87 Liters
Wattage	200 watts
Charging Time	4 Hours
Recommended Uses	Pet Hair
Form Factor	Stick
Product Dimensions	10.3" L x 8.7" W x 43.3" H
Battery Description	Lithium-Ion
Noise Level	75 Decibels
Battery Life	60 minutes
Manufacturer	roborock
Number of Items	1
Controller Type	Hand Control, Push Button
Control Method	Touch
Style	Contemporary
Connectivity Technology	Wi-Fi
Portable	Yes
Number of Power Levels	2
Indoor/Outdoor Usage	Indoor
Finish Type	Matte
Item Weight	9.2 pounds
ASIN	B0DHTZNGXQ
Item model number	WD5M3A
Batteries	1 Lithium Ion batteries required. (included)
Date First Available	February 10, 2025
Surface Recommendation	All floors
Power Source	Battery Powered

7. WARRANTY AND SUPPORT

Your Roborock F25 LT Wet Dry Vacuum Cleaner and Mop comes with a standard manufacturer's warranty. For

detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official Roborock website.

For technical support, troubleshooting assistance, or to order replacement parts, please contact Roborock customer service. Contact information can be found in your user manual or on the official Roborock support page.