

[Manuals.plus](#) /

› [YEAHBOX](#) /

› YEAHBOX A8 Portable Bluetooth Speaker User Manual

YEAHBOX A8

YEAHBOX A8 Portable Bluetooth Speaker User Manual

Model: A8

1. INTRODUCTION

Thank you for choosing the YEAHBOX A8 Portable Bluetooth Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.



Image 1.1: The YEAHBOX A8 Portable Bluetooth Speaker, showcasing its waterproof design with water splashing around it.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- YEAHBOX A8 Portable Bluetooth Speaker x 1
- Type-C Charging Cable x 1
- Audio Cable (AUX) x 1
- User's Manual x 1



Image 2.1: Contents of the YEAHBOX A8 package, including the speaker, cables, and manual.

3. PRODUCT OVERVIEW

3.1 Speaker Components

TRULY IPX7 WATERPROOF

Maximum soaking time
in one meter of still water is 30 minutes



Image 3.1: An exploded diagram illustrating the internal components of the YEAHBOX A8 speaker, highlighting its 40W sound architecture.

3.2 Control Buttons and Ports

The speaker features intuitive controls and versatile input options:

- **Power Button:** Press and hold to power on/off. Short press to control LED lights.
- **Play/Pause Button:** Play or pause audio. Answer/end calls.
- **Volume Up (+):** Increase volume. Long press for next track.
- **Volume Down (-):** Decrease volume. Long press for previous track.
- **EQ Button:** Cycle through Pop, Bass Boost, and 3D sound modes.
- **Mode Button (M):** Switch between Bluetooth, AUX, TF Card, and U Disk input modes.
- **Type-C Charging Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **TF Card Slot:** For playing music from a MicroSD card.
- **USB-A Port:** For playing music from a U Disk (USB flash drive).



Image 3.2: The YEAHBOX A8 speaker demonstrating its multiple input options: Bluetooth, USB (U Disk), TF Card, and AUX.

4. SETUP

4.1 Charging the Speaker

1. Connect the provided Type-C charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge typically takes 3-4 hours.
4. Disconnect the charging cable once fully charged to preserve battery life.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED lights activate.
- **To Power Off:** Press and hold the Power button for 2-3 seconds until the LED lights turn off and you hear an audible prompt.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, short press the 'M' button to switch to Bluetooth mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "YEAHBOX A8" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the blue LED will remain solid.

4.4 Wired Connection (AUX)

1. Connect one end of the provided 3.5mm audio cable to the speaker's AUX-in port.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode, or you may need to press the 'M' button to select AUX mode.

4.5 TF Card / U Disk Playback

1. Insert a TF (MicroSD) card or U Disk (USB flash drive) containing MP3 audio files into the respective slot/port on the speaker.

2. The speaker will automatically detect the storage device and begin playing music, or you may need to press the 'M' button to select the appropriate mode.

5. OPERATING INSTRUCTIONS

5.1 Basic Audio Controls

- **Play/Pause:** Short press the Play/Pause button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

5.2 EQ Sound Modes

The YEAHBOX A8 offers three distinct equalization (EQ) modes to customize your listening experience:

- **Pop Mode:** Balanced sound profile suitable for most music genres.
- **Bass Boost Mode:** Enhances low frequencies for a deeper bass response.
- **3D Mode:** Provides an immersive, spatial audio experience.

To cycle through these modes, short press the 'EQ' button.

5.3 Wireless Stereo Pairing (TWS)

You can connect two YEAHBOX A8 speakers for a combined 80W output and an immersive stereo sound experience.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Play/Pause button. It will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. You will hear a confirmation tone once connected.
4. Once TWS is successful, connect your device via Bluetooth to the primary speaker as described in Section 4.3.



Image 5.1: Two YEAHBOX A8 speakers connected via Wireless Stereo Pairing (TWS) for enhanced audio.

5.4 Hands-Free Calling

When connected via Bluetooth, the speaker's built-in microphone allows for hands-free calls.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button.

5.5 LED Lights Control

The speaker features vibrant LED lights that sync with your music. To control the lights, short press the Power button to cycle through different light modes or turn them off.

6. MAINTENANCE

6.1 Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

- Ensure all ports are dry before charging or connecting cables after cleaning.

6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every three months to maintain battery health.

6.3 Water Resistance Guidelines (IPX7)

The YEAHBOX A8 speaker is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for up to 30 minutes. To ensure water resistance:

- Ensure the rubber flap covering the charging and AUX ports is securely closed before exposure to water.
- Do not expose the speaker to saltwater or other chemicals, as this may degrade the waterproof seals.
- After exposure to water, dry the speaker thoroughly before opening the port cover or charging.



Image 6.1: The YEAHBOX A8 speaker demonstrating its IPX7 waterproof capability, suitable for use near water.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in Bluetooth pairing mode (flashing blue LED). Turn on device Bluetooth. Move device closer to speaker (within 10 meters).
No sound.	Volume too low; incorrect input mode; device not playing audio.	Increase speaker and device volume. Press 'M' button to select correct input mode. Ensure audio is playing on your connected device.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume on speaker and device. Charge the speaker. Move away from other electronic devices.
TWS pairing fails.	Speakers already connected to another device; incorrect pairing procedure.	Ensure both speakers are disconnected from other devices. Follow TWS pairing steps precisely (Section 5.3).

8. SPECIFICATIONS

Feature	Specification
Model Name	YEAHBOX A8
Speaker Maximum Output Power	40 Watts
Connectivity Technology	Bluetooth 5.3
Bluetooth Range	Up to 12 meters (39 feet)
Water Resistance Level	IPX7
Battery Capacity	5200 mAh Lithium Ion
Playtime	5-8 hours (varies with volume and content)
Charging Time	Approx. 3-4 hours
Input Options	Bluetooth, AUX, TF Card, U Disk
Product Dimensions	5.31"D x 3.78"W x 3.78"H (13.5cm D x 9.6cm W x 9.6cm H)
Item Weight	0.91 Kilograms (2.01 pounds)
Material	Acrylonitrile Butadiene Styrene (ABS), Metal
Control Method	Touch Buttons
UPC	750707212564



Image 8.1: The YEAHBOX A8 speaker's 5200 mAh battery provides extended playtime for both day and night use.

9. WARRANTY INFORMATION

The YEAHBOX A8 Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. This warranty typically covers manufacturing defects and material flaws under normal use.

- **Warranty Type:** Limited
- **Return Policy:** 30-day refund/replacement (check retailer for details)

Please retain your proof of purchase for warranty claims.

10. SUPPORT

For technical assistance, warranty claims, or general inquiries, please contact YEAHBOX customer support through the following channels:

- **Online Support:** Visit the official YEAHBOX website (if available) for FAQs and contact forms.
- **Email Support:** Refer to your warranty card or product packaging for the customer service email

address.

When contacting support, please provide your product model (A8) and proof of purchase for faster service.

© 2025 YEAHBOX. All rights reserved.