

besrey 718

besrey 7-in-1 Toddler Bike Instruction Manual

Model: 718

PRODUCT OVERVIEW

The besrey 7-in-1 Toddler Bike is a versatile riding solution designed to adapt to your child's growth from 1 to 5 years old. It transitions through multiple modes, including parent steering push mode, tricycle mode, balance bike mode, and baby walker mode. Key features include a 5-height adjustable parent push handle, an innovative steering linkage, a simple clutch switch for pedal control, and a shock-absorbing mechanism for a comfortable ride.



Image: The besrey 7-in-1 Toddler Bike, showcasing its adaptability from a push trike to a balance bike. The main image displays the product in pink, highlighting its compact and multi-functional design.

Safety Information

Please ensure all components are securely fastened before each use. Adult supervision is required at all times when the child is using the bike. Always ensure the child wears appropriate safety gear, including a helmet. Do not use on public roads or near motor vehicles. Regularly inspect the bike for any signs of wear or damage, especially to the wheels, pedals, and steering mechanism.

SETUP AND ASSEMBLY

The besrey 7-in-1 Toddler Bike requires minimal assembly. Follow the steps below for initial setup. For a visual guide, please refer to the installation video provided.

Your browser does not support the video tag.

Video: Official besrey 7-in-1 Toddler Bike Installation Video. This video demonstrates the step-by-step assembly process, including attaching the wheels, handlebars, seat, and parent push handle.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components listed in the parts diagram are present.
2. **Attach Rear Wheels:** Securely attach the rear wheels to the main frame. Ensure they click into place or are fastened with the provided hardware.
3. **Install Front Wheel and Fork:** Insert the front wheel assembly into the main frame. Ensure the steering mechanism aligns correctly.
4. **Attach Handlebars:** Slide the handlebars onto the front fork stem. Tighten any securing bolts or clamps.
5. **Insert Seat Post:** Insert the seat post into the designated slot on the frame. Adjust the height as needed and secure it.
6. **Attach Pedals:** If using in tricycle mode, attach the pedals to the front wheel. Ensure they are firmly in place.
7. **Assemble Parent Push Handle:** Connect the sections of the parent push handle and insert it into the rear of the bike frame. Ensure the steering linkage cable is properly connected and adjusted.

Unique Steering Mechanism

The wheels turn at the same angle with the push handle



Steering Linkage
(Patent pending)

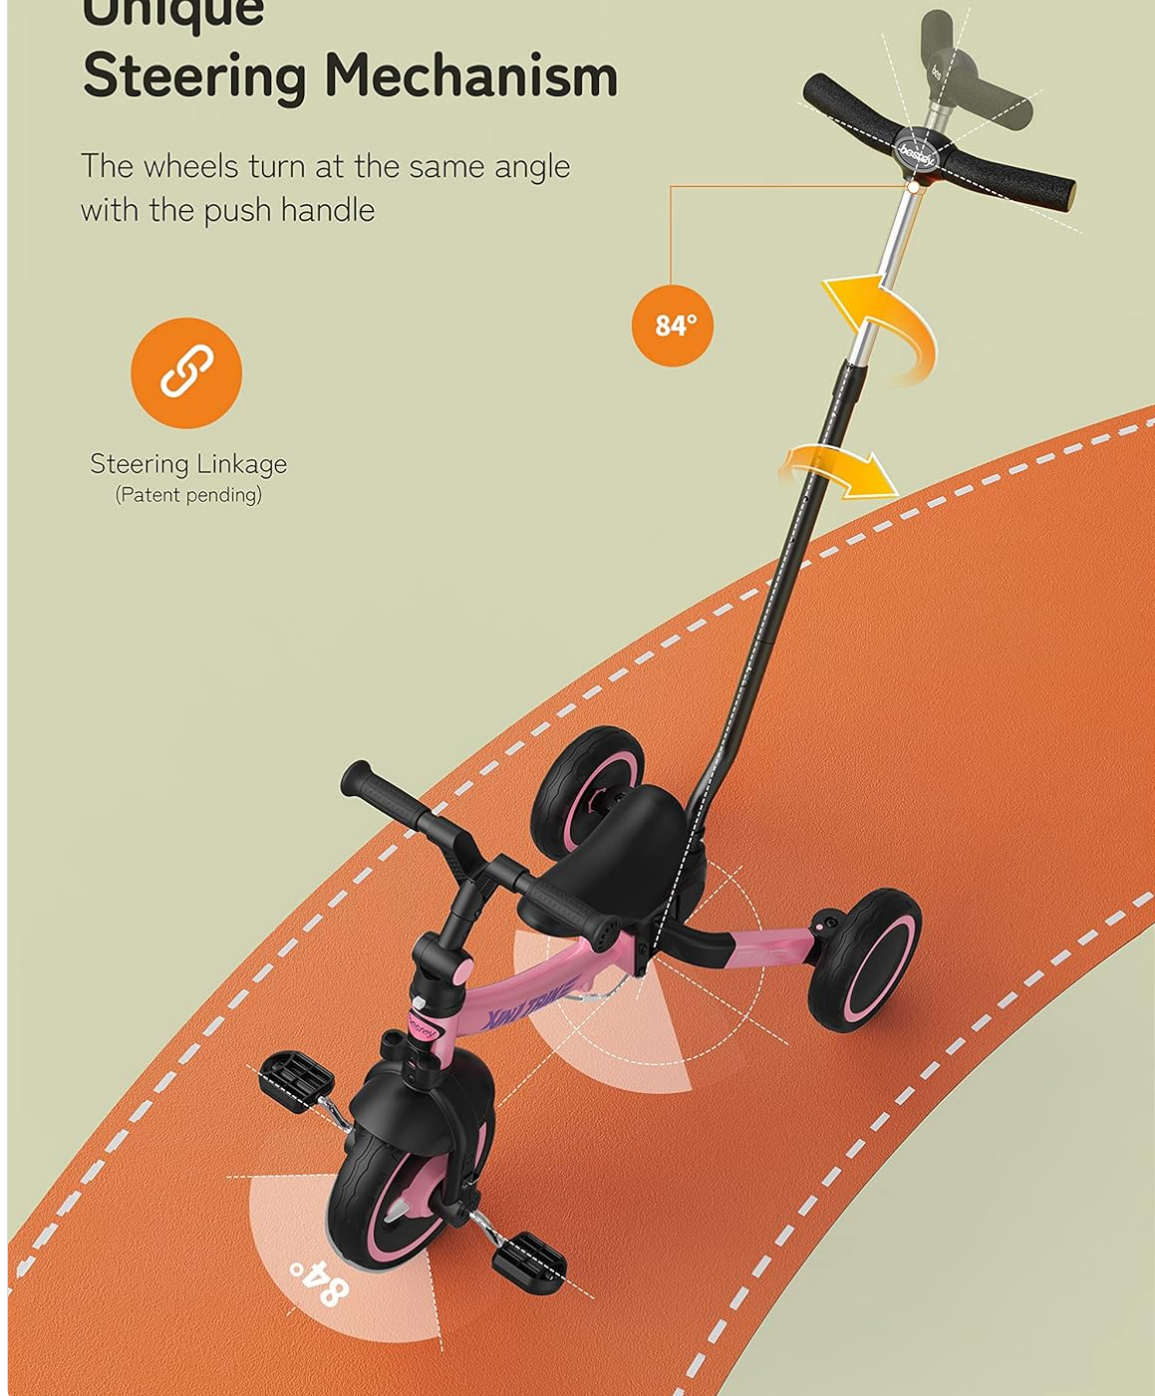


Image: A detailed diagram illustrating the unique steering mechanism. This shows how the parent push handle is directly linked to the front wheel, allowing for synchronized steering control.

OPERATING INSTRUCTIONS

The besrey 7-in-1 Toddler Bike offers multiple configurations to suit your child's developmental stage.

Riding Modes:

- **Baby Walker Mode (1-2 years, under 91 cm):** In this mode, the pedals are removed, and the child uses their feet to propel the bike, aiding in balance and coordination.
- **Tricycle Mode (2-5 years, 89-113 cm):** Attach the pedals for traditional tricycle riding. The parent

push handle can be used for steering assistance or removed when the child is ready for independent riding.

- **Balance Bike Mode (4-5 years, above 105 cm):** Remove the pedals and the parent push handle. The child can practice balancing and gliding, preparing for a two-wheeled bicycle.
- **Parent Steering Push Mode (2-5 years, 89-113 cm):** Utilize the adjustable parent push handle to steer and guide the bike. The innovative steering linkage ensures smooth and responsive control.

Multiple Ways to Ride

Helps your child to develop motor skills and strengthen balance



Push Mode

for 2-5 years kids
between 89-113 cm



baby walker

for 1-2 years kids under 91 cm



tricycles

for 2-5 years kids between 89-113 cm



balance bike

for 4-5 years above 105 cm

Image: A visual representation of the multiple riding modes available with the besrey 7-in-1 Toddler Bike, demonstrating its versatility for different age groups and skill levels.

Adjustments and Features:

- **Parent Push Handle:** The rear parent push handle can be adjusted to 5 different heights (from 29.9" to 40.6") to accommodate various adult heights.

- **Clutch Switch:** A simple clutch switch allows you to engage or disengage the pedals. When the clutch is locked, the child can practice pedaling without controlling the trike's movement. Unlock the clutch for independent pedaling.
- **Adjustable Seat:** The supportive soft seat ranges in height from 11.8-15" and features a forward/backward adjustable handlebar to ensure a comfortable fit for children up to 55 lbs.
- **Folding Mechanism:** The bike is designed to fold up for easy storage and portability. Refer to the folding instructions for compact storage.



22cmx13.1cmx17.3cm
Folding Trike (Patent pending)

Image: The besrey toddler bike folded compactly, being placed into a car trunk, illustrating its ease of portability and storage.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your besrey 7-in-1 Toddler Bike.

- **Cleaning:** Wipe down the frame and components with a damp cloth. Avoid harsh chemicals.
- **Lubrication:** Periodically check and lubricate moving parts such as wheel bearings and the steering mechanism to ensure smooth operation.
- **Fasteners:** Regularly check all bolts, screws, and clamps to ensure they are tight and secure. Tighten as necessary.
- **Tires:** Inspect tires for wear and tear. Ensure they are free from punctures or excessive damage.
- **Storage:** Store the bike in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

If you encounter issues with your besrey 7-in-1 Toddler Bike, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Steering feels loose or unresponsive.	Loose steering linkage cable or worn components.	Check the tension of the steering linkage cable and tighten if loose. Inspect for any damaged parts.
Pedals are not engaging or spinning freely.	Clutch switch is disengaged or pedals are not properly installed.	Ensure the clutch switch is in the engaged position. Re-install pedals, ensuring they are fully inserted and secured.
Bike is unstable during use.	Loose connections or uneven ground.	Verify all assembly points are secure. Ensure the bike is used on a flat, stable surface.

SPECIFICATIONS

- **Model Name:** 718
- **Color:** Pink
- **Material:** Alloy Steel
- **Item Weight:** 15 Pounds
- **Item Dimensions (LxWxH):** 30.7 x 17.7 x 41.3 inches
- **Package Weight:** 6.9 Kilograms
- **Item Package Dimensions (LxWxH):** 17.17 x 12.87 x 9.13 inches
- **Included Components:** Handlebar, seat, pedals

Fully Adjustable



Image: A diagram detailing the adjustable features and dimensions of the bike, including seat height, handlebar position, and the range of the parent push handle.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact besrey customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

