

[Manuals.plus](#) /

› [Manopola](#) /

› Manopola Magnetic Power Bank S400 User Manual

Manopola S400

Manopola Magnetic Power Bank S400 User Manual

Model: S400 | Brand: Manopola

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Manopola Magnetic Power Bank S400. Please read this manual thoroughly before using the product and retain it for future reference.

PRODUCT OVERVIEW

The Manopola S400 is a 5000mAh magnetic power bank designed for portable charging. It features Mag-Safe compatibility for wireless charging, a foldable stand for convenient viewing, and supports 22.5W PD fast charging via USB-C.



Figure 1: Manopola Magnetic Power Bank S400 with a smartphone attached, utilizing its integrated foldable stand for hands-free viewing.

SETUP

1. **Initial Charge:** Before first use, fully charge the power bank. Connect the provided USB-C cable to the power bank's USB-C port and a compatible power adapter (not included). The indicator lights will show charging progress.
2. **Device Compatibility:** Ensure your device is compatible with Mag-Safe for magnetic wireless charging, or has a USB-C port for wired charging. For optimal magnetic attachment, use a Mag-Safe compatible phone or case (magnetic case less than 3mm thick).

OPERATING INSTRUCTIONS

Charging the Power Bank

Connect the power bank to a power source using a USB-C cable. The LED indicators will illuminate to show the current charge level. All four LEDs will be solid when fully charged.

Charging Your Devices

1. Magnetic Wireless Charging (Mag-Safe Compatible Devices)

Align the power bank with the back of your Mag-Safe compatible device. The magnets will automatically snap into place, and wireless charging will begin. Ensure there are no obstructions between the power bank and your device for optimal connection and charging efficiency.

Magnetic Charging

Snap-and-Go



Mag-Safe Battery Pack | 7.5W Wireless Charging

12N magnetic force attaches directly to the back of iPhone (note: requires magnetic alignment, no case, or magnetic case less than 3mm thick).

Figure 2: Illustration of magnetic wireless charging, demonstrating the secure attachment and charging process for compatible devices.

2. Wired Charging (USB-C)

Connect your device to the power bank's USB-C port using a compatible USB-C to USB-C cable (or USB-C to Lightning for Apple devices). The power bank supports 22.5W Power Delivery (PD) fast charging for compatible devices.



Figure 3: Comparison of charging speeds, illustrating 7.5W wireless charging and 20W wired charging capabilities.

Using the Foldable Stand

The power bank features an integrated foldable stand. Gently pull out the stand from the back of the power bank to deploy it. This allows you to prop up your device while it charges, providing a convenient viewing angle for videos or video calls.

Foldable Phone Stand

Free Your Hands



Figure 4: The power bank's foldable stand in use, supporting a smartphone for hands-free viewing.

MAINTENANCE

- Keep the power bank dry and away from moisture.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

- Store in a cool, dry place when not in use.
- Avoid extreme temperatures.

TROUBLESHOOTING

Power bank not charging:

Ensure the USB-C cable is securely connected to both the power bank and the power adapter. Verify the power adapter is functioning correctly.

Device not charging wirelessly:

Check if your device is Mag-Safe compatible. Ensure there are no foreign objects or thick cases (over 3mm) between the power bank and your device that could interfere with the magnetic connection or wireless charging.

Weak magnetic attachment:

Confirm your device or case is Mag-Safe compatible. Some non-Mag-Safe cases may reduce magnetic strength. Ensure the surfaces are clean and free of debris.

Slow charging:

Ensure you are using a compatible fast-charging adapter for the power bank and a suitable cable for your device. Wireless charging is generally slower than wired charging.

SPECIFICATIONS

Model Number	S400
Brand	Manopola
Battery Capacity	5000mAh
Charging Type	Magnetic Wireless, USB-C Wired
Wired Output	Up to 22.5W PD Fast Charging
Wireless Output	7.5W (for compatible devices)
Dimensions	4 x 2.75 x 0.6 inches (100mm x 67mm x 14mm)
Weight	8.1 ounces
Battery Type	Lithium Ion

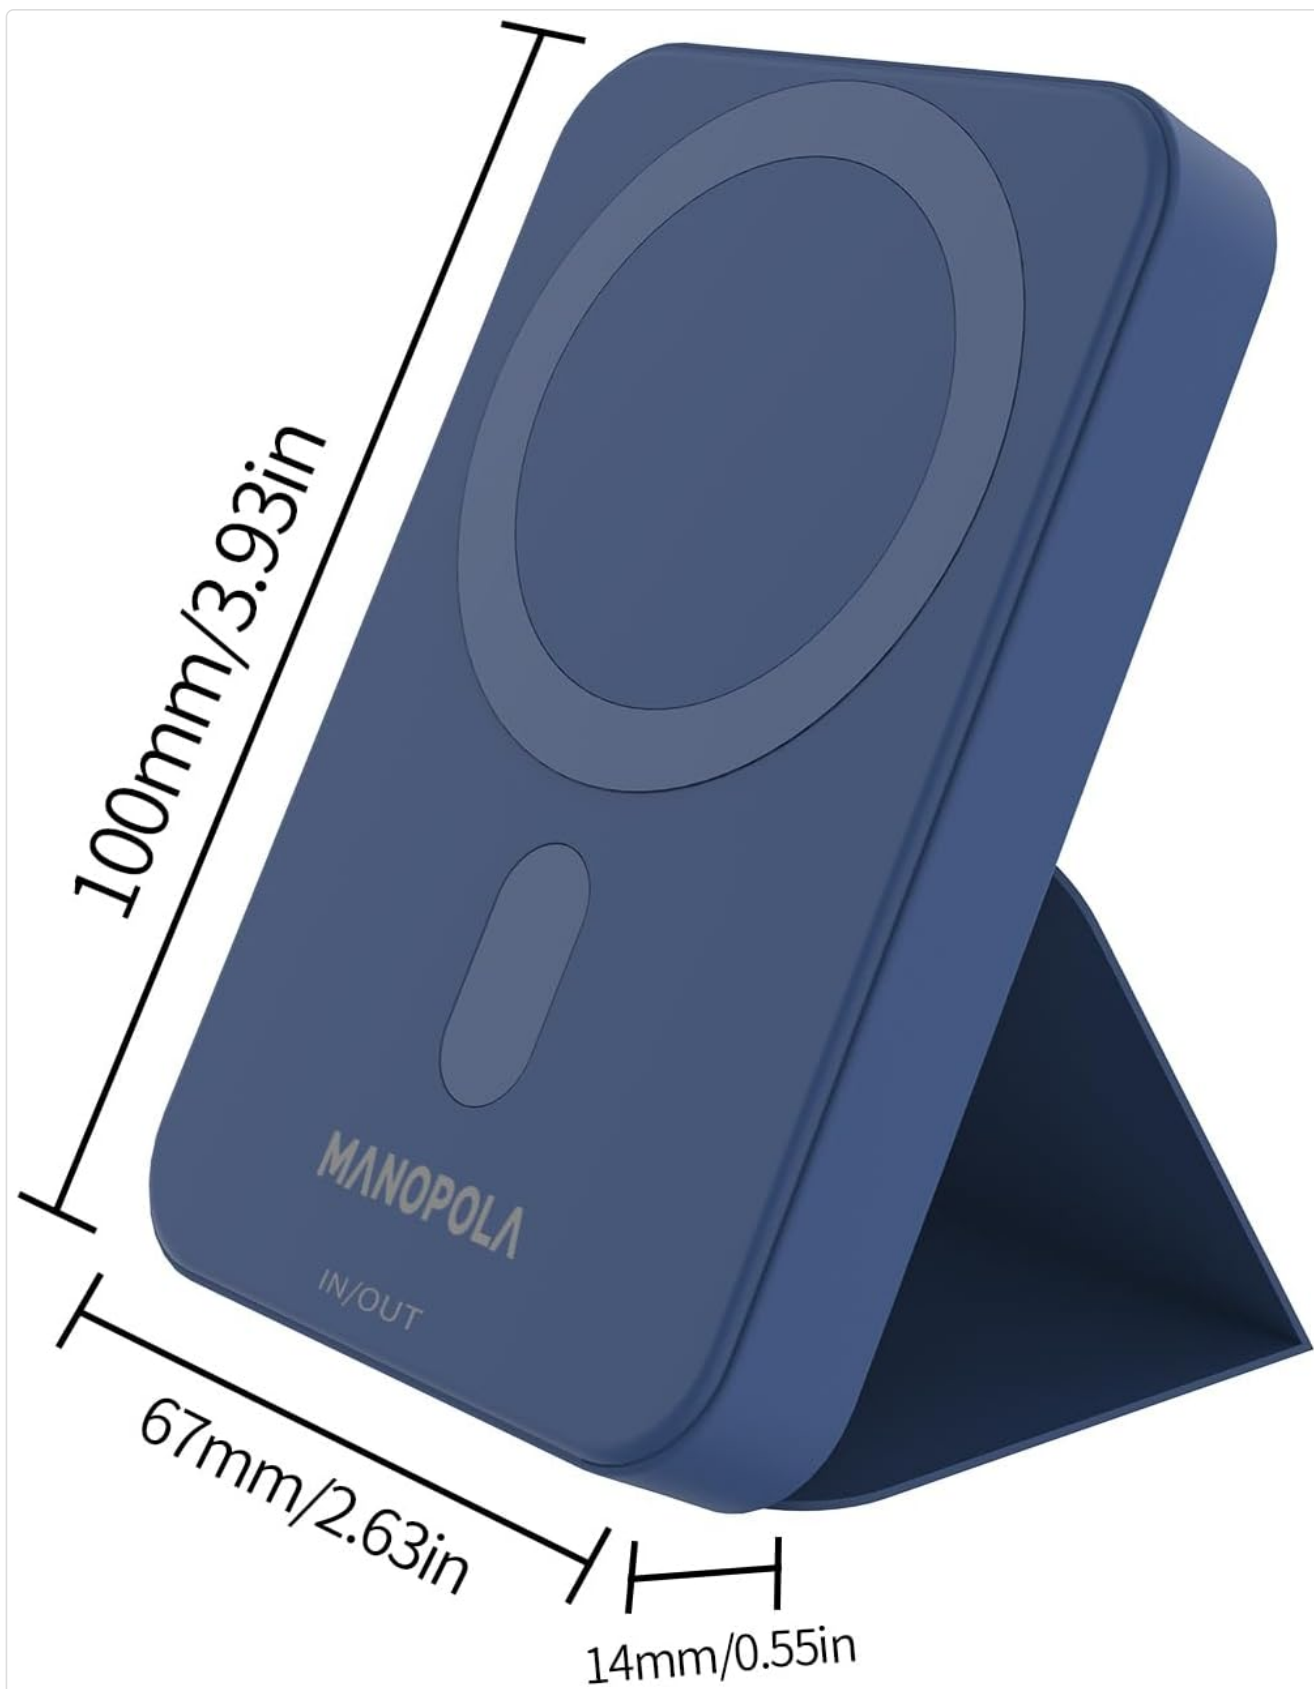


Figure 5: Physical dimensions of the Manopola Magnetic Power Bank S400.

High Capacity Battery

5000mAh

iPhone12	iPhone13/14	iPhone15	iPad pro 11	Airpods pro
2.1	2.0	1.8	1.0	13.5
Chargers	Chargers	Chargers	Chargers	Chargers



Figure 6: Charging capacity examples for various devices with the 5000mAh power bank.

SAFETY INFORMATION

- Do not expose the power bank to fire, water, or extreme temperatures.
- Do not disassemble, puncture, or modify the device.
- Keep out of reach of children.
- Avoid dropping or subjecting the power bank to severe impacts.
- If the power bank swells, emits an odor, or becomes excessively hot, discontinue use immediately.

- Dispose of the product responsibly according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Manopola website. Please have your model number (S400) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question