

[Manuals.plus](#) /

› [ADVWIN](#) /

› ADVWIN Garment Steamer KZ-GT958 User Manual

ADVWIN KZ-GT958

ADVWIN Garment Steamer KZ-GT958 User Manual

Model: KZ-GT958

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the ADVWIN Garment Steamer. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the steamer from the electrical outlet immediately after use and before cleaning, filling, or emptying.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged.
- To reduce the risk of electric shock, do not immerse the steamer in water or other liquids.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Use only distilled or de-mineralized water in the water tank to prevent mineral buildup and extend the life of the steamer.
- Keep the steamer and its cord out of reach of children and pets.
- Always ensure the water tank is securely in place before operating.
- Never leave the steamer unattended while it is operating or connected to a power outlet.
- Use caution when handling the steam nozzle and hose, as they become hot during use.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your ADVWIN Garment Steamer.

2.1 Main Components

- Base Unit (with Water Tank, Steam Control, Power Switch)
- Telescopic Pole
- Clothes Hanger
- Ironing Paddle

- Steam Hose
- Stainless Steam Nozzle



Image: Detailed view of the steamer components.

2.2 What's in the Box

- ADVWIN Garment Steamer Base Unit
- Telescopic Pole Assembly
- Clothes Hanger
- Ironing Paddle
- Steam Hose with Nozzle
- Glove (x1)
- Steam Head Holder (x1)
- Fabric Brush/Pants Press (x1)
- User Manual (x1)



Image: All included accessories and the user manual.

3. SETUP

Follow these steps to assemble and prepare your garment steamer for first use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Pole:** Insert the telescopic pole into the designated slot on the base unit. Extend the pole to your desired height and secure it.
3. **Attach Hanger and Paddle:** Mount the clothes hanger and ironing paddle onto the top of the telescopic pole.
4. **Connect Steam Hose:** Securely attach the steam hose to the steam outlet on the base unit. Ensure it is tightly fastened to prevent leaks.
5. **Fill Water Tank:** Remove the 2.7L transparent water tank from the base. Open the cap and fill it with **distilled or de-mineralized water only**. Do not overfill. Close the cap securely and place the tank back into the base unit.



Image: The ADVWIN Garment Steamer fully assembled and ready for use.

2.7L TRANSPARENT WATER TANK

Easy to Add Water, Water Tank at a Glance,
Reduce Repeated Water

Note: Please Add Pure Water



Image: The 2.7L removable water tank, indicating its capacity and transparency for easy monitoring.

4. OPERATING INSTRUCTIONS

Learn how to effectively use your garment steamer for wrinkle removal.

4.1 Powering On and Heating

1. Ensure the water tank is filled and securely in place.
2. Plug the power cord into a suitable electrical outlet (120V).
3. Turn the power switch to the 'ON' position. The steamer will begin to heat up.
4. Wait approximately 30 seconds for the steamer to reach operating temperature and produce steam.

Easy Wrinkle Removal



Image: Key performance indicators: 2000W power, 209°F steam temperature, and 90 minutes of continuous steaming.

4.2 Adjusting Steam Levels

The steamer features 10 adjustable steam levels to suit various fabric types.

- Rotate the steam control knob on the base unit to select the desired steam intensity.
- Lower settings are suitable for delicate fabrics like silk and nylon blends.
- Higher settings are ideal for heavier fabrics such as wool, linen, and denim.



Image: The 10 steam settings are suitable for various materials, from delicate silk to robust cotton and wool.

4.3 Steaming Techniques

The ADVWIN Garment Steamer supports both vertical and flat ironing.

- **Vertical Steaming:** Hang the garment on the integrated hanger. Hold the steam nozzle a few inches from the fabric and move it up and down, allowing the steam to penetrate and relax the fibers.
- **Flat Ironing:** Place the garment on the ironing paddle. Press the steam nozzle gently against the fabric while moving it across the surface. This method is effective for collars, cuffs, and achieving crisp finishes.
- Use the fabric brush attachment for thicker materials or to remove lint and hair while steaming.
- The steamer provides up to 90 minutes of continuous steam on a full 2.7L tank.

209°F WATER TEMPERATURE

Remove Bacteria and Taste



Image: The steamer can be used for a wide range of items including home textiles, clothing, and delicate items like wedding dresses.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steamer.

5.1 After Each Use

- Unplug the steamer and allow it to cool completely.
- Remove the water tank and empty any remaining water.
- Wipe the exterior of the steamer with a soft, damp cloth.

5.2 Descaling (Monthly or as Needed)

Mineral buildup from tap water can affect performance. Descaling is crucial.

1. Ensure the steamer is unplugged and cool.

- 2. Mix a solution of 50% white vinegar and 50% distilled water.
- 3. Pour the solution into the water tank.
- 4. Plug in the steamer and turn it on. Allow it to steam until half of the solution has been used.
- 5. Turn off and unplug the steamer. Let it cool for at least 30 minutes.
- 6. Empty the remaining solution. Rinse the tank thoroughly with fresh distilled water.
- 7. Refill the tank with fresh distilled water and run the steamer until the tank is empty to flush out any residual vinegar.

5.3 Storage

Store the steamer in a cool, dry place. Ensure the water tank is empty and the hose is not kinked.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No steam or weak steam	Water tank empty; Steamer not heated sufficiently; Mineral buildup; Hose kinked.	Refill water tank; Allow 30 seconds for heat-up; Perform descaling; Straighten hose.
Water spitting from nozzle	Mineral buildup; Overfilled water tank; Steamer not fully heated.	Perform descaling; Do not overfill tank; Allow full heat-up time.
Water leakage from base or hose connection	Water tank not seated correctly; Hose not securely attached.	Ensure water tank is properly inserted; Tighten hose connection.
Steamer not turning on	Not plugged in; Power switch off; Faulty outlet.	Check power cord connection; Ensure switch is ON; Try a different outlet.

7. SPECIFICATIONS

Brand	ADVWIN
Model Number	KZ-GT958
Wattage	2000W
Voltage	120V
Water Tank Capacity	2.7 Liters
Heat-up Time	30 Seconds
Continuous Steaming Time	Up to 90 Minutes

Steam Levels	10
Item Weight	9.1 Pounds
Package Dimensions	17 x 15 x 14 inches
Date First Available	September 24, 2024

What's in the Box




Glove *1



Steam Head Holder*1



Fabric Brush/Pants Press *1

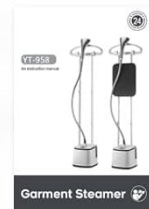

User Manual *1

Image: Product dimensions for both standing and compact configurations.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official ADVWIN website. For further assistance or support, please contact ADVWIN customer service.

You can visit the ADVWIN store for more information:[ADVWIN Store](#)

