

[manuals.plus](#) /› [Lexibook](#) /› [Lexibook Spider-Man Bilingual Educational Laptop JC599SPi2 Instruction Manual](#)**Lexibook JC599SPi2**

Lexibook Spider-Man Bilingual Educational Laptop JC599SPi2 Instruction Manual

Model: JC599SPi2

1. INTRODUCTION AND OVERVIEW

The Lexibook Spider-Man Bilingual Educational Laptop JC599SPi2 is designed to provide an engaging and educational experience for children. This device offers 170 activities, with 85 in English and 85 in Spanish, covering a wide range of subjects including language arts, mathematics, general knowledge, logic, clock reading, and music. It features a large LCD screen with animations and comes with a functional keyboard and mouse to familiarize children with computer interaction.



170 ACTIVIDADES DIVERTIDAS E INTERACTIVAS (85 EN CADA IDIOMA)
170 FUN AND INTERACTIVE ACTIVITIES (85 IN EACH LANGUAGE)

BILINGÜE ESPAÑOL / INGLÉS
BILINGUAL SPANISH/ ENGLISH

MÚSICA Y MELODIAS ENCANTADORAS
LOVELY MUSIC AND MELODIES

Figure 1.1: The Lexibook Spider-Man Bilingual Educational Laptop, showcasing its design and key features like 170 interactive activities, bilingual English/Spanish content, and musical options.

The laptop's design is inspired by real computers, providing a comfortable and natural experience for young users. Its portable size makes it suitable for learning on the go.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 36 months. Choking hazard due to small parts.

- Always supervise children during use.
- Do not expose the device to water or excessive moisture.
- Do not attempt to disassemble or modify the device.
- Use only the specified battery type (AA/LR6).

3. SETUP

3.1 Battery Installation

The Lexibook Spider-Man Educational Laptop requires 2 AA/LR6 batteries (not included).

1. Locate the battery compartment on the underside of the laptop.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 new AA/LR6 batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3.2 Connecting the Mouse

The included mouse connects to the laptop via a cable.

1. Locate the mouse port on the side of the laptop.
2. Plug the mouse cable into the port firmly.



Figure 3.1: The educational laptop with its wired mouse connected, ready for use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on the laptop, press the **ON/OFF** button located on the keyboard.
- To turn off the laptop, press the **ON/OFF** button again. The device will also automatically shut down after a period of inactivity to conserve battery life.

4.2 Language Selection

Upon first use or after a reset, you may be prompted to select a language. Use the arrow keys and the

ENTER button to choose between English and Spanish. The language can typically be changed within the settings menu, accessible via a dedicated button or menu option.

4.3 Navigating Activities

The laptop features 170 activities across various categories.



Figure 4.1: Icons on the laptop screen representing various educational activity categories.

- Use the mouse or the arrow keys on the keyboard to navigate through the menu options.
- Press **ENTER** or click the left mouse button to select an activity.
- Activities are categorized into:
 - **Language Arts:** Alphabet, pronunciation, word recognition, reading.
 - **Mathematics:** Basic arithmetic, number recognition.
 - **General Knowledge:** Various facts and information.
 - **Logic:** Puzzles, problem-solving games.
 - **Clock Reading:** Learning to tell time.
 - **Music:** Melodies, musical activities.
 - **Games:** Entertainment games like Snake, Maze, and airplane races.



Figure 4.2: The keyboard layout, featuring both English and Spanish characters and functions.

4.4 Using the Keyboard and Mouse

- The keyboard allows for typing practice and interaction with text-based activities.
- The mouse is used for point-and-click navigation and engaging with graphical interfaces, such as

drawing activities.

- The **Repeat** button (or similar) can be used to hear instructions or words again in language activities.



Figure 4.3: A drawing activity on the screen, demonstrating interactive learning.

5. MAINTENANCE

5.1 Cleaning

- Wipe the surface of the laptop with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Avoid getting moisture into openings.

5.2 Battery Care

- Remove batteries if the device will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly installed.	Replace with new AA/LR6 batteries, ensuring correct polarity.
Screen is blank or flickering.	Low battery power; temporary software glitch.	Replace batteries. Turn the device off and on again.
No sound or low sound.	Volume is too low; temporary software glitch.	Adjust the volume using the dedicated volume buttons (if present) or through the settings menu. Turn the device off and on again.
Mouse is not responding.	Mouse cable is loose or disconnected.	Ensure the mouse cable is securely plugged into the port.

7. SPECIFICATIONS

Feature	Detail
Model Number	JC599SPi2
Brand	Lexibook
Product Dimensions (L x W x H)	24 x 18 x 3.6 cm (9.45 x 7.09 x 1.42 inches)
Weight	686 grams
Recommended Age	4 - 99 years (Manufacturer recommended minimum: 48 months)
Power Source	2 x AA/LR6 batteries (not included)
Main Material	Plastic
Educational Objective	Language proficiency, logical thinking, mathematical concepts
Theme	Super-heroes (Spider-Man)
Color	Blue/Red
Screen Type	Large LCD (6.67 inches)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Lexibook website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Lexibook