

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN HTR-D06A Universal Remote Control for Haier TVs

PERFASCIN HTR-D06A

PERFASCIN HTR-D06A Universal Remote Control Instruction Manual

For Haier TV Models

1. INTRODUCTION

This manual provides instructions for the PERFASCIN HTR-D06A Universal Remote Control. This remote is designed as a replacement for various Haier TV models, offering a straightforward and effective solution for controlling your television. It utilizes infrared technology for reliable communication with your TV.

Compatible Models include (but are not limited to): LT19Z6, LTF22Z6, LTF24Z6, LY19Z6, LYF24Z6, LET32C800HF, LET39C800, LET50C800HF, LE24G610CF, LE29C810CF, TF24Z6, L19C11WL2011W-C, L20C11W, L42M1, LE19C600, LE19Z6, LE22Z6, LE24C600, LE24Z6, LET22T1000HF, LET24T1000HF, LET26T1000HF, LET32D10HF, LET42T1000HF, LET46Z18HF, LEY19T1000HF, LEY22T1000HF, LEY24T1000HF, LEY26T1000HF, LE55B1381, LE29C810C, LET32C500 L, LE22G610CF, LET32T1000HFM, LET39Z18HF, LET42D10HF.

2. SETUP

2.1 Battery Installation

The PERFASCIN HTR-D06A remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open for battery installation.

2.2 Initial Use

This remote control is designed for immediate use with compatible Haier TV models. No programming or pairing is required. Once batteries are installed, point the remote directly at your television and begin operation.

3. OPERATING INSTRUCTIONS

The PERFASCIN HTR-D06A remote control provides standard functions for your Haier TV. Ensure a clear line of sight between the remote's infrared emitter and your TV's infrared receiver for optimal performance. The maximum effective transmission distance is approximately 10 meters (33 feet).



Image: Front view of the remote control, displaying the button layout.

3.1 Key Functions Overview

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Source:** Cycles through input sources (HDMI, AV, etc.).
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Mute:** Silences the TV audio.
- **Channel Up/Down (P+/P-):** Changes channels sequentially.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Menu:** Accesses the TV's main menu.
- **Exit:** Exits current menu or function.
- **Info:** Displays program information.
- **Subtitle:** Toggles subtitles.
- **Guide:** Opens the electronic program guide.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context (e.g., teletext, interactive features).
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next, Record):** Control media playback on compatible devices or TV functions.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your PERFASCIN HTR-D06A remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
 - Make sure you are within the effective operating range (approximately 10 meters).
- **Buttons Not Working:**
 - If only specific buttons are not working, they might be stuck or dirty. Gently clean around the buttons.

- If multiple buttons are unresponsive, try replacing the batteries.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

If these steps do not resolve the issue, please refer to the Support section for further assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	PERFASCIN
Model Number	HTR-D06A
Connectivity Technology	Infrared
Compatible Devices	Television (Various Haier models)
Controller Type	Button Control
Special Features	Ergonomic, No Programming Required
Maximum Range	10 Meters (approx. 33 feet)
Color	Black
Item Weight	1.9 Ounces
Item Dimensions (L x W x H)	5"L x 1"W x 0.5"H
Power Source	2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

PERFASCIN is committed to providing quality products and customer satisfaction. This product comes with a 30-day unlimited return policy.

If you have any questions regarding compatibility, setup, or operation, or if the remote control you received does not work as expected, please contact our customer support. We are available to assist you in finding a suitable solution. For support inquiries, please refer to the contact information provided with your purchase or on the PERFASCIN official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHVMF2S1>

More documents and user manuals: **<https://manuals.plus/>**