

[manuals.plus](#) /› [Princess](#) /› [Princess SlimFry Oil-Free Fryer 182256 User Manual](#)

## Princess 182256

# Princess SlimFry Oil-Free Fryer Instruction Manual

Model: 182256

## 1. INTRODUCTION

Thank you for choosing the Princess SlimFry Oil-Free Fryer, Model 182256. This appliance utilizes advanced hot air circulation technology to prepare a variety of dishes with little to no added oil, promoting healthier cooking. Its compact, space-saving design makes it suitable for any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- The appliance is equipped with a heat-resistant handle and lid to reduce the risk of burns. Always use caution when handling hot components.
- Ensure adequate ventilation around the appliance during use.

## 3. PRODUCT COMPONENTS

The Princess SlimFry Oil-Free Fryer consists of the main unit, a removable frying basket, and a rack. The digital control panel is located on the front of the appliance.



**Figure 3.1:** Overview of the Princess SlimFry Oil-Free Fryer. The image displays the sleek black appliance with its digital display and the frying basket partially extended, filled with golden-brown fries.

# Slank ontwerp met een CAPACITEIT VAN 8 LITER

Neemt weinig ruimte in je keuken in,  
kookt voor maximaal 6 personen



\*Inclusief  
handvat

Figure 3.2: Dimensions of the Princess SlimFry Oil-Free Fryer. This image illustrates the compact dimensions of the appliance: 46.5 cm length (including handle), 26.7 cm width, and 29.4 cm height, highlighting its space-saving design.

## 4. SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove the fryer from its packaging. Remove all packaging materials, stickers, and labels.
- 2. Initial Cleaning:** Wash the frying basket and rack with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the inside and outside of the appliance with a damp cloth.
- 3. Placement:** Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance to allow for proper ventilation.
- 4. Power Connection:** Insert the power plug into a grounded wall outlet. The appliance is now in standby mode.
- 5. First Use (Burn-in):** It is recommended to run the fryer empty for about 10-15 minutes at 180°C (356°F) before cooking food for the first time. This helps to burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.

## 5. OPERATING INSTRUCTIONS

### 5.1 Digital Control Panel

The Princess SlimFry features an intuitive digital control panel for easy operation.



Figure 5.1: Close-up of the digital control panel. The image shows the touch-sensitive display with icons for various preset programs, temperature and timer adjustments, and the power button.

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control (+/-):** Adjusts the cooking temperature (80°C to 200°C).
- **Timer Control (+/-):** Adjusts the cooking time (up to 60 minutes).
- **Preset Program Icons:** Selects one of the 8 pre-programmed settings.
- **Shake Function Icon:** Activates the "Shake" reminder.

### 5.2 Basic Operation

1. Place the food in the frying basket. Do not overfill the basket to ensure even cooking.
2. Slide the frying basket back into the appliance until it clicks into place.
3. Press the Power button to turn on the display.
4. Manually set the desired temperature using the Temperature Control buttons.
5. Manually set the desired cooking time using the Timer Control buttons.
6. Alternatively, select one of the 8 preset programs (see section 5.3).
7. Press the Power button again to start the cooking process.
8. During cooking, you can pull out the basket to shake or check the food. The appliance will pause automatically and resume when the basket is reinserted.
9. When the timer reaches zero, the appliance will beep, indicating cooking is complete.
10. Carefully pull out the basket and empty the food. Use heat-resistant tongs or utensils.

### **5.3 Preset Programs**

The Princess SlimFry offers 8 pre-programmed settings for common dishes. Simply select the appropriate icon on the digital display.

- Fries
- Meat
- Vegetables
- Fish
- Shellfish
- Bread
- Bake
- Keep Warm (unique program to maintain food temperature)

These programs automatically set optimal temperature and time, which can be adjusted manually if desired.

### **5.4 "Shake" Function**

For certain foods, such as fries or smaller items, shaking the basket halfway through the cooking process ensures more even browning and crispiness. Activate the "Shake" function on the control panel, and the appliance will beep to remind you when it's time to shake the basket.



**Figure 5.2:** Examples of food cooked in the Princess SlimFry. This image displays a collage of dishes including chicken wings, fries, bread, and shrimp, illustrating the fryer's versatility and capacity.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Princess SlimFry.

- 1. Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
- 2. Frying Basket and Rack:** The frying basket and rack have a non-stick coating and are dishwasher safe. For manual cleaning, wash them with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Remove any stubborn food residues by soaking them in hot water for about 10 minutes.
- 3. Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild, non-abrasive cleaning agent. Do not use abrasive cleaners or metal scouring pads.
- 4. Exterior:** Clean the exterior of the appliance with a damp cloth.
- 5. Heating Element:** Gently clean the heating element with a cleaning brush to remove any food residues.
- 6. Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a dry place.

## 7. TROUBLESHOOTING

If you encounter issues with your Princess SlimFry, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power plug is securely inserted into a working outlet.
Food is not cooked evenly.	Basket is overfilled; food not shaken.	Do not overfill the basket. Shake the basket halfway through cooking, especially for smaller items.
Food is not crispy.	Temperature too low; cooking time too short; too much moisture.	Increase temperature or cooking time. Pat food dry before cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket and interior thoroughly after each use. This is normal for fatty foods.
Appliance emits an unusual smell during first use.	Manufacturing residues burning off.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

## 8. TECHNICAL SPECIFICATIONS

<b>Brand</b>	Princess
<b>Model Number</b>	182256
<b>Capacity</b>	8 Liters
<b>Power / Wattage</b>	2000 Watts
<b>Voltage</b>	230 Volts
<b>Product Dimensions (L x W x H)</b>	46.5 x 26.7 x 29.4 cm
<b>Item Weight</b>	3.9 Kilograms
<b>Material</b>	Plastic
<b>Special Features</b>	8 pre-programmed settings, Adjustable temperature & timer, "Shake" function, Auto Shutoff

## 9. DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

## Related Documents - 182256

	<p><a href="#"><u>Princess Airfryer with Viewing Window Instruction Manual</u></a></p> <p>User manual and safety instructions for the Princess Airfryer with Viewing Window (Model 01.182240.01.001), providing guidance on operation, cleaning, and maintenance for optimal cooking results.</p>
	<p><a href="#"><u>Princess Digital Family Aerofryer Instruction Manual</u></a></p> <p>User manual for the Princess Digital Family Aerofryer (Model 01.182050.01.001). Contains safety instructions, operating guidelines, program details, and maintenance tips for this household air fryer.</p>
	<p><a href="#"><u>Princess Mini Fryer 01.182612.01.001 Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the Princess Mini Fryer (Model 01.182612.01.001). Learn about safe operation, cleaning, maintenance, and cooking tips for your household deep fryer.</p>
	<p><a href="#"><u>Princess Deep Fryer 01.185000.01.001 User Manual   Safety, Operation, and Maintenance Guide</u></a></p> <p>Comprehensive user manual for the Princess Deep Fryer, model 01.185000.01.001. This guide provides essential safety instructions, detailed operating procedures, frying tips, cleaning and maintenance advice, and environmental information for safe and effective use.</p>
	<p><a href="#"><u>Princess Double Basket Aerofryer Instruction Manual</u></a></p> <p>Comprehensive user manual for the Princess Double Basket Aerofryer (Model 01.182068.01.001). Includes safety guidelines, operating instructions, cleaning procedures, and maintenance tips for this dual-basket air fryer.</p>
	<p><a href="#"><u>Princess Double Basket Aerofryer 01.182074.01.001 Instruction Manual</u></a></p> <p>Comprehensive user guide for the Princess Double Basket Aerofryer (Model 01.182074.01.001), detailing safe operation, cooking functions, cleaning, and maintenance for efficient air frying.</p>