

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Beautiful by Drew Barrymore DS@WM59BLENDDBW

Beautiful PowerExact Blender System User Manual

Model: DS@WM59BLENDDBW

[Important Safety Information](#)

[Components](#)

[Setup](#)

[Operating Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Beautiful PowerExact Blender System. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the blender from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender on a dry, level surface.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not overfill the blender jar or single-serve cup.
- Ensure the lid is securely in place before operating the blender.

COMPONENTS

The Beautiful PowerExact Blender System includes the following components:

- **Motor Base:** The main unit housing the 700-watt motor and touch-activated controls.
- **50oz Tritan BPA-Free Jar:** Large blending jar with pour spout and measurement markings.
- **Jar Lid:** Features a removable 2oz measuring cap.
- **Blade Assembly:** Durable 4-tip stainless steel blade.
- **20oz BPA-Free Single-Serve Cup:** For on-the-go blending.
- **No Drippy Sippy Lid:** Patented lid for the single-serve cup.



Image 1: The Beautiful PowerExact Blender System, showing the motor base, 50oz blending jar with lid, and the 20oz single-serve cup with its lid. All components are in a white icing color with gold accents.

SETUP

Before first use, wash all parts that will come into contact with food. The 50oz jar, 20oz cup, lids, and blade assembly are dishwasher safe. The motor base should only be wiped clean with a damp cloth.

1. **Place the Motor Base:** Position the motor base on a clean, dry, and level surface. Ensure it is near an electrical outlet.
2. **Assemble the Jar/Cup:**
 - a. **For 50oz Jar:** Place the blade assembly onto the motor base. Align the 50oz jar onto the blade assembly and twist clockwise until it locks securely into place.
 - b. **For 20oz Single-Serve Cup:** Place the blade assembly onto the top of the 20oz cup, twisting until secure. Invert the cup and blade assembly, then place it onto the motor base, twisting clockwise until it locks.
3. **Add Ingredients:** Place your desired ingredients into the jar or cup. Do not exceed the maximum fill line.
4. **Secure the Lid:** For the 50oz jar, place the lid securely on top. For the 20oz cup, ensure the blade assembly is tightly secured.
5. **Plug In:** Plug the power cord into a standard electrical outlet. The touch-activated display will illuminate.



Image 2: A hand is shown pressing one of the illuminated touch controls on the blender's motor base. The 50oz jar is filled with various fruits and vegetables, ready for blending.

OPERATING INSTRUCTIONS

The Beautiful PowerExact Blender System features PrecisionSense Technology and a touch-activated display for intuitive operation.

Control Panel Functions:

- **Low Speed:** For lighter ingredients and gentle blending.
- **High Speed:** For tougher ingredients and faster blending.
- **Pulse:** Provides short bursts of power for chopping or quick mixing.
- **Ice Crush:** Pre-set program optimized for crushing ice.
- **Chop:** Pre-set program for chopping ingredients.
- **Milkshake:** Pre-set program for smooth milkshakes.
- **Smoothie/Clean:** Dual-purpose pre-set for making smoothies or for quick cleaning.

Blending Process:

1. Ensure the blender jar or cup is securely attached to the motor base and the lid is in place.
2. Select the desired speed (Low, High) or pre-set function (Ice Crush, Chop, Milkshake, Smoothie/Clean) by touching the corresponding icon on the illuminated display.
3. For manual control, use the "Pulse" button for short bursts.
4. The PrecisionSense Technology will automatically adjust blade speed and power based on the ingredients.
5. Once blending is complete, press the power button or wait for the pre-set program to finish.

6. Unplug the blender from the outlet before removing the jar or cup.

Using the 20oz To-Go Cup:

For on-the-go drinks, blend directly in the 20oz single-serve cup.

1. Add ingredients to the 20oz cup.
2. Screw the blade assembly onto the open end of the cup until secure.
3. Invert the cup and blade assembly, then place it onto the motor base, twisting clockwise to lock.
4. Blend as desired using the control panel.
5. Once blending is complete, remove the cup from the base, unscrew the blade assembly, and replace it with the No Drippy Sippy lid for transport.

CARE & MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

Cleaning:

- **Always unplug the blender before cleaning.**
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse in water or any other liquid.
- **50oz Jar, 20oz Cup, Lids, and Blade Assembly:** These parts are removable and dishwasher safe. For best results, rinse immediately after use.

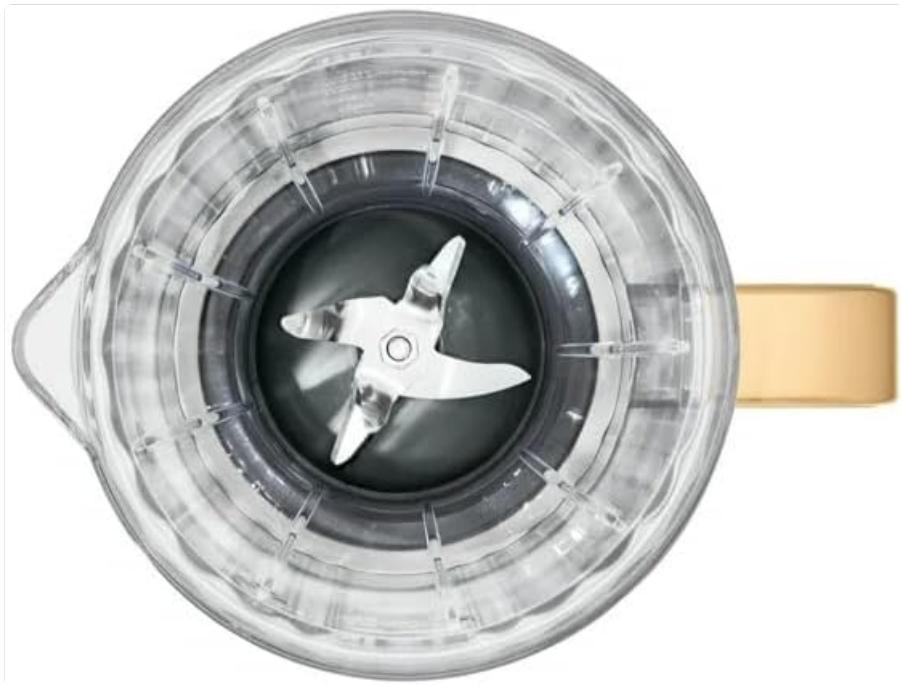


Image 3: A close-up, top-down view of the 4-tip stainless steel blade assembly located at the bottom of the clear blending jar. The blades are sharp and designed for efficient blending.

- **Auto-Clean Function:** For quick cleaning of the jar, add warm water and a drop of dish soap to the 50oz jar, secure the lid, and select the "Smoothie/Clean" pre-set. Run until clean, then rinse thoroughly.

Storage:

Store the blender in a clean, dry place. Ensure all parts are dry before storing. Do not wrap the power cord tightly around the motor base.

TROUBLESHOOTING

If you encounter issues with your Beautiful PowerExact Blender System, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Jar/cup not properly assembled; Overheat protection activated.	Ensure power cord is securely plugged into a working outlet. Verify jar/cup is twisted and locked onto the motor base. Unplug and let the unit cool down for 15-30 minutes if it was recently used heavily.
Ingredients are not blending smoothly.	Too little liquid; Too many ingredients; Ingredients are too large or dense.	Add more liquid. Reduce the amount of ingredients. Cut large or dense ingredients into smaller pieces. Use the Pulse function to break up larger chunks.
Loud noise or burning smell.	Overloaded motor; Foreign object in blades.	Immediately turn off and unplug the blender. Remove some ingredients if overloaded. Check for any foreign objects obstructing the blades. If the smell persists after cooling, contact customer support.
Leakage from the bottom of the jar/cup.	Blade assembly not tightened; Seal damaged.	Ensure the blade assembly is securely tightened onto the jar or cup. Inspect the seal for any damage; if damaged, replacement may be needed.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	DS@WM59BLENDDBW
Power	700 Watts
Main Jar Capacity	50 Fluid Ounces (Tritan BPA-free)
Single-Serve Cup Capacity	20 Fluid Ounces (BPA-free)
Blade Material	Stainless Steel (4-tip)
Controls	Touch-activated display with 3 speeds (Low, High, Pulse) and 4 pre-sets (Ice Crush, Chop, Milkshake, Smoothie/Clean)
Dimensions (approx.)	7"D x 8"W x 15.5"H
Weight (approx.)	6.5 pounds
Color	White Icing

WARRANTY & SUPPORT

The Beautiful PowerExact Blender System comes with a **Limited Warranty**. Please refer to the warranty card

included with your product for specific terms and conditions, including coverage duration and limitations. For technical support, replacement parts, or warranty claims, please contact the manufacturer's customer service. Contact information can typically be found on the product packaging or the manufacturer's official website. *Note: As per the product information, the brand is listed as "Generic". For specific support, please refer to the documentation provided with your purchase or search for "Beautiful by Drew Barrymore" product support online.*

© 2024 Beautiful by Drew Barrymore. All rights reserved.

For more information, visit www.example.com