

Phantomgogo A10

Phantomgogo A10 Foldable Electric Scooter User Manual

Model: A10

1. INTRODUCTION

Thank you for choosing the Phantomgogo A10 Foldable Electric Scooter. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.

The Phantomgogo A10 is designed for adult commuters, featuring a powerful 400W brushless motor, a range of up to 28 miles, and a top speed of 15.5 mph. Its foldable design makes it highly portable, weighing only 38 lbs, and can be folded in just a few seconds. The scooter is equipped with 10-inch solid rubber tires, a safe brake system, and intelligent lighting for enhanced visibility.

2. SAFETY INFORMATION

WARNING: Always wear a helmet and appropriate safety gear when riding. Adhere to local laws and regulations regarding electric scooter use.

- **Pre-Ride Check:** Before each ride, ensure all parts are secure, tires are in good condition, and brakes are functioning correctly.
- **Weight Limit:** Do not exceed the recommended maximum weight of 220 lbs (100 kg). While tested up to 264 lbs, consistent overloading can affect performance and safety.
- **Braking:** The scooter is equipped with a safe brake system, including a mechanical disc brake on the rear wheel. Apply brakes smoothly to avoid skidding.
- **Visibility:** Ride safely at night with the assistance of side reflectors and a flashing brake backlight. Consider additional lighting for increased visibility.
- **Terrain:** Ride on smooth, dry surfaces. Avoid riding in heavy rain, snow, or on slippery surfaces. The scooter can climb inclines up to 11 degrees.
- **Age Recommendation:** This scooter is designed for adult use.
- **Awareness:** Be aware of your surroundings, pedestrians, and other vehicles. Maintain a safe distance from

obstacles.

3. PACKAGE CONTENTS

Please check the contents of your package carefully. If any items are missing or damaged, contact Phantomgogo customer support.

- Phantomgogo A10 Electric Scooter
- Charger
- User Manual (this document)
- Assembly Tools (if required)

4. SETUP

4.1 Unfolding the Scooter

The Phantomgogo A10 features a 2-step folding mechanism for quick setup.

1. Place the scooter on a flat surface.
2. Locate the folding latch near the base of the handlebar stem.
3. Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure the locking mechanism is fully engaged.



Figure 4.1: The Phantomgogo A10 scooter is designed for easy folding and carrying, weighing only 38 lbs.



Figure 4.2: The scooter features a quick 3-second easy folding system for convenient storage and transport.

4.2 Initial Charging

Before first use, fully charge the scooter's battery.

1. Locate the charging port on the scooter.
2. Connect the charger to the scooter's charging port, then plug the charger into a power outlet.
3. The charging indicator on the charger will change (e.g., from red to green) when charging is complete. A full charge takes approximately 5.5 hours.
4. Disconnect the charger once charging is complete.

5. OPERATING INSTRUCTIONS

5.1 Controls Overview



Figure 5.1: Overview of the Phantomgogo A10 handlebar controls.

- **Power ON/OFF:** Press and hold the power button on the display to turn the scooter on or off.
- **Speed Mode (Gear Mode L/M/H):** Double-click the power button to switch between the three speed modes (Low, Medium, High). The display will show the current mode.
- **Power Throttle:** Use the thumb throttle to accelerate.
- **Power Brake:** Squeeze the brake lever on the handlebar to activate the mechanical disc brake.
- **Ring Bell:** Use the bell to alert pedestrians or other riders.
- **Battery Indicator:** The control panel displays 4 LED bars at the bottom, indicating battery life.

5.2 Riding the Scooter

1. Turn on the scooter by pressing and holding the power button.
2. Place one foot on the deck and push off with the other foot to gain some initial momentum.
3. Once moving, gently press the power throttle to engage the motor.
4. To slow down or stop, release the throttle and gently squeeze the brake lever.
5. For optimal comfort and safety, the scooter features 10-inch solid rubber tires and a dual brake system.



10 INCH SOLID TIRE

The electric scooter front and rear wheel equipped with 10-inch solid tires and front dual break system provide max comfort, even on rough surfaces

Figure 5.2: The scooter features 10-inch solid tires for a comfortable ride on various surfaces.



ATMOSPHERE LIGHT

With bright atmosphere LED light, you can ride with safety at night.

Figure 5.3: The bright atmosphere LED light enhances safety during night rides.



Figure 5.4: The powerful hub motor ensures maximum performance and durability.

Weight Limited
220 Lbs

Charge Time
5.5 Hr

Max Speed
15 Mph

Max Range
28 Mile

Climbing Angle
15 Degree

KEY FEATURES

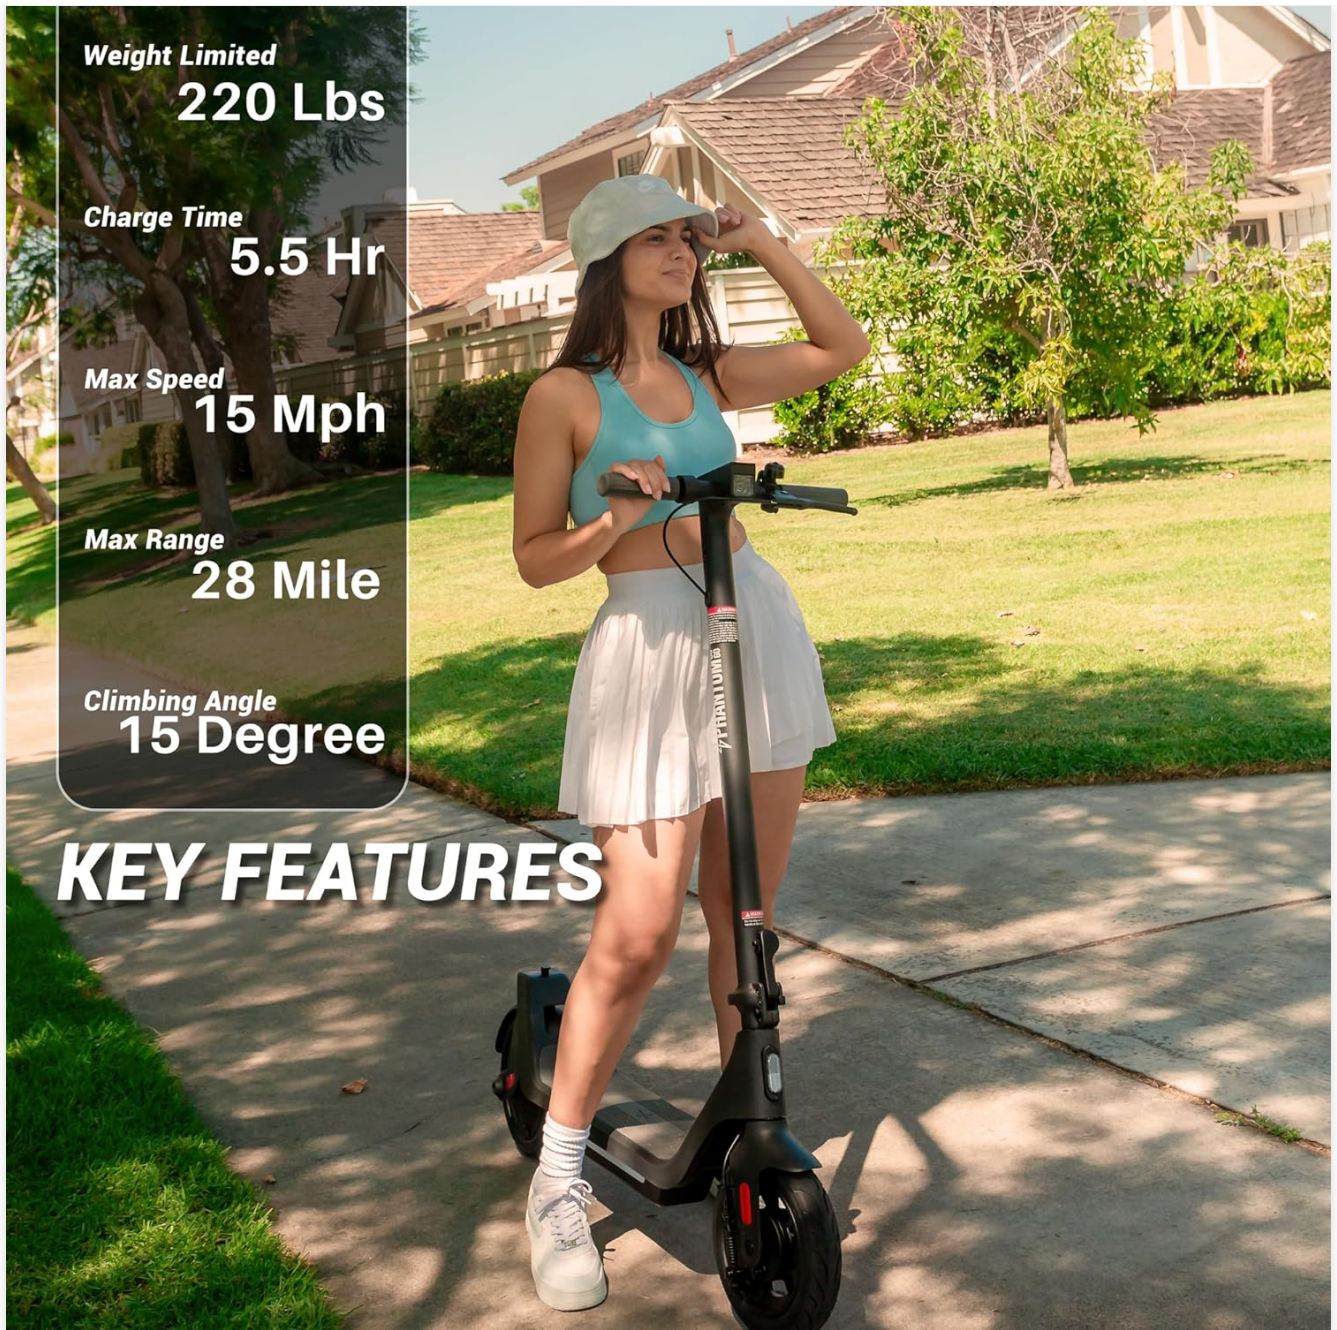


Figure 5.5: Key performance features of the Phantomgogo A10 scooter.

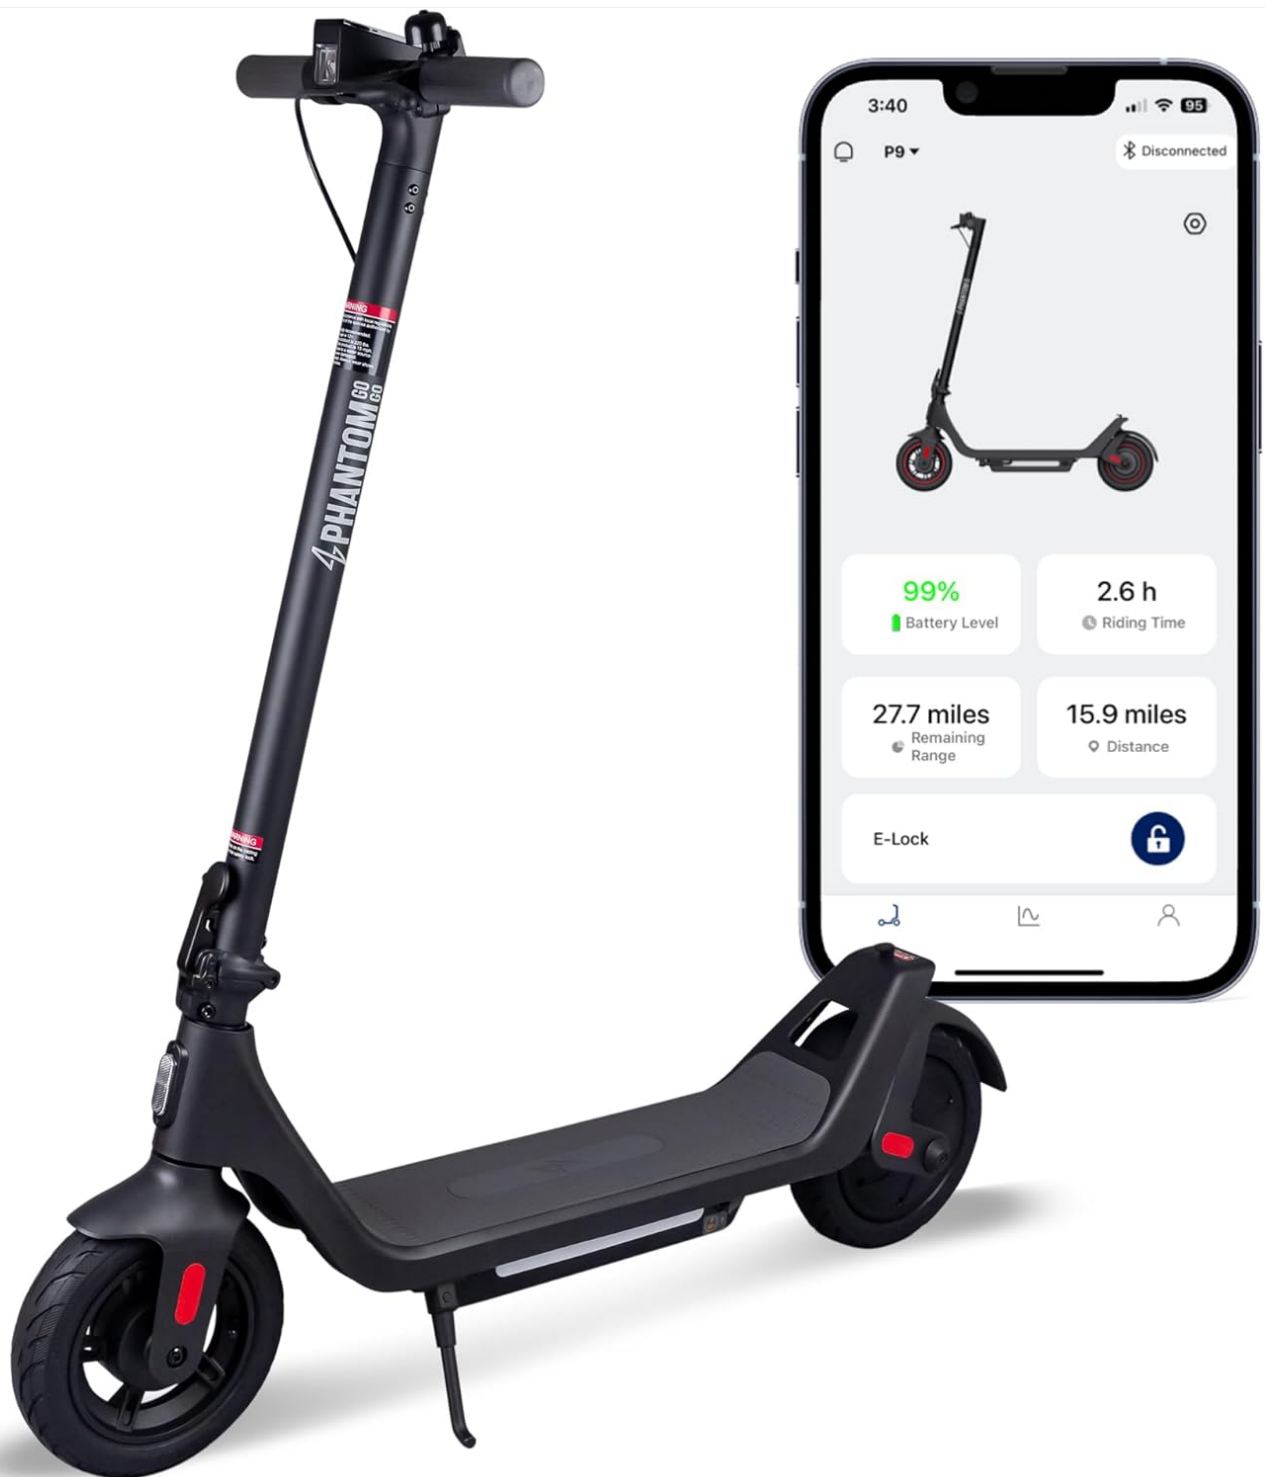


Figure 5.6: The Phantomgogo A10 can be controlled via a smart app, providing real-time data like battery level and range.

Your browser does not support the video tag.

Video 5.1: An official video demonstrating the features and smooth operation of the Phantomgogo A10 Electric Scooter, including its folding mechanism, speed, motor, and range.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water jets or immerse the scooter in

water.

- **Tire Condition:** Periodically inspect the 10-inch solid rubber tires for any signs of wear, cuts, or embedded debris.
- **Brakes:** Periodically check the brake system for wear and proper function. Adjust if necessary.
- **Battery Care:**
 - Charge the battery fully before long-term storage.
 - Recharge the battery every 30-60 days if not in use to prevent deep discharge.
 - Avoid completely draining the battery before recharging.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Scooter does not turn on	Low battery; Power button not pressed correctly	Charge the battery; Press and hold the power button firmly.
Scooter not reaching max speed	Low battery; Incorrect speed mode; Overload; Uphill riding	Charge battery; Switch to High speed mode; Reduce load; Speed may naturally decrease on inclines.
Error Code E6 displayed	Motor or controller issue	Turn off the scooter, wait a few minutes, then restart. If the error persists, contact customer support.
Shortened range	Frequent uphill riding; Aggressive acceleration/braking; Cold weather	Adjust riding style; Battery performance can be affected by temperature.

8. SPECIFICATIONS

Feature	Detail
Brand	Phantomgogo
Model Name	A10
Color	Black
Motor Power	400W Brushless Motor
Max Speed	15.5 Mph
Max Range	28 Miles
Charging Time	Approx. 5.5 Hours

Feature	Detail
Weight Limit	220 Pounds (100 kg)
Scooter Weight	38 lbs
Wheel Size	10 Inches
Wheel Material	Rubber (Solid Tires)
Frame Material	Aluminum Alloy Steel
Brake Style	Rear Braking (Mechanical Disc Brake)
Climbing Angle	Up to 11 degrees
Special Feature	Foldable, Intelligent Light
Manufacturer	Shenzhen Leqi Intelligent Technology Co Ltd
UPC	850065260501

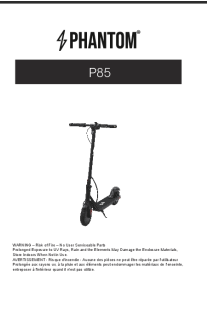

9. WARRANTY AND SUPPORT

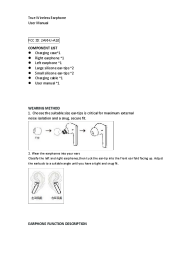

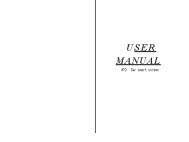

The Phantomgogo A10 Electric Scooter comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your scooter, please contact Phantomgogo customer service. You can typically find contact information on the official Phantomgogo website or through your purchase platform.

Manufacturer: Shenzhen Leqi Intelligent Technology Co Ltd

Related Documents - A10

	<p>Phantomgogo P85 Electric Scooter User Manual and Safety Guide</p> <p>Comprehensive user manual for the Phantomgogo P85 electric scooter, covering operation, safety precautions, charging, maintenance, troubleshooting, and app usage.</p>
	<p>Phantom R1 PRO Electric Scooter Riding Guide</p> <p>A comprehensive riding guide for the Phantom R1 PRO electric scooter, covering specifications, setup, assembly, charging, safety, maintenance, and warranty.</p>

	<p>A10 True Wireless Earphone User Manual</p> <p>User manual for the A10 True Wireless Earphone, including component list, wearing method, function description, charging case usage, LED indicators, pairing instructions, specifications, and safety rules.</p>
	<p>A10 Wireless Guitar System Instruction Manual</p> <p>Comprehensive instruction manual for the A10 Wireless Guitar System, detailing setup, operation, features, specifications, and FCC compliance for wireless audio transmission.</p>
	<p>A10 Car Smart Screen User Manual</p> <p>Comprehensive user manual for the A10 Car Smart Screen, detailing installation, connection methods, features like Apple CarPlay and Android Auto, troubleshooting tips, product specifications, and optional dashcam/reverse camera functions.</p>
	<p>Phantom A10 Electric Scooter User Manual - Assembly, Operation, Safety, Maintenance</p> <p>Official user manual for the Phantom A10 electric scooter. Find detailed information on product features, specifications, assembly, how to ride, safety precautions, battery maintenance, cleaning, and troubleshooting fault codes.</p>