

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CAMKORY](#) /

› [Camkory Digital Camera Instruction Manual - Model DC403](#)

## CAMKORY DC403

# Camkory Digital Camera Instruction Manual

Model: DC403

Brand: CAMKORY

## 1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Camkory Digital Camera Model DC403. Please read it thoroughly before using the camera and retain it for future reference.



Figure 1: Front view of the Camkory Digital Camera Model DC403.

## 2. WHAT'S IN THE BOX

Your Camkory Digital Camera package includes the following items:

- Camkory Digital Camera Body
- 32GB Memory Card
- Lanyard
- Storage Bag
- 2 x Rechargeable Batteries

- USB Type-C Cable
- Power Adapter
- Instruction Manual

**Smaller**  
**Stronger**  
**Portable**



Figure 2: All items included in the Camkory Digital Camera package.

### 3. PRODUCT OVERVIEW

The Camkory DC403 is a compact digital camera designed for ease of use, capturing FHD 1080P videos and 44MP photos. It features a 16X digital zoom, anti-shake technology, and various creative

filter effects.

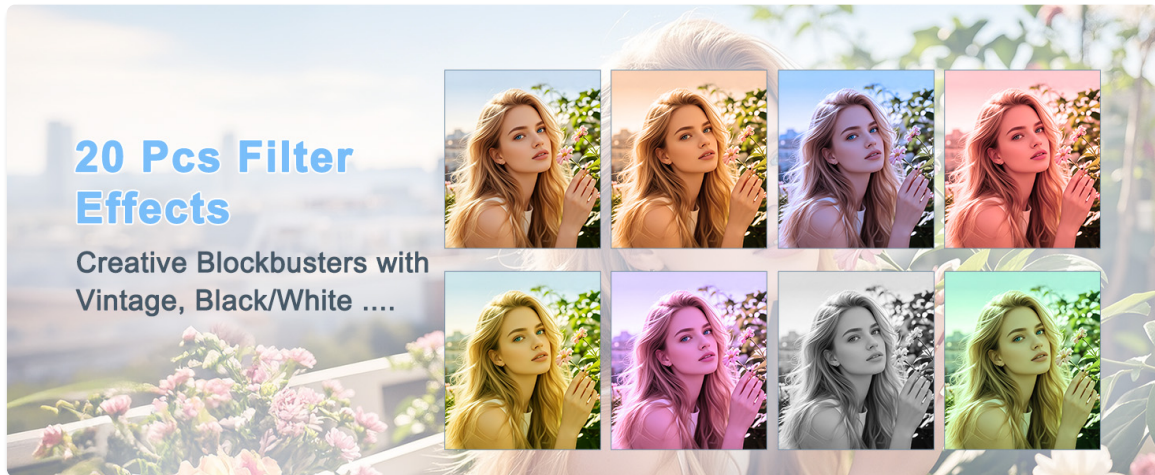


Figure 3: The compact and portable design of the camera.

### Key Features:

- **FHD 1080P Video & 44MP Photos:** Captures high-resolution media with a CMOS metering system for natural colors.
- **16X Digital Zoom:** Allows for clear photography of distant objects.
- **Anti-Shake Function:** Reduces blur in photos and videos.
- **User-Friendly Interface:** Ergonomic design with easy-to-access buttons and a simple menu.
- **Creative Filters:** 20 unique filter effects including Vintage, Black/White, and more.
- **Self-Timer & Continuous Shooting:** Options for various shooting scenarios.
- **Webcam Functionality:** Can be used as a webcam when connected to a computer.
- **Dual Batteries:** Two large-capacity batteries for extended use.

## 4. SETUP

### 4.1 Battery and SD Card Installation

1. Locate the battery/card compartment on the bottom of the camera.
2. Slide the compartment door open.
3. Insert the rechargeable battery into the slot, ensuring correct orientation as indicated inside the compartment.
4. Insert the 32GB SD card into its designated slot until it clicks into place.
5. Close the compartment door securely.



Figure 4: Inserting the battery and SD card.

#### 4.2 Formatting the Memory Card

It is recommended to format the memory card the first time you use it with the camera to ensure optimal performance and compatibility.

1. Turn on the camera.
2. Press the 'MENU' button.
3. Navigate to the 'Setup' menu (usually indicated by a gear icon).
4. Select 'Format' and confirm your choice. This will erase all data on the card.

#### 4.3 Initial Charge

Ensure both batteries are fully charged before first use. Connect the camera to the power adapter

using the provided USB Type-C cable.

Video 1: Unboxing and initial setup of the camera, including battery and SD card installation.

## 5. OPERATING INSTRUCTIONS

### 5.1 Taking Photos

1. Turn on the camera by pressing the power button.
2. Frame your shot using the LCD display.
3. Press the shutter button halfway down to focus, then press fully to capture the photo.



Figure 5: Capturing high-quality photos with the camera.

### 5.2 Recording Videos

1. Turn on the camera.
2. Press the 'MODE' button to switch to video recording mode (usually indicated by a video camera icon).
3. Press the shutter button to start recording. Press again to stop.

### 5.3 Zoom Function

Use the 'W' (Wide) and 'T' (Telephoto) buttons on the camera to adjust the 16X digital zoom.

### 5.4 Anti-Shake

The camera features an anti-shake function to minimize blur. This setting can typically be toggled On/Off in the camera's menu.

### 5.5 Creative Filters and Effects

Explore 20 creative filter effects by navigating through the camera's menu. Options include Vintage, Black/White, and various color tones.



Figure 6: Applying creative filters to photos.

## 5.6 Self-Timer and Continuous Shooting

Access self-timer options (2s, 5s, 10s) and continuous shooting mode via the camera's menu for versatile photo capture.



Figure 7: Using self-timer, continuous shooting, and anti-shake.

## 5.7 LED Fill Light

The camera includes an LED fill light to improve illumination in low-light conditions. Activate it through the camera settings to avoid blurry or grainy night shots.



Figure 8: Utilizing the LED fill light for improved low-light photography.

## 6. CONNECTING TO OTHER DEVICES

### 6.1 Transferring Photos to a Computer

1. Connect the camera to your computer using the provided USB Type-C cable.
2. The camera screen will display a connection icon.
3. Your computer should recognize the camera as a removable drive.
4. Access the camera's storage to transfer your photos and videos.



Figure 9: Steps to download photos to a computer.

### 6.2 Transferring Photos to a Phone

To transfer photos to your phone, remove the 32GB micro SD card from the camera and insert it into a compatible card reader (not included). Connect the card reader to your phone to access and share your media.



Figure 10: Transferring photos to a phone using an external card reader.

### 6.3 Webcam Functionality

The camera can function as a webcam. Connect it to your computer via the USB Type-C cable and select 'PC Camera' mode on the camera's screen when prompted.

Video 2: Demonstration of the camera's features and compact design.

## 7. MAINTENANCE

- Keep the camera clean using a soft, dry cloth. Avoid abrasive cleaners.
- Store the camera in its protective bag when not in use to prevent scratches and dust accumulation.
- Avoid exposing the camera to extreme temperatures, moisture, or direct sunlight for prolonged periods.
- Ensure the battery is inserted in the correct direction.

## 8. TROUBLESHOOTING

### 8.1 Camera Not Turning On

- Check if the battery is correctly inserted and fully charged.
- Ensure the battery compartment door is securely closed.

### 8.2 Blurry or Grainy Images/Videos

- Ensure the LED fill light is activated in low-light conditions.
- Check if the anti-shake function is enabled.
- Clean the camera lens with a soft, lint-free cloth.

### 8.3 Cannot Transfer Files to Computer

- Verify the USB cable is securely connected to both the camera and the computer.
- Ensure the camera is powered on and in the correct connection mode (e.g., 'MSDC' for media transfer).
- Try a different USB port on your computer.

## 9. SPECIFICATIONS

Feature	Specification
Model Name	DC403 (US-DC403L-S)
Video Resolution	FHD 1080P
Photo Resolution	44MP
Optical Zoom	16x
Image Stabilization	Digital
Photo Sensor Technology	CMOS

Supported File Format	AVI
Item Weight	4.2 ounces
Package Dimensions	4.53 x 3.5 x 3.23 inches
Batteries	2 Nonstandard Battery batteries required (included)

## 10. WARRANTY AND SUPPORT

The Camkory Digital Camera Model DC403 is backed by a one-year hassle-free promise, including refund and replacement options. For any support inquiries or warranty claims, please contact Camkory customer service.