

[Manuals.plus](#) /

> [AOKESI](#) /

> AOKESI Toddler Basketball Hoop Indoor/Outdoor Instruction Manual - Model 885a

AOKESI 885a

AOKESI Toddler Basketball Hoop Instruction Manual

Model: 885a

PRODUCT OVERVIEW

The AOKESI Toddler Basketball Hoop is designed for young children aged 1-5, offering adjustable height and versatile indoor/outdoor play. It promotes motor skills and hand-eye coordination.

Kids Basketball Hoop indoor



Easy to Assemble

Multiplaye Game

Fitness Exercise

Image: The AOKESI Toddler Basketball Hoop in use, showing two young children interacting with it. The hoop features a white backboard with a red rim and a blue adjustable stand, set on a black base.

INCLUDED COMPONENTS

The package includes all necessary parts for assembly and immediate play:

- 1x Basketball Hoop (Backboard, Rim, Net)
- 1x Adjustable Pole
- 1x Base
- 3x Inflatable Mini Soft Basketballs
- 1x Ball Pump
- Screws for assembly



Image: A detailed view of the basketball hoop's components, highlighting the sturdy backboard, nylon net, three mini basketballs with a pump, and the base with a hole for filling with water or sand.

SETUP INSTRUCTIONS

Follow these steps to assemble your AOKESI Toddler Basketball Hoop:

1. **Connect the Base and the Pole:** Insert the bottom part of the main pole into the designated slot on the base.
2. **Add Water or Sand to Increase Weight:** Locate the fill hole on the base. Open the cap and fill the base with water or sand to enhance stability. Securely close the cap.
3. **Connect the Poles and Adjust the Height:** Connect the upper pole section to the lower pole. Use the adjustable buckle to select one of the 5 available height settings (from 29.5 to 41.3 inches) to suit your child's height.
4. **Put on the Frame:** Attach the backboard frame to the top of the adjustable pole.
5. **Screw the Back of the Board:** Secure the backboard to the frame using the provided screws.

- 6. Install the Net on the Hoop:** Attach the net to the red rim of the basketball hoop. The net is detachable and washable for easy maintenance.
- 7. Inflate Basketballs:** Use the included pump to inflate the three mini basketballs to the desired firmness.



Image: A visual guide illustrating the six assembly steps for the basketball hoop, from connecting the base and pole to installing the net.

OPERATING INSTRUCTIONS

Adjusting Height

The basketball hoop features 5 adjustable height settings, ranging from 29.5 inches to 41.3 inches. To adjust the height, simply unlock the buckle on the pole, slide the upper section to the desired height slot, and re-lock the buckle to secure it.



Image: A diagram illustrating the adjustable height feature of the basketball hoop, showing three different height configurations with measurements.

Indoor and Outdoor Use

This basketball hoop is designed for both indoor and outdoor environments. Its sturdy and water-resistant construction allows for versatile play. For outdoor use, especially in windy conditions or during active play, ensure the base is filled with water or sand for maximum stability.



Image: A composite image showing children enjoying the basketball hoop in both an indoor living room setting and an outdoor park setting, demonstrating its versatility.

Ensuring Stability

To prevent tipping during play, especially with active toddlers, it is crucial to fill the base with water or sand. The base is designed with a secure cap for this purpose.

STABLE AND SAFE BASKETBALL HOOP



Image: A young boy playing with the basketball hoop, with an inset showing how to fill the base with sand or water to ensure stability.

MAINTENANCE

- **Cleaning:** The net is detachable and washable. For other plastic parts, wipe clean with a damp cloth and mild soap. Avoid harsh chemicals.
- **Storage:** When not in use, especially outdoors during harsh weather, it is recommended to store the hoop indoors to prolong its lifespan. Ensure the base is emptied if storing in freezing temperatures.
- **Inspection:** Periodically check all connections and screws to ensure they are tight and secure. Inspect the balls for any punctures or damage.

TROUBLESHOOTING

This section addresses common issues you might encounter:

- **Hoop is unstable:** Ensure the base is adequately filled with water or sand. Check that all pole connections are securely fastened.
- **Balls not inflating:** Verify that the needle of the pump is fully inserted into the ball's valve and that the pump is functioning correctly.
- **Difficulty adjusting height:** Ensure the locking buckle is fully disengaged before attempting to slide the pole sections. Do not force the adjustment.

SPECIFICATIONS

Feature	Detail
Brand	AOKESI
Model Name	988-885A
Item Model Number	885a
Material	ABS Plastic
Color	Blue
Minimum Height	29.5 Inches
Maximum Height Recommendation	41.3 Inches
Indoor/Outdoor Usage	Indoor, Outdoor
Mounting Type	Floor Mount
Recommended Age	3 years and up (Adjustable for 1-5 years old)
Item Weight	15.9 ounces (approx. 450 Grams)
Product Dimensions	16 x 10.1 x 2.1 inches

SAFETY INFORMATION

WARNING: Not for children under 3 years old.

Always supervise children during play. Ensure the base is stable and filled with water or sand to prevent tipping. Regularly check for any loose parts or damage that could pose a hazard.

OFFICIAL PRODUCT VIDEOS

No official seller videos are available for this product.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact AOKESI customer service directly through their official website or the retailer where the product was purchased.

© 2026 AOKESI. All rights reserved.