

[Manuals.plus](#) /

› [Kenkor](#) /

› Kenkor Active Stylus Pen Stylus 01 Instruction Manual

Kenkor Stylus 01

Kenkor Active Stylus Pen Instruction Manual

Model: Stylus 01

1. INTRODUCTION

Thank you for choosing the Kenkor Active Stylus Pen. This manual provides detailed instructions for the proper use, setup, and maintenance of your stylus. This active stylus is designed to enhance your interaction with various touch screen devices, offering precision for drawing, writing, and navigation.

2. PRODUCT OVERVIEW

2.1 Components

Detailed Display

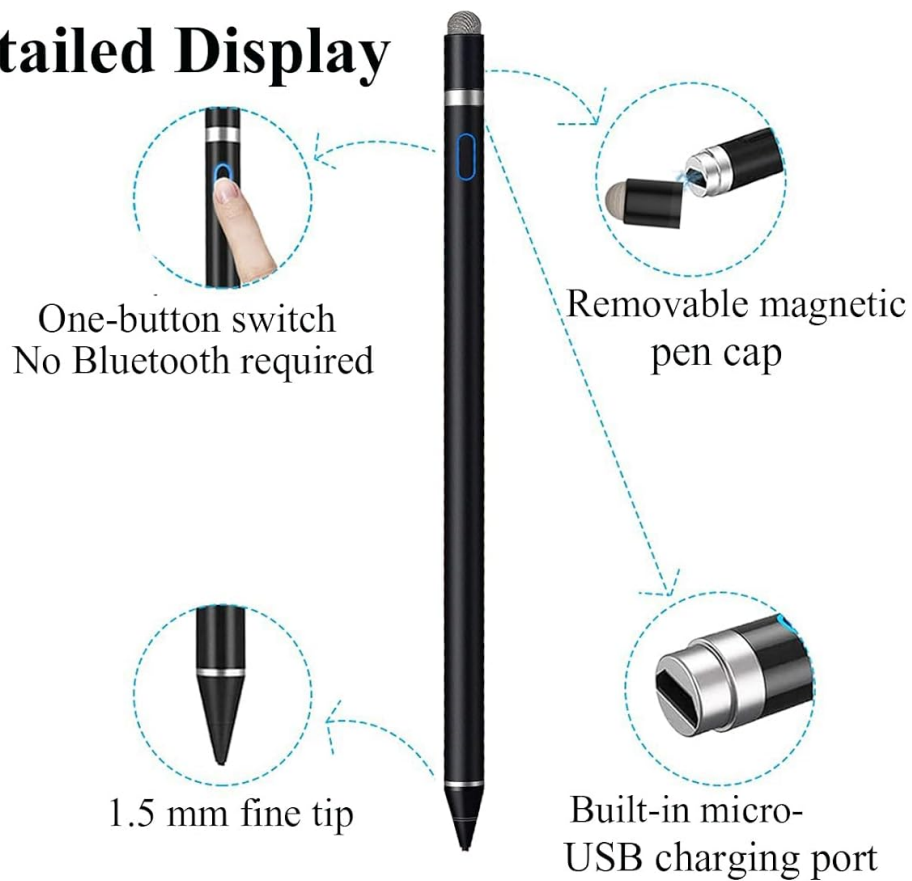


Figure 1: Detailed view of the Kenkor Active Stylus Pen components.

- **1.5 mm Fine Copper Tip:** Provides high precision for detailed tasks like writing small characters and fine drawing.
- **Magnetic Mesh Tip:** Located at the opposite end, this tip can be used as a backup when the stylus battery is depleted.
- **One-Button Switch:** For easy power on/off. No Bluetooth pairing required.
- **Built-in Micro-USB Charging Port:** For convenient recharging of the internal battery.
- **Removable Magnetic Pen Cap:** Protects the mesh tip.

2.2 Key Features

- Dual-tip design for versatility.
- Rechargeable battery with long usage time.
- Simple one-button operation.
- Smooth and precise writing/drawing experience.

3. COMPATIBILITY

Widely Compatible



14.7cm/5.78inch



Figure 2: The Kenkor Stylus Pen is widely compatible with many touch screen devices.

The Kenkor Active Stylus Pen is designed for broad compatibility with most capacitive touch screen devices. This includes:

- **Apple Devices:** iPhone (XS/MAX/XR/X/11/12/13/14/15/16, note poor compatibility on iPhone 12 Pro Max), iPad Air, iPad 2/3/4, iPad Pro, iPad Mini/2/3/4.
- **Android Devices:** Samsung, Galaxy, Huawei, and other Android phones and tablets.
- **Other Devices:** Nintendo Switch.

Important Compatibility Notes:

- Not compatible with Chromebook.
- Not compatible with Lenovo devices.
- Not compatible with Windows (Microsoft) devices.
- Not compatible with Samsung tablet/phone models that use the S-Pen.
- The pen does **not** have Bluetooth functionality.
- The pen does **not** support Palm Rejection.
- The pen does **not** have pressure sensitivity.

4. SETUP

The Kenkor Active Stylus Pen is designed for simple, immediate use.

1. **Charge the Stylus:** Before first use, ensure the stylus is fully charged (refer to Section 5: Charging).
2. **Power On:** Press the power button once. A blue indicator light will illuminate, indicating the stylus is active.
3. **Begin Use:** You can now use the stylus directly on your touch screen device for writing, drawing, or navigation.

4.1 Special Note for Apple iPad/iPad Pro Users



Figure 3: Important settings adjustment for Apple iPad/iPad Pro users.

If your iPad or iPad Pro was previously used with an Apple Pencil via Bluetooth connection, the Kenkor Stylus Pen may not function correctly until the following settings are adjusted:

1. Go to **Settings > Apple Pencil > Turn off Apple Pencil.**
2. Go to **Settings > Notes > Turn off Only Draw with Apple Pencil.**

After performing these steps, your Kenkor Active Stylus Pen will be ready for use.

5. CHARGING



Figure 4: The Kenkor Stylus Pen offers extended usage on a single charge.

The stylus features a built-in rechargeable battery.

- **Charging Time:** Approximately 1 to 1.5 hours for a full charge.
- **Usage Time:** Up to 10 hours of continuous use on a full charge.
- **Charging Method:** Use the provided Micro USB cable to connect the stylus to a USB power source (e.g., computer, wall adapter).
- **Battery Protection:** The stylus automatically turns off after 5 minutes of inactivity to conserve battery life.

6. OPERATION

Sensitive and Precise

Smooth writing and drawing. Offers you a similar experience to a real pencil on paper



Figure 5: Experience smooth and precise interaction with your device.

- **Power On/Off:** Press the button once to turn on (blue light) or turn off the stylus.
- **Using the Copper Tip:** For fine details, writing, and precise drawing, use the 1.5 mm copper tip.
- **Using the Mesh Tip:** If the battery runs out, or for general navigation, the magnetic mesh tip can be used without power.
- **Smooth Interaction:** The stylus offers a responsive and smooth experience, similar to a traditional pen on paper, with no noticeable lag.

6.1 Palm Rejection

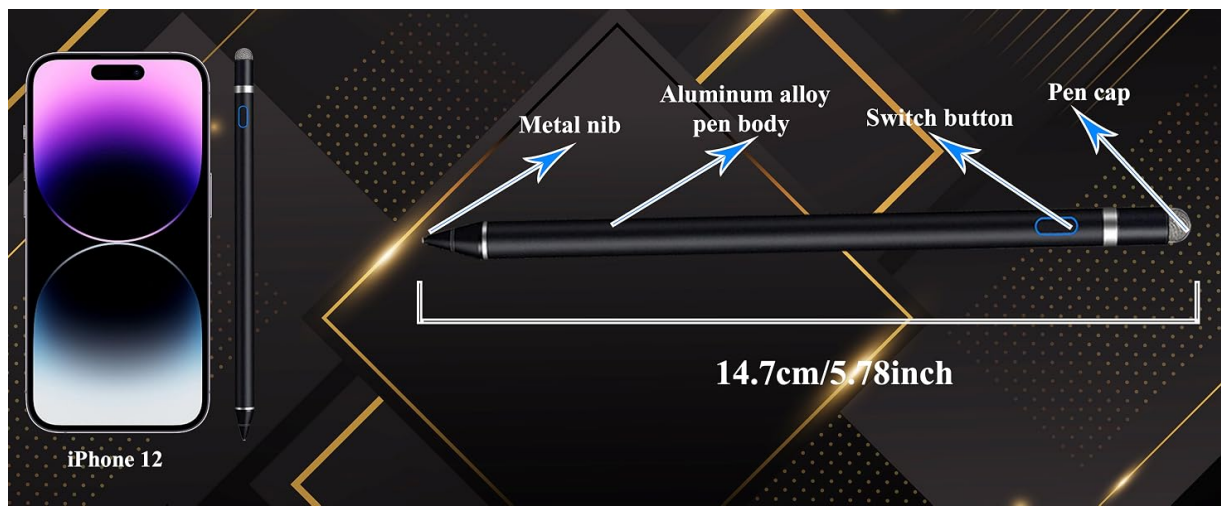


Figure 6: The stylus does not feature palm rejection technology.

Please note that this stylus does **not** support palm rejection. When using the stylus, avoid resting your palm directly on the screen to prevent unintended input.

7. MAINTENANCE

Proper care will extend the life and performance of your stylus.

- **Cleaning:** Wipe the stylus body and tips with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures.
- **Tip Protection:** Always use the magnetic pen cap to protect the mesh tip when not in use. Ensure the copper tip is not subjected to excessive force or impact.
- **Charging Port:** Keep the Micro USB charging port free from dust and debris.

8. TROUBLESHOOTING

8.1 Stylus Not Responding

- **Check Power:** Ensure the stylus is turned on and the blue indicator light is illuminated.
- **Charge Battery:** If the stylus is not turning on or responding, the battery may be depleted. Charge the stylus for 1-1.5 hours.
- **Apple Device Settings:** If using an iPad or iPad Pro, verify that Apple Pencil settings are disabled as described in Section 4.1.
- **Device Compatibility:** Confirm your device is compatible with the Kenkor Active Stylus Pen (refer to Section 3: Compatibility).
- **Screen Condition:** Ensure your device's screen is clean and free of damage.

8.2 Inaccurate or Intermittent Input

- **Tip Condition:** Inspect the copper tip for any damage or wear. A damaged tip may affect accuracy.
- **Screen Protector:** Some thick or poorly applied screen protectors may interfere with stylus performance.
- **Palm Contact:** As the stylus does not support palm rejection, ensure your palm is not touching the screen during use.

8.3 Stylus Not Charging

- **Cable Check:** Ensure the Micro USB cable is securely connected to both the stylus and the power source. Try a different Micro USB cable if available.

- **Power Source:** Try a different USB power source (e.g., another USB port on a computer, a different wall adapter).
- **Charging Port:** Check the stylus's charging port for any obstructions or damage.

9. SPECIFICATIONS

Feature	Specification
Brand	Kenkor
Model Number	Stylus 01
Material	Aluminum
Item Diameter	1.45 millimeters (Copper Tip)
Battery Type	1 Lithium Ion battery (included)
Charging Time	1 - 1.5 hours
Battery Life (Standby)	10 hours (usage)
Compatible Devices	Android, Switch, Tablet, iPad, iPhone (Capacitive Touch Screens)
Minimum OS Required	Android 1.0

10. WARRANTY AND SUPPORT

Kenkor stands behind the quality of its products.

- **Warranty:** This product comes with a 1-year warranty against manufacturing defects.
- **Returns:** Enjoy a 30-day free return policy.
- **Replacement/Refund:** A 12-month replacement or refund is available for manufacturer defective items.

For further assistance or to contact customer support, please visit the official Kenkor store or refer to your purchase documentation.

Kenkor Store: [Visit the Kenkor Store on Amazon](#)