

6.5L Smart LCD Fully Automatic Air Fryer

6.5L Smart LCD Fully Automatic Air Fryer User Manual

Model: 6.5L Smart LCD Fully Automatic Air Fryer (ASIN: B0DHX5DRT2)

1. INTRODUCTION

Thank you for purchasing the 6.5L Smart LCD Fully Automatic Air Fryer. This appliance is designed to provide a healthier and more convenient way to cook your favorite meals with less oil. Please read this manual thoroughly before operation to ensure safe and efficient use.



Figure 1.1: The 6.5L Smart LCD Fully Automatic Air Fryer, featuring a sleek blue design with gold accents and a clear digital touch control panel.

Package Contents:

- 6.5L Smart LCD Fully Automatic Air Fryer Unit
- Removable Non-stick Basket
- User Manual

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure the air fryer is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
15. The appliance features an automatic power-off memory function when the basket is removed during operation.

3. SETUP AND FIRST USE

Unpacking:

- Remove all packaging materials, stickers, and labels from the appliance.
- Clean the basket and pan thoroughly with hot water, dish soap, and a non-abrasive sponge.
- Wipe the inside and outside of the appliance with a damp cloth.

Placement:

- Place the air fryer on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.
- Do not place anything on top of the appliance.

Pre-heating (Optional but Recommended):

- Plug the air fryer into a grounded wall outlet.
- Set the temperature to 180°C (350°F) and time to 5 minutes.
- Allow the appliance to run for 5 minutes to burn off any manufacturing residue. A slight odor may be present, which is normal.

4. OPERATING INSTRUCTIONS

Control Panel Overview:



Figure 4.1: Key components of the air fryer, including the intuitive touch control panel (03), the ergonomic handle (01), efficient rear ventilation (02), and the easy-to-clean removable basket (04).

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Up/Down arrows to adjust temperature.
- **Time Control:** Up/Down arrows to adjust cooking time.
- **Menu/Preset Button:** Cycles through various preset cooking programs.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.

General Operation:

1. Place the food into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. Slide the basket back into the air fryer until it clicks into place.
3. Press the Power button to turn on the display.
4. Select a preset program using the Menu button, or manually set the desired temperature and time using the

respective Up/Down arrows.

5. Press the Start/Pause button to begin cooking.
6. During cooking, you can pull out the basket to shake or turn the food. The air fryer will automatically pause and resume cooking once the basket is reinserted.
7. Once the cooking time is complete, the air fryer will beep and automatically shut off.
8. Carefully remove the basket and empty the cooked food onto a plate.

Figure 4.2: The air fryer's automatic power-off memory function, which pauses operation when the basket is removed and resumes when reinserted.

Figure 4.3: User-friendly touch controls allow for easy adjustment of temperature and time settings.

5. CLEANING AND MAINTENANCE

Clean the air fryer after every use. The basket and pan have a non-stick coating. Do not use abrasive cleaning materials or metal utensils to clean them, as this may damage the non-stick coating.

Cleaning Steps:

1. Unplug the air fryer from the wall outlet and allow it to cool down completely.
2. Remove the basket and pan. Wash them in hot water with dish soap and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
4. Clean the heating element inside the air fryer with a cleaning brush to remove any food residue.
5. Ensure all parts are completely dry before storing or using again.

Storage:

Store the air fryer in a cool, dry place. Ensure all parts are clean and dry before storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power plug is securely inserted into a grounded wall outlet.
Food is not cooked evenly.	Basket is overfilled.	Reduce the amount of food in the basket. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use or fatty food.	Clean the basket and pan thoroughly. For fatty foods, drain excess oil from the pan.
Appliance emits a burning smell.	Food residue on the heating element.	Unplug and allow to cool. Clean the heating element.
Basket does not slide into the appliance properly.	Basket is not positioned correctly.	Ensure the basket is fully inserted and aligned with the grooves.

7. SPECIFICATIONS

Figure 7.1: The spacious 6.5L capacity basket, designed to accommodate meals for families or gatherings.

Feature	Detail
Model	6.5L Smart LCD Fully Automatic Air Fryer
Capacity	6.5 Liters (approx. 1.7 Pounds)
Power	1500 Watts
Voltage	120 Volts
Control Method	Touch Control (LCD Display)
Product Dimensions (D x W x H)	11.29"D x 12.95"W x 15.39"H
Item Weight	11 Pounds
Material	Plastic
Color	Blue
Special Features	Overheat Protection, Power-off Protection, Automatic Power-off Memory, 360° Heated Air Circulation

Figure 7.2: Visual summary of the air fryer's core features, including its large capacity, smart touch interface, and advanced heating technology.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact the retailer from whom you purchased the product. Keep your purchase receipt as proof of purchase.