

3307714

Generic 3307714 Concrete Grey Wooden Wardrobe

Model: 3307714

INTRODUCTION

Thank you for purchasing the Generic 3307714 Concrete Grey Wooden Wardrobe. This manual provides essential information for the safe assembly, proper use, and maintenance of your new wardrobe. Please read these instructions carefully before beginning assembly and retain them for future reference.

SAFETY INFORMATION

Important: To prevent tipping, this product must be secured to the wall using the provided wall attachment device. Failure to do so can result in serious injury or death. Always ensure the wardrobe is placed on a level surface.

- Keep all assembly hardware out of reach of children.
- Do not climb on or hang from the wardrobe.
- Distribute weight evenly across shelves to maintain stability.
- Always use appropriate tools for assembly.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Side Panels (2)
- Top Panel (1)
- Bottom Panel (1)
- Adjustable Shelves (4)
- Back Panel (1)
- Assembly Hardware (screws, dowels, shelf pins, wall attachment kit)
- Instruction Manual (this document)

SETUP AND ASSEMBLY

Assembly requires at least two people. Clear a spacious area for assembly. You will need a Phillips head screwdriver and a hammer (not included).



Figure 1: Fully assembled Generic 3307714 Concrete Grey Wooden Wardrobe, empty.

- 1. Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Refer to the parts list to ensure all pieces are present.
- 2. Assemble Base Structure:** Attach the bottom panel to one of the side panels using the provided screws and dowels. Ensure connections are secure.
- 3. Attach Second Side Panel:** Connect the second side panel to the bottom panel, mirroring the first side panel attachment.
- 4. Install Shelves:** Insert shelf pins into the pre-drilled holes at your desired height for the adjustable shelves. Slide the shelves onto the pins. The wardrobe includes four adjustable shelves.



Figure 2: Close-up of an empty shelf, demonstrating internal finish and shelf support holes.

5. **Attach Top Panel:** Secure the top panel to the assembled side panels using screws and dowels.
6. **Install Back Panel:** Carefully align and attach the back panel to the rear of the wardrobe using small nails or screws provided. Ensure the wardrobe is square before securing the back panel.
7. **Wall Attachment:** Position the assembled wardrobe in its final location. Using the provided wall attachment kit, secure the wardrobe to a solid wall stud or use appropriate wall anchors for your wall type. This step is critical for safety.

OPERATING INSTRUCTIONS

The Generic 3307714 wardrobe is designed for organizing clothing, accessories, and other personal items. Its five compartments offer ample storage.



Figure 3: Wardrobe demonstrating storage capacity with various items.

- **Loading:** Place items gently onto the shelves. Avoid overloading any single shelf to prevent bowing or damage.
- **Weight Distribution:** Distribute heavier items on lower shelves to enhance stability.
- **Adjusting Shelves:** To adjust shelf height, carefully remove all items from the shelf, lift the shelf, remove the pins, reposition the pins in new holes, and then reinsert the shelf.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your wardrobe.



Figure 4: Detail of the durable concrete grey wood material.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or moisture damage to the wood material.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood material.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wardrobe feels unstable or wobbly.	Not properly secured to the wall; uneven floor; loose connections.	Ensure wall attachment is correctly installed. Check if the floor is level; use shims if necessary. Retighten all assembly screws.
Shelves are difficult to insert or remove.	Shelf pins are not fully inserted or misaligned.	Ensure shelf pins are fully seated in the pre-drilled holes. Gently wiggle the shelf to align with pins.
Surface marks or smudges.	Dust accumulation or minor spills.	Wipe with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner specifically designed for wood finishes.

SPECIFICATIONS

Model Number	3307714
Brand	Generic
Color	Concrete Grey
Material	Wood-based material (durable and robust with a smooth surface, characterized by resistance, stability, and moisture resistance)
Product Dimensions (D x W x H)	50 cm x 50 cm x 200 cm (19.7" x 19.7" x 78.7")
Mounting Type	Floor Mount (with required wall attachment)
Number of Compartments	5

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.