



[Manuals.plus](#) /

› [Rkazes](#) /

› Rkazes Nut Milk Maker Machine KC-6108A User Manual

Rkazes KC-6108A

Rkazes Nut Milk Maker Machine KC-6108A User Manual

Model: KC-6108A

1. INTRODUCTION

Thank you for choosing the Rkazes Nut Milk Maker Machine KC-6108A. This appliance is designed to simplify the preparation of fresh, homemade plant-based milks and other beverages. With its multi-functional capabilities, you can easily create almond milk, oat milk, soy milk, coconut milk, rice milk, fruit juices, and more. This manual provides essential information for safe operation, effective use, and proper maintenance of your machine.



Image 1.1: The Rkazes Nut Milk Maker Machine, showcasing its sleek design and the variety of ingredients it can process, surrounded by a splash of milk.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not immerse the main unit (base with motor and heating element) in water or other liquids. Always unplug the machine when not in use, before cleaning, or if a malfunction occurs.
- **Hot Surfaces:** The machine's internal components and exterior may become hot during operation, especially when preparing hot beverages. Exercise caution and use the handle. Do not touch hot surfaces directly.
- **Blades:** The machine contains sharp blades. Handle with extreme care during assembly, disassembly, and cleaning to avoid injury. Keep hands and utensils out of the pitcher during operation.
- **Children and Supervision:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Proper Use:** Use the appliance only for its intended household purpose as described in this manual. Do not operate with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any

manner.

- **Overfilling:** Do not exceed the maximum fill lines indicated inside the pitcher to prevent overflow and potential hazards.
- **Ventilation:** Ensure adequate ventilation around the machine during operation. Do not block air vents.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Rkazes Nut Milk Maker Machine.



Image 3.1: Detailed views highlighting the various components of the Rkazes Nut Milk Maker Machine, including the lid, handle, base, and internal blade assembly.

Included Components:

- Main Unit (Pitcher with integrated motor and heating element)
- Lid
- Power Cord
- Measuring Cup
- Cleaning Brush
- User Manual (this document)

- Recipe Booklet

4. INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Before First Use:** Wash the inside of the pitcher and the lid with warm, soapy water. Use the provided cleaning brush for thorough cleaning around the blades. **Do not immerse the main unit's base in water.** Wipe the exterior with a damp cloth. Rinse thoroughly and dry all parts.
3. **Placement:** Place the machine on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children.
4. **Power Connection:** Ensure the machine is unplugged before adding ingredients. Once ready, plug the power cord into a grounded electrical outlet.

5. OPERATION

Your Rkazes Nut Milk Maker Machine offers multiple functions for various beverages. The intuitive LCD touch screen allows for easy selection.



Image 5.1: The machine's control panel illustrating the 8-in-1 multi-function options, including various milk types, juices, and utility functions.

General Steps for Beverage Preparation:

1. **Prepare Ingredients:** Measure your desired nuts, grains, or fruits. For nuts and beans (e.g., soybeans, almonds), it is recommended to soak them for approximately 1 hour prior to processing. *Avoid soaking for extended periods (e.g., overnight) as this can cause ingredients to expand excessively and lead to overflow during operation.*
2. **Add Ingredients and Water:** Place the prepared ingredients into the pitcher. Add water according to your recipe. For hot beverages, fill water up to the 'Hot Drink' line (approximately 800ml). For cold beverages, fill up to the 'Cold Drink' line (approximately 1000ml). **Do not exceed the maximum fill lines.**
3. **Secure Lid:** Place the lid firmly onto the pitcher. Ensure it is properly seated.
4. **Select Function:** Plug in the machine. The LCD display will illuminate. Press the **"Function/Cancel"** button repeatedly to cycle through the available programs (e.g., Soy Milk, Rice Paste, Juice, Five Cereal, Boiling Water, Corn Juice, Clean, Insulation).
5. **Start Operation:** Once your desired function is highlighted, the machine will typically start automatically after a few seconds. The display will show the remaining time.
6. **Completion:** The machine will beep when the program is complete. Unplug the machine and carefully pour out your freshly prepared beverage.

Specific Functions:

- **Soy Milk:** Ideal for making smooth, hot soy milk from soybeans.
- **Almond Milk:** Use for preparing fresh almond milk.
- **Oat Milk:** Suitable for oat-based beverages.
- **Rice Paste/Five Cereal:** For thicker, warm grain-based porridges or pastes.
- **Juice:** For blending fruits and vegetables into cold juices.
- **Boiling Water:** Heats water to boiling temperature.
- **Insulation (Keep Warm):** Maintains the temperature of hot beverages.

Using the Delay Start (Preset) Function:

The 12-hour delay start feature allows you to program the machine to begin operation at a later time, ensuring your beverage is ready when you need it.



Image 5.2: Visual representation of setting the delay start function at night for a fresh beverage in the morning.

1. Prepare ingredients and water as usual.
2. Press the **"Preset"** button.
3. Use the **"Function/Cancel"** button to adjust the delay time in hours (up to 12 hours).
4. Once the desired delay time is set, the machine will enter standby mode and begin operation after the set delay.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your machine.

7. TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; test outlet with another appliance; ensure lid is properly secured.
Overflow during operation.	Overfilled pitcher; ingredients (e.g., beans) soaked too long and expanded excessively.	Do not exceed maximum fill lines. Reduce soaking time for ingredients to approximately 1 hour.
Beverage is not smooth.	Insufficient blending time; too many ingredients; not enough water.	Ensure correct function is selected. Reduce ingredient quantity. Add more water if necessary (within limits).
Machine stops unexpectedly.	Overheating protection activated; lid not properly secured.	Unplug and allow to cool down for 30 minutes. Ensure lid is securely in place before restarting.
Display shows an error code.	Specific malfunction.	Refer to the recipe booklet for specific error codes or contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Rkazes
Model Name	KC-6108A
Color	White
Product Dimensions	6"D x 6"W x 12"H (approximately)
Capacity (Cold Drinks)	1000 ml (34 oz)
Capacity (Hot Drinks)	800 ml (28 oz)
Special Features	Adjustable Time, Automatic Cleaning, Heating, Keep Warm Setting, Thermal Protection System, 12H Pre-Set
Blade Material	Food-grade 304 Stainless Steel (10-blade design)
Item Weight	3.8 pounds

9. WARRANTY AND SUPPORT

Specific warranty details and customer support contact information were not provided in the product data.

Please refer to the product packaging or the seller's information for warranty terms and customer service contacts.

10. PRODUCT VIDEOS

No official product videos were provided in the available product data.

© 2025 Rkazes. All rights reserved.