

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli RM-C3337 Replacement Remote Control User Manual

Effireli YK-RM-C3337

Effireli RM-C3337 Replacement Remote Control User Manual

For JVC Smart LED TV Models: LT-43V55LU, LT-43V87LUA, LT-40VF52M, LT-50VU980, LT-32VF52M, LT-49V55LFA, LT-55V55LU, LT-50VUQ390I, LT-49K790, LT-65VU83M, LT-32VFQ52I, LT-32VH52M, LT-50VU8155 and more.

PRODUCT OVERVIEW

The Effireli RM-C3337 is a replacement remote control designed for a wide range of JVC Smart LED TV models. This remote is engineered for immediate use without the need for programming or complex setup procedures. Simply insert batteries and begin operation.



Image: Front view of the Effireli RM-C3337 replacement remote control. The remote is black with a slightly curved design, featuring a full array of buttons including a numeric keypad, navigation cluster, media controls, and dedicated app buttons for Netflix, YouTube, and Prime Video. The power button is red and located at the top left.

SETUP

This replacement remote control requires no programming or pairing. It is designed to work immediately with compatible JVC Smart LED TV models by simply inserting batteries.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use.

OPERATING INSTRUCTIONS

The RM-C3337 remote control provides intuitive access to your JVC Smart LED TV's functions. Point the remote directly at the TV's infrared receiver for optimal performance.

Button Functions

- **Power Button** (): Turns the TV on or off.
- **Numeric Keypad (0-9)**: Used for direct channel input or entering numerical values.
- **LANG. Button**: Likely for changing audio languages or subtitle options.
- **Mute Button** (): Mutes or unmutes the TV audio.
- **Volume Up/Down (V+, V-)**: Adjusts the TV's volume level.
- **Channel Up/Down (P+, P-)**: Changes TV channels sequentially.
- **Home Button** (): Accesses the TV's main menu or smart hub.
- **Info Button (i)**: Displays information about the current program or input.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK Button**: Confirms selections or enters sub-menus.
- **BACK Button**: Returns to the previous screen or menu.
- **EXIT Button**: Exits the current menu or application.
- **Dedicated App Buttons (Netflix, YouTube, Prime Video)**: Provides direct access to these streaming applications.
- **Star/Favorites Button (★)**: May access favorite channels or a customizable shortcut.
- **Media Control Buttons** (Rewind, Play/Pause, Fast Forward, Stop, Record): Controls playback of media content.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies depending on the TV's menu or application. These are often used for specific actions within smart TV features or teletext.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the

remote.

- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's sensor.
- **Buttons Not Working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only specific buttons are not working, it might indicate internal damage.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure consistent line of sight to the TV.

If the issue persists after trying these steps, please refer to the warranty and support information.

SPECIFICATIONS

Feature	Detail
Model Number	YK-RM-C3337
Product Dimensions	6.3 x 1.42 x 0.63 inches
Item Weight	3.03 ounces
Connectivity Technology	Infrared
Compatible Devices	Television (Specific JVC Smart LED TV models)
Special Feature	No Programming Required

WARRANTY AND SUPPORT

Your Effireli RM-C3337 replacement remote control comes with comprehensive support and warranty coverage.

- **Money-Back Guarantee:** Enjoy a 30-day money-back guarantee from the date of purchase.
- **Manufacturer's Warranty:** A 12-month warranty is provided, covering manufacturing defects. Returns and exchanges are accepted within this warranty period.
- **Compatibility Assistance:** If your specific JVC TV model number is not listed in the product description, or if your original remote control appears significantly different, please contact the seller directly to confirm compatibility before purchase or for assistance.

For warranty claims or support inquiries, please contact the seller or manufacturer through your purchase platform.

© 2024 Effireli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question