

## Doro Leva 30

# Doro Leva L30 Senior Flip Phone User Manual

Model: Leva L30 | Brand: Doro

## INTRODUCTION

---

Welcome to the user manual for your Doro Leva L30 Senior Flip Phone. This guide provides essential information on how to set up, operate, maintain, and troubleshoot your device. Please read this manual carefully to ensure proper use and to maximize the benefits of your phone.



The Doro Leva L30 flip phone, featuring a red and white design, is displayed alongside its dedicated charging cradle. The phone is open, revealing its large, easy-to-read keypad and internal screen.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using your Doro Leva L30 to reduce the risk of fire, electric shock, and injury. Keep the phone away from water and excessive heat. Use only Doro-approved accessories. Do not attempt to disassemble the phone.

## SETUP

---

### 1. Inserting the SIM Card and Battery

Before using your phone, you need to insert a SIM card (provided by your mobile network operator) and the battery.

1. Carefully remove the back cover of the phone.
2. Locate the SIM card slot and insert your SIM card with the gold contacts facing down, ensuring it clicks into place.
3. Insert the battery, aligning the gold contacts on the battery with those in the phone.
4. Replace the back cover until it snaps securely.

### 2. Charging the Phone

Your Doro Leva L30 comes with a convenient charging cradle and a USB-C cable for easy charging.

1. Connect the USB-C cable to the charging cradle and then to a power adapter (not always included) or a USB port.
2. Place your Doro Leva L30 into the charging cradle, ensuring it sits firmly. The phone will indicate that it is charging.
3. Alternatively, you can connect the USB-C cable directly to the phone's charging port.

# DORO LEVA L30 UN TÉLÉPHONE SUPER ERGONOMIQUE!

Téléphonez, envoyez des SMS et **prenez des photos** en toute simplicité grâce aux **touches idéalement espacées** et très **contrastées** ainsi qu'au **grand écran**. Grâce à son **socle chargeur inclus**, vous saurez toujours où il se trouve.



The Doro Leva L30 phone is shown resting in its charging cradle. This image emphasizes the ergonomic design and the location of the assistance button on the back of the phone, which is easily accessible.

## OPERATING INSTRUCTIONS

### Basic Functions

- **Power On/Off:** Press and hold the red end call button to power the phone on or off.
- **Making a Call:** Enter the phone number using the large, contrasted keypad. Press the green call button to dial.
- **Answering a Call:** Open the flip to answer an incoming call, or press the green call button. Close the flip or press the red end call button to end a call.
- **Sending an SMS:** Navigate to the 'Messages' menu. Select 'New Message', enter your text, and choose a recipient from your contacts or enter a number.

## Décrocher et raccrocher d'un geste



This image illustrates the simple gesture of opening and closing the Doro Leva L30 flip phone to answer or end calls, highlighting its user-friendly design.

### Special Features

- **External Screen:** The Doro Leva L30 features an external screen that displays caller ID, time, and battery status, allowing you to see important information without opening the phone.
- **Assistance Button with GPS:** Located on the back of the phone, this button can be programmed to send an alert SMS with your GPS location to pre-selected emergency contacts in case of an emergency.
- **HD Voice and Hearing Aid Compatibility:** Experience clear sound quality with HD Voice technology. The phone is also compatible with hearing aids, ensuring excellent audio for all users.
- **2MP Camera with Flash:** Capture moments with the integrated 2-megapixel camera. Access it via the menu or a dedicated shortcut key.
- **Voice Feedback Keys:** The keypad provides voice feedback for numbers pressed, aiding users with visual impairments.

- **Shortcut Keys:** Utilize the three programmable shortcut keys for quick access to frequently used functions or contacts.
- **Mini Flashlight:** A built-in mini flashlight provides convenience in low-light conditions.
- **Splash Resistance (IP54):** The phone is designed to withstand splashes, offering added durability.

## DORO LEVA L30

- **Un clapet 4G simple et facile d'utilisation**
- **Double écran**
- **Touche d'Assistance avec Géolocalisation**
- **Son clair et puissant**
- **Compatible avec Appareils Auditifs**
- **Touches à Retour Vocal**
- **3 Touches Raccourci**



This infographic highlights the Doro Leva L30's main features, including its 4G capability, dual screen, assistance button with geolocation, clear and powerful sound, hearing aid compatibility, voice feedback keys, and three shortcut keys for enhanced usability.



**Bouton d'Assistance  
avec Géolocalisation  
(GPS)**




**Compatibilité avec  
les appareils auditifs**



**Appareil  
Photo**



**Menu Simple**

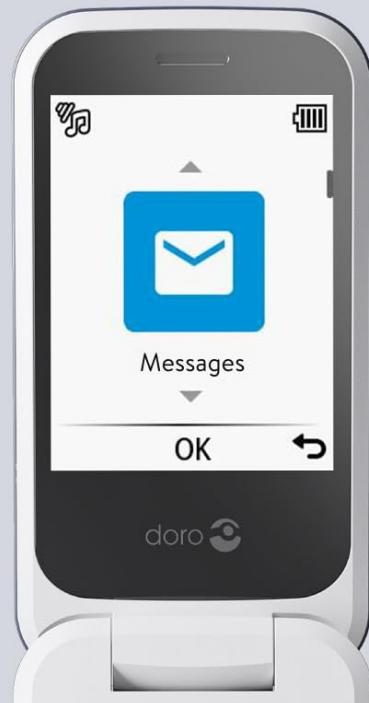

**Mini lampe  
torche**



**Resistance aux  
éclaboussures**

This visual guide showcases additional features of the Doro Leva L30, such as its simple menu interface, the GPS-enabled assistance button, compatibility with hearing aids, integrated camera, mini flashlight, and IP54 splash resistance for durability.

**Pour mieux entendre  
avec Doro  
“ClearSound”.**



A woman is shown happily conversing on the Doro Leva L30, demonstrating the phone's "ClearSound" technology designed for enhanced audio clarity during calls.

## **MAINTENANCE**

---

### **Cleaning Your Phone**

To keep your Doro Leva L30 in optimal condition, clean it regularly.

- Use a soft, dry, lint-free cloth to wipe the phone's surface.
- For stubborn marks, slightly dampen the cloth with water or a mild screen cleaner. Avoid harsh chemicals.
- Do not allow moisture to enter openings.

### **Battery Care**

Proper battery care extends its lifespan.

- Avoid exposing the battery to extreme temperatures.
- Do not leave the phone charging for excessively long periods after it's fully charged.
- If the phone will not be used for an extended period, charge it to about 50% before storing.

## TROUBLESHOOTING

---

If you encounter issues with your Doro Leva L30, try the following solutions before contacting support.

Problem	Possible Solution
Phone does not power on	Ensure the battery is correctly inserted and charged. Connect to the charger and wait a few minutes before attempting to power on.
No network signal	Check if the SIM card is properly inserted. Move to an area with better network coverage. Contact your network provider if the issue persists.
Cannot make or receive calls	Verify that you have network signal. Check if call barring is enabled. Ensure the phone number is correct.
Sound issues (low volume, no sound)	Adjust the volume settings. Ensure the speaker is not blocked. If using a hearing aid, check compatibility settings.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background data usage. Consider replacing the battery if it's old.

## SPECIFICATIONS

---

Key technical specifications for the Doro Leva L30:

- **Brand:** Doro
- **Model Name:** Leva 30
- **Operating System:** OxygenOS *(Note: This might be a generic placeholder from the source data, Doro phones typically run a simplified OS.)*
- **CPU Model:** Core i5 *(Note: This might be a generic placeholder from the source data, Doro phones typically use simpler processors.)*
- **Memory Storage Capacity:** 64 GB
- **Resolution:** 1280 x 720 pixels
- **Wireless Carrier:** Orange *(Note: Phone is unlocked, this may refer to a specific variant or network compatibility).*
- **Cellular Technology:** 4G
- **Connectivity Technology:** 4G
- **Color:** Leva L30 Red & White
- **Battery:** 1000mAh
- **Camera:** 2MP with flash
- **Splash Resistance:** IP54

## WARRANTY AND SUPPORT

---

### Warranty Information

For detailed warranty information regarding your Doro Leva L30, please refer to the warranty card included in your product packaging or visit the official Doro website. Warranty terms and conditions may vary by region and retailer.

## **Customer Support**

If you require further assistance or have questions not covered in this manual, please contact Doro customer support. You can find contact details on the official Doro website or through the retailer where you purchased the device.

Visit the official Doro store: [Doro Store on Amazon](#)

© 2024 Doro. All rights reserved.