

[Manuals.plus](#) /

› [Lisowod](#) /

› Lisowod L61 Pro Projector User Manual

Lisowod L61Pro

Lisowod L61 Pro Projector User Manual

Model: L61Pro

1. INTRODUCTION

Thank you for choosing the Lisowod L61 Pro Projector. This manual provides essential information for setting up, operating, and maintaining your device. The L61 Pro is designed to deliver a superior visual and audio experience, featuring 4K support, native 1080P resolution, and integrated smart functionalities.

Equipped with the innovative Movin smart operating system and a powerful AI chip, the L61 Pro ensures smooth performance and enhanced stability. Enjoy seamless access to your favorite streaming platforms like Netflix, YouTube, and Prime Video directly from the projector. Its compact design and advanced features make it an ideal choice for various entertainment and presentation needs.



Figure 1.1: The Lisowod L61 Pro Projector, showcasing its compatibility with 4K content and popular streaming services like Netflix, YouTube, and Prime Video, along with Dolby Audio support.

AI MOVIN Smart OS: Bespoke for Projectors



Figure 1.2: An overview of the AI Movin Smart OS, highlighting its enhancements in smoothness, stability, and overall user experience, powered by an advanced AI chip.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present and in good condition:

- L61Pro 4k Support Projector x 1
- Remote Control x 1 (Battery Not Included)
- User Manual x 1
- HDMI Cable x 1 (1.2M/3.94ft)
- Power Cord x 1 (1.5M/4.92ft)



Portable Compact Design

without battery



7.8 x 6.5 x 3.2 inch



2.4lb

Figure 2.1: All components included in the Lisowod L61 Pro Projector package.

3. SETUP

3.1 Initial Placement

Place the projector on a stable, flat surface. Ensure there is adequate ventilation around the device. For optimal viewing, position the projector directly in front of your projection surface (wall or screen).

3.2 Power Connection

1. Connect the power cord to the projector's power input port.
2. Plug the other end of the power cord into a standard electrical outlet.
3. Press the power button on the projector or remote control to turn on the device.

3.3 Focus and Keystone Correction

The L61 Pro features electric focus and 4P/4D keystone correction for easy image adjustment.

- **Electric Focus:** Use the remote control to adjust the focus until the image appears sharp and clear.
- **Keystone Correction:** If the projected image is trapezoidal, use the 4P/4D keystone correction function via the remote control to adjust the image shape until it is rectangular.
- **Zoom Function:** The projector supports 50%-100% zoom, allowing you to adjust the image size without moving the projector.



Figure 3.1: Visual representation of the projector's digital 4D/4P keystone correction, electric focus, and 50% zoom capabilities.

4. OPERATING INSTRUCTIONS

4.1 Smart Operating System (Movin OS)

The L61 Pro runs on the Movin smart operating system, providing a user-friendly interface for navigating applications and settings. Use the remote control to browse the home screen, launch apps, and manage your content.

Experience A World of Amazing Content Just One Click

Explore over 7,000 apps and more than 1,000,000 movies at your projector!



Figure 4.1: The projector's smart interface, showing pre-installed streaming applications and access to a wide range of content.

4.2 Streaming Applications

The projector comes pre-installed with licensed Netflix, YouTube, and Prime Video, allowing direct access to a vast library of movies and shows. Ensure your projector is connected to the internet to use these services.

4.3 Connectivity (WiFi 6 & Bluetooth)

- **WiFi 6:** Connect to your home network via ultra-fast WiFi 6 for smooth streaming and online activities. Navigate to Settings > Network > Wi-Fi to connect.
- **Bluetooth 5.2:** The bi-directional Bluetooth allows you to connect external Bluetooth speakers for enhanced audio or use the projector as a Bluetooth speaker itself. Go to Settings > Bluetooth to pair devices.

Ultra Fast WiFi 6 Connection

One Second into the Game World



IOS



Android



Windows



Figure 4.2: Highlighting the projector's ultra-fast WiFi 6 connectivity for seamless screen mirroring and gaming.



Figure 4.3: The projector's integrated Dolby Audio system with 2*15W HIFI speakers, providing an immersive sound experience.

4.4 Screen Mirroring

Mirror content from your iOS, Android, or Windows devices directly to the projector. Ensure both devices are connected to the same Wi-Fi network and select the screen mirroring option on your device and the projector.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Lisowod L61 Pro Projector.

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or solvents.
- **Cleaning the Exterior:** Wipe the projector's exterior with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry one.
- **Ventilation:** Ensure the ventilation vents are clear of dust and obstructions to prevent overheating. Do not block the airflow.

- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

The L61 Pro features a real sealed optical design, which helps block dust from entering the optical engine, contributing to a longer lifespan and consistent image quality.



Figure 5.1: The L61 Pro's sealed optical engine design, engineered to prevent dust accumulation and extend the projector's operational life.

6. TROUBLESHOOTING

If you encounter issues with your projector, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet issue; Projector off.	Ensure power cord is securely connected. Try a different outlet. Press power button.
No Image	Input source incorrect; Cable not connected; Lens cap on.	Select correct input source. Check HDMI/USB cable connections. Remove lens cap.
Blurry Image	Focus not adjusted; Keystone not corrected; Projection distance.	Adjust electric focus using remote. Use keystone correction. Ensure optimal projection distance (4-14ft).
No Sound	Volume too low; Muted; External audio device not connected.	Increase volume. Unmute. Check external speaker connection or Bluetooth pairing.
Cannot Connect to Wi-Fi	Incorrect password; Router issue; Out of range.	Verify Wi-Fi password. Restart router. Move projector closer to router.

7. SPECIFICATIONS

Detailed technical specifications for the Lisowod L61 Pro Projector:

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions	7.8 x 6.5 x 3.2 inches
Item Weight	2.2 pounds
Item Model Number	L61Pro
Brand	Lisowod
Recommended Uses	Education, Home Cinema, Gaming, Business
Connectivity Technology	Bluetooth, Wi-Fi, USB, HDMI, 3.5mm Jack
Display Resolution	1920 x 1080 (Native 1080P, 4K Supported)
Special Features	Movin Smart OS, Netflix/Prime Video/YouTube Support, AI Image Enhance & Eye Protect Mode, Dolby Audio 2*15W HIFI Speakers, Electric Focus, 4P/4D Keystone Correction, Bi-directional Bluetooth 5.2, Ultra-fast Wifi 6, Handheld Compact Design
Manufacturer	Lisowod
Date First Available	September 25, 2024

8. WARRANTY AND SUPPORT

Lisowod is committed to providing excellent customer service and support for your L61 Pro Projector.

- **Warranty:** The projector comes with a 36-month warranty from the date of purchase.
- **Returns:** Enjoy a 30-day no-reason return policy.
- **After-Sales Support:** Lifetime after-sales support is provided for your convenience.
- **Customer Service:** For any inquiries or assistance, please contact our 24/7 customer service team at support_us@lisowod.com.



Figure 8.1: Summary of Lisowod's comprehensive customer support and warranty offerings.

© 2025 Lisowod. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Answered questions about this manual

Why does my Lisowod L61Pro projector only play audio and not the video when playing an MP4 file from a USB drive?

If your Lisowod L61Pro is playing audio but not video from a USB drive, it is likely due to an unsupported video codec within the MP4 container or a connection/source setting issue. Please try...

[Read full answer](#)