

Jocca 2413

JOCCA 2413 5L Air Fryer Instruction Manual

Model: 2413 | Brand: Jocca

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent damage or injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the appliance, cord, or plug in water or any other liquid.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation. Do not cover the air inlet or outlet vents during operation.
- **Hot Surfaces:** The outer surfaces of the appliance may become hot during use. Always use oven mitts when handling hot components. Avoid touching the hot air outlet.
- **Children and Supervision:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Maintenance:** Unplug the appliance from the power outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.
- **Damage:** Do not operate the appliance if the plug, main cord, or the appliance itself is damaged. Contact authorized service personnel for repair.

2. PRODUCT OVERVIEW

The JOCCA 2413 5L Air Fryer is designed to cook your favorite meals with little to no oil, offering a healthier alternative to traditional frying. Its rapid hot air circulation technology ensures crispy and evenly cooked results.



Image: Front view of the JOCCA 2413 5L Air Fryer, showcasing its sleek white design with a natural wood-look handle and top accent.



Image: The air fryer with its cooking basket partially extended, revealing the interior space.



Image: A detailed view of the removable non-stick cooking basket, designed for optimal air circulation and easy cleaning.

3. SPECIFICATIONS

Feature	Description
Model Number	2413
Capacity	5 Liters
Color	Blanca Nature (White Nature)
Dimensions (D x W x H)	26 cm x 35 cm x 36 cm

Feature	Description
Wattage	1450 Watts
Voltage	230 Volts (AC)
Temperature Range	80°C to 200°C
Control Method	Touch
Special Functions	Automatic shut-off, Temperature control, Programmable, Timer
Material (Exterior)	Polypropylene
Material (Interior)	Stainless steel
Non-stick Coating	Yes
Dishwasher Safe	No



Image: The JOCCA 2413 5L Air Fryer with its dimensions (depth, width, height) clearly marked in centimeters.

4. SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Remove the frying basket and clean it thoroughly with warm soapy water. Rinse and dry completely.
3. **Placement:** Place the air fryer on a flat, stable, and heat-resistant surface. Ensure there is at least 10 cm of free space around the appliance to allow for adequate air circulation.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The JOCCA 2413 Air Fryer features intuitive touch controls for easy operation.

1. **Preheating (Optional):** For best results, preheat the air fryer. Turn on the appliance using the power button. Set the desired temperature (e.g., 180°C) and time (e.g., 3-5 minutes) using the touch controls.
2. **Loading Food:** Pull out the frying basket using the handle. Place your ingredients into the basket. Do not overfill the basket to ensure even cooking. For optimal crispiness, a small amount of oil can be lightly sprayed or brushed onto the food.
3. **Setting Temperature and Time:** Slide the basket back into the appliance. Use the touch display to select a preset program or manually adjust the temperature (80°C - 200°C) and cooking time. The 1450W power ensures efficient cooking.
4. **Cooking Process:** The air fryer will begin cooking. For certain foods (e.g., fries, chicken wings), it is recommended to shake or flip the food halfway through the cooking time to ensure even browning.
5. **Automatic Shut-off:** The appliance will automatically shut off once the set cooking time has elapsed. A timer will indicate the remaining cooking time.
6. **Removing Food:** Carefully pull out the frying basket. Use heat-resistant tongs or a spatula to remove the cooked food. Place the food on a plate and serve.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your air fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool down completely before cleaning.
- **Frying Basket:** The non-stick frying basket should be cleaned with warm soapy water and a non-abrasive sponge. Do not use metal scouring pads or harsh detergents. The basket is **not dishwasher safe**.
- **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Ensure the interior is completely dry before next use.
- **Exterior:** Clean the exterior of the air fryer with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your JOCCA 2413 Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet malfunction; Appliance damage	Ensure the power cord is securely plugged in. Test the outlet with another appliance. If still not working, contact customer support.
Food not cooked evenly	Basket overfilled; Food not shaken/flipped; Incorrect temperature/time	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature or cooking time as needed.
White smoke coming from appliance	Grease residue from previous use; Fatty ingredients	Clean the basket and interior thoroughly after each use. For fatty foods, drain excess fat during cooking.
Food not crispy	Insufficient oil; Low temperature; Too much food	Lightly coat food with oil. Increase temperature or cooking time. Cook in smaller batches.

8. WARRANTY AND SUPPORT

The JOCCA 2413 5L Air Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact JOCCA customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (2413) and proof of purchase readily available.

© 2026 Jocca. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question