

[Manuals.plus](#) /

> [Bennett Read](#) /

> Bennett Read Titan Cordless Wet and Dry Vacuum Cleaner User Manual HVC221

Bennett Read HVC221

Bennett Read Titan Cordless Wet and Dry Vacuum Cleaner User Manual

Model: HVC221

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the vacuum cleaner is switched off and disconnected from the charger before cleaning or performing maintenance.
- Do not use the appliance to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not immerse the motor head in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only manufacturer-recommended attachments.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Exercise extra care when cleaning on stairs.
- Do not use without dust bag and/or filters in place.

2. PRODUCT OVERVIEW

The Bennett Read Titan Cordless Wet and Dry Vacuum Cleaner (Model HVC221) is designed for versatile cleaning tasks, offering both dry vacuuming and wet spill collection. It features a powerful brushless motor and a durable stainless steel tank.





Figure 1: Main view of the Bennett Read Titan Cordless Wet and Dry Vacuum Cleaner. This image shows the complete assembly of the vacuum cleaner, including the stainless steel tank, motor head, hose, and floor nozzle.



Figure 2: Top view of the vacuum cleaner's motor head. This image highlights the power switch and the transparent battery compartment cover, indicating the cordless nature of the device.

Components:

- **Motor Head:** Contains the brushless motor, battery compartment, and control switch.
- **Stainless Steel Tank:** 20L capacity for collecting dry debris or liquids.
- **Hose:** Flexible hose for connecting attachments.
- **Extension Wands:** For extended reach.
- **Floor Nozzle:** For general floor cleaning.
- **Crevice Tool:** For narrow spaces.
- **Brush Tool:** For upholstery and delicate surfaces.
- **Foam Filter:** For wet vacuuming.
- **Cartridge Filter:** For dry vacuuming.
- **18V, 4Ah Li-ion Battery:** Rechargeable power source.
- **Quick Charger:** For charging the battery.

3. SETUP AND ASSEMBLY

3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage during transit. Ensure all listed components are present.

3.2 Attaching the Castor Wheels

1. Invert the stainless steel tank.
2. Insert the castor wheels into the designated slots on the base of the tank until they click securely into place.

3.3 Filter Installation

The type of filter required depends on whether you are performing dry or wet vacuuming.

- **For Dry Vacuuming:** Install the cartridge filter onto the motor head's filter cage. Ensure it is seated correctly.
- **For Wet Vacuuming:** Remove the cartridge filter. Install the foam filter over the filter cage. Ensure it covers the cage completely.

Important: Never use the cartridge filter for wet vacuuming, as this can damage the filter and the motor. Never use the foam filter for dry vacuuming, as it will not effectively capture fine dust.

3.4 Attaching the Hose and Accessories

1. Insert the larger end of the hose into the suction inlet on the front of the tank until it locks.
2. Attach the desired extension wands and nozzle (floor nozzle, crevice tool, or brush tool) to the other end of the hose.

4. CHARGING THE BATTERY

The Bennett Read Titan is powered by an 18V, 4Ah Lithium-ion battery. For optimal performance, fully charge the battery before first use.

1. Remove the battery from the vacuum cleaner by opening the battery compartment cover and pressing the release button.
2. Connect the quick charger to a standard power outlet.
3. Insert the battery into the charger. The charger indicator light will show the charging status (e.g., red for charging, green for fully charged).
4. A full charge from flat takes approximately 2 hours.
5. Once fully charged, remove the battery from the charger and insert it back into the vacuum cleaner's battery compartment, ensuring it clicks into place.

Note: The battery provides up to 40 minutes of run-time per charge, depending on usage.

5. OPERATING INSTRUCTIONS

5.1 Dry Vacuuming

1. Ensure the cartridge filter is correctly installed.
2. Attach the desired dry vacuuming accessory (e.g., floor nozzle for general cleaning, crevice tool for tight spaces).
3. Press the power switch on the motor head to turn on the vacuum cleaner.
4. Guide the nozzle over the area to be cleaned.
5. After use, switch off the vacuum cleaner and empty the tank as described in Section 5.3.



Figure 3: The vacuum cleaner in use for dry vacuuming on a wooden floor. This image demonstrates the product's application for everyday dry cleaning tasks.

5.2 Wet Vacuuming

1. Ensure the foam filter is correctly installed and the cartridge filter is removed.
2. Attach the appropriate wet vacuuming accessory (e.g., floor nozzle without brushes).
3. Press the power switch on the motor head to turn on the vacuum cleaner.
4. Guide the nozzle over the liquid spill to be collected.
5. The vacuum cleaner will automatically stop suction when the tank is full. Switch off the unit immediately.
6. After use, switch off the vacuum cleaner and empty the tank as described in Section 5.3.



Figure 4: The vacuum cleaner's nozzle actively suctioning a liquid spill from a wooden floor. This illustrates its wet vacuuming capability.

5.3 Emptying the Tank

1. Ensure the vacuum cleaner is switched off and the battery is removed.
2. Release the latches on the sides of the tank and carefully lift off the motor head.
3. For dry debris, simply tip the tank over a waste bin to empty.
4. For liquids, pour the contents into a drain.
5. Clean the inside of the tank with water if necessary and dry thoroughly before reassembling.
6. Replace the motor head and secure the latches.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Cleaning Filters

- **Cartridge Filter (Dry Use):** Tap the filter gently to dislodge dust. For thorough cleaning, rinse under cool running water. Allow to air dry completely for at least 24 hours before reinstallation. Do not use detergents or hot water.
- **Foam Filter (Wet Use):** Rinse the foam filter under cool running water to remove debris. Squeeze out excess water and allow to air dry completely before storage or next use.

Caution: Never operate the vacuum cleaner with a wet filter for dry vacuuming, or without a filter installed.

6.2 Cleaning the Tank and Accessories

Wipe the stainless steel tank and accessories with a damp cloth. For stubborn dirt, use a mild detergent. Rinse thoroughly and dry completely before storage.

6.3 Storage

Store the vacuum cleaner and its accessories in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) for long-term storage to prolong its lifespan.



Figure 5: The vacuum cleaner stored compactly in a cupboard. This image demonstrates the product's suitability for easy storage.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery not charged or not inserted correctly.	Ensure battery is fully charged and securely inserted.
Loss of suction.	Tank is full, filter is clogged, or hose/nozzle is blocked.	Empty the tank. Clean or replace the filter. Check hose and nozzle for obstructions.
Motor stops during wet vacuuming.	Tank is full (float mechanism activated).	Switch off the vacuum cleaner and empty the tank.
Unusual noise from motor.	Obstruction in motor head or damaged motor.	Switch off and remove battery. Check for obstructions. If noise persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	HVC221

Feature	Detail
Brand	Bennett Read
Type	Cordless Wet and Dry Vacuum Cleaner
Battery	18V, 4Ah Lithium-ion
Motor	Brushless
Run-time	Up to 40 minutes (per charge)
Charge Time	Approx. 2 hours (from flat to full)
Tank Capacity	20 Litres
Tank Material	Stainless Steel
Product Dimensions (L x W x H)	35L x 34W x 45H centimetres
Item Weight	6.9 kg
Colour	Silver/Black

9. WARRANTY AND SUPPORT

For warranty information, spare parts, or technical support, please refer to the warranty card included with your product or visit the official Bennett Read website. Contact details for customer service are typically provided on the manufacturer's website or in the product packaging.

Please have your model number (HVC221) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHY9YSJP>

More documents and user manuals: <https://manuals.plus/>