

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sparefixd](#) /

› [Sparefixd Dishwasher Detergent Tablet Dispenser for Beko - Instruction Manual](#)

### Sparefixd RAN8267425

# Sparefixd Dishwasher Detergent Tablet Dispenser for Beko - Instruction Manual

Model: RAN8267425

## INTRODUCTION

---

This manual provides instructions for the installation, operation, and maintenance of the Sparefixd dishwasher detergent and rinse aid dispenser, part number RAN8267425. This dispenser is designed as a replacement part compatible with various Beko dishwasher models. Please refer to the 'Specifications' section for a detailed list of compatible models.



Figure 1: Top view of the Sparefixd dishwasher detergent and rinse aid dispenser with both compartments closed.

## SETUP AND INSTALLATION

---

**Safety Warning:** Before attempting any installation or replacement, ensure the dishwasher is completely disconnected from the power supply and water source. Failure to do so may result in electric shock, injury, or damage to the appliance.

- 1. Preparation:** Open the dishwasher door and locate the existing detergent dispenser. Depending on your Beko model, access to the dispenser mechanism may require removing the inner door panel. Consult your specific dishwasher's service manual if unsure.
- 2. Removal of Old Dispenser:** Carefully disconnect any wiring harnesses and water/rinse aid tubes connected to the old dispenser. Unclip or unscrew the old dispenser from its mounting points. Note the orientation and connections for correct reinstallation.
- 3. Installation of New Dispenser:** Position the new Sparefixd dispenser (RAN8267425) into the designated slot. Ensure it fits securely. Reconnect the wiring harness and any water/rinse aid tubes. Ensure all connections are firm and correctly seated.
- 4. Testing:** Once the new dispenser is installed and the dishwasher is reassembled, reconnect the power and water supply. Run a short test cycle without dishes to check for proper detergent release and any leaks.

If you are not confident in performing this replacement, it is recommended to seek assistance from a qualified appliance technician.



Figure 2: Rear view of the dispenser, illustrating the electrical connections and internal components for installation reference.

## OPERATING INSTRUCTIONS

---

The dispenser features separate compartments for detergent and rinse aid.

- **Detergent Compartment:**

Open the main detergent compartment lid. Add the recommended amount of dishwasher detergent (powder, gel, or tablet) according to your dishwasher's instructions and the soil level of your dishes. Close the lid firmly until it clicks into place. Ensure the lid is properly sealed to prevent premature release.

- **Rinse Aid Compartment:**

Open the rinse aid compartment cap. Slowly pour liquid rinse aid into the reservoir until it reaches the 'MAX' fill line. Avoid overfilling. Close the cap securely. The rinse aid will be automatically dispensed during the wash cycle to improve drying and prevent water spots.



Figure 3: Top view of the dispenser with both the detergent and rinse aid compartments open, ready for filling.

## MAINTENANCE

Regular maintenance ensures optimal performance of your dispenser.

- **Cleaning:** Periodically check the detergent and rinse aid compartments for any residue buildup. If necessary, wipe them clean with a damp cloth. Do not use abrasive cleaners or sharp objects that could damage the dispenser.
- **Check for Blockages:** Ensure the detergent release mechanism and rinse aid nozzle are free from blockages. Hard water deposits or detergent clumps can impede proper dispensing.
- **Lid Seals:** Inspect the seals around the detergent and rinse aid compartment lids for any signs of wear or damage. Damaged seals can lead to leaks or improper dispensing.

## TROUBLESHOOTING

| Problem                  | Possible Cause  | Solution  |
|--------------------------|---|---|
| Detergent not dispensing | Lid not opening, dispenser blocked, incorrect detergent type.           | Ensure lid is not obstructed. Clean dispenser thoroughly. Use appropriate dishwasher detergent. |
| Rinse aid not dispensing | Rinse aid reservoir empty, nozzle blocked, incorrect rinse aid setting. | Refill rinse aid. Clean rinse aid nozzle. Check dishwasher settings for rinse aid dosage.       |
| Water spots on dishes    | Insufficient rinse aid, rinse aid compartment empty.                    | Refill rinse aid. Increase rinse aid dosage setting on your dishwasher if available.            |

| Problem                             | Possible Cause  | Solution  |
|-------------------------------------|---|---|
| Detergent residue left in dispenser | Dispenser lid not opening fully, water pressure issue, dispenser dirty. | Check for obstructions. Clean dispenser. Ensure water inlet is clear. |

## SPECIFICATIONS

---

- **Brand:** Sparefixd
- **Part Number (Model):** RAN8267425
- **Type:** Dishwasher Detergent and Rinse Aid Dispenser
- **Compatibility:** Suitable for various Beko dishwasher models.
- **Compatible Beko Models (Partial List):**

BM9019I, DEN26X20GG, DEN28420GB, DFN04C11W, DFN05310B, DFN05310S, DFN05310W, DFN05Q10W, DFN05R11B, DFN05R11S, DFN05R11W, DFN05X11S, DFN05X11W, DFN15J10W, DFN15R10X, DFN16420G, DFN16420W, DFN16X10B, DFN16X10G, DFN16X10X, DFN28J21X, DFN28R22B, DFN28R22W, DFN29420G, DFN29X20X, DFN38430X, DFN39430W, DFN39530X, DFS04010B, DFS04010S, DFS04010W, DFS04R11W, DFS05013X, DFS05C10W, DFS05J1W, DFS05Q10W, DFS05X11W, DFS05X11X, DIN15311, DIN15R11, DIN15X11, DIN26410, DIN26X22, DIN28R22, DIN29X20, DIS25010, DWFN20LCD

To confirm compatibility, locate your dishwasher's model number, typically found on a sticker or plate inside the door, on the side, or at the back of the appliance. Compare it with the list above or contact the seller.

## WARRANTY AND SUPPORT

---

For warranty information regarding this Sparefixd replacement part, please refer to the terms and conditions provided by the original seller at the time of purchase. Specific warranty details are not provided in this manual.

For technical support or further assistance with this product, please contact the seller directly through your purchase platform.

