

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [SAMSUNG Galaxy Tab A9 User Manual](#)

Samsung SM-X110

SAMSUNG Galaxy Tab A9 User Manual

Model: SM-X110

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your SAMSUNG Galaxy Tab A9 (SM-X110). Please read this guide thoroughly before using your device to ensure optimal performance and longevity.



Figure 1: Front and partial rear view of the SAMSUNG Galaxy Tab A9. The front displays the device's name, while the rear shows the camera module.

2. SETUP

2.1. What's in the Box

- SAMSUNG Galaxy Tab A9 (SM-X110)
- USB Type-C Cable
- Quick Start Guide

- Ejection Pin (for microSD card slot)

Note: A power adapter/charger is **not included** with this device. Please use a compatible USB Type-C power adapter for charging.

2.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the Samsung logo appears.
- **To Power Off:** Press and hold the Power button, then tap 'Power off' on the screen. Alternatively, swipe down from the top of the screen to open the Quick Panel, tap the Power icon, and select 'Power off'.
- **To Restart:** Follow the power off steps and select 'Restart'.

2.3. Initial Setup

Upon first power-on, the device will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. This device is Wi-Fi only and requires an internet connection for many features.
3. Review and accept the End User License Agreement and Privacy Policy.
4. Sign in with your Google Account or create a new one.
5. Set up a screen lock (PIN, pattern, password).
6. Sign in with your Samsung Account or create a new one to access Samsung-specific features.
7. Complete the remaining setup steps as prompted.

2.4. Installing a MicroSD Card

The Galaxy Tab A9 supports microSD cards up to 1TB for expanded storage.

1. Locate the SIM/microSD card tray on the side of your tablet.
2. Insert the ejection pin into the small hole next to the tray to open it.
3. Place the microSD card into the tray with the gold contacts facing down.
4. Gently push the tray back into the slot until it clicks into place.

3. OPERATING YOUR DEVICE

3.1. Basic Navigation

- **Home Screen:** The central hub for your apps and widgets.
- **App Drawer:** Swipe up from the home screen to access all installed applications.
- **Quick Panel & Notifications:** Swipe down from the top of the screen to access quick settings and view notifications.
- **Recent Apps:** Tap the 'Recent' button (usually a square icon) or swipe up and hold from the bottom of the screen (if using gesture navigation) to see recently opened applications.

3.2. Display Features

The Galaxy Tab A9 features an 8.7-inch TFT display with a 1340x800 resolution and a 60Hz refresh rate, providing smooth visuals.

- **Brightness:** Adjust screen brightness from the Quick Panel or in Settings > Display.
- **Dark Mode:** Enable Dark Mode in Settings > Display for a more comfortable viewing experience in low light.

3.3. Multi-tasking with Split Screen

Enhance productivity by running two applications simultaneously using the split-screen feature.

1. Open the first app you wish to use.
2. Tap the 'Recent' button or swipe up and hold to view recent apps.
3. Tap the icon of the first app at the top of its preview, then select 'Open in split screen view'.
4. Choose the second app from the recent apps list or the app drawer to fill the other half of the screen.

3.4. Audio

The device is equipped with dual speakers (1.0W) for an immersive audio experience. Adjust volume using the physical volume buttons or through the Quick Panel/Settings > Sound and vibration.

3.5. Camera Usage

Capture photos and videos using the built-in cameras:

- **Rear Camera:** 8MP with Autofocus (AF) for clear shots.
- **Front Camera:** 2MP for video calls and selfies.

Open the 'Camera' app from your home screen or app drawer to start capturing.

3.6. Connectivity

- **Wi-Fi:** Connect to wireless networks via Settings > Connections > Wi-Fi. The device supports 802.11ax.
- **Bluetooth:** Pair with Bluetooth devices (e.g., headphones, speakers) via Settings > Connections > Bluetooth. The device features Bluetooth 5.3.
- **USB Type-C 2.0:** Use the USB-C port for charging and data transfer.

3.7. Quick Share

Quick Share allows for fast and easy sharing of photos, videos, and documents with nearby Galaxy devices. Access Quick Share from the Share menu within apps or from the Quick Panel.

3.8. Continue Apps on Other Devices

If signed into the same Samsung account on multiple Galaxy devices, you can seamlessly continue using apps like Samsung Internet or Samsung Notes from where you left off on another device.

4. MAINTENANCE

4.1. Battery Care

- To prolong battery life (5100 mAh), avoid extreme temperatures.
- Do not leave the device charging for extended periods after it reaches 100%.
- Use only compatible charging cables and adapters.

4.2. Software Updates

Keep your device's software up to date to ensure optimal performance, security, and access to new features. Check for updates in Settings > Software update > Download and install.

4.3. Cleaning Your Device

Gently wipe the screen and body of the tablet with a soft, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

4.4. Storage Management

Regularly manage your device's 64GB internal storage. Delete unnecessary files, uninstall unused apps, and utilize cloud storage or the microSD card for larger files. Check storage usage in Settings > Battery and device care > Storage.

5. TROUBLESHOOTING

If you encounter issues with your Galaxy Tab A9, try the following general troubleshooting steps:

- **Device Not Responding:** Press and hold the Power button for about 10 seconds to force a restart.
- **App Crashing/Freezing:** Close the app from the Recent Apps screen and reopen it. If the issue persists, clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache).
- **Wi-Fi Connection Issues:** Turn Wi-Fi off and on again. Restart your router. Forget the network and reconnect.
- **Slow Performance:** Close unused apps, clear cache, restart the device, or check for software updates.
- **Battery Draining Quickly:** Reduce screen brightness, disable unnecessary features (Bluetooth, GPS), close background apps, or check battery usage in Settings.

For more specific issues, refer to Samsung's official support resources online.

6. SPECIFICATIONS

Feature	Detail
Model Number	SM-X110
Operating System	Android 13, One UI 5.1
Display Size	8.7 Inches (220.5mm)
Display Resolution	1340x800 (WXGA+), TFT
Processor	Mediatek Helio G99 (6nm), Octa-core, 2.2 GHz
RAM	4 GB
Internal Storage	64 GB
Expandable Storage	microSD up to 1 TB
Rear Camera	8 MP, Autofocus (AF)
Front Camera	2 MP
Battery Capacity	5100 mAh (Lithium Polymer)
Wireless Connectivity	Wi-Fi 802.11ax
Bluetooth	Bluetooth 5.3
USB Port	USB Type-C 2.0

Feature	Detail
Dimensions (LxWxH)	10 x 8 x 1.5 inches
Item Weight	1.01 pounds
Color	Graphite

7. WARRANTY AND SUPPORT

Please note that this is an **International Model** and does not come with a domestic warranty. However, the device is covered by the Seller's Return Policy.

For any product-related inquiries, technical assistance, or warranty claims (under the seller's policy), please contact the seller directly through your purchase platform.

You can also visit the official Samsung support website for general product information and troubleshooting guides, though specific warranty services may not apply to international models.