

[manuals.plus](#) /› [Miracase](#) /› [Miracase Magnetic Wallet with Stand User Manual for iPhone 12-17 Series](#)

Miracase Magnetic Wallet with Stand (D-White Minimalist)

Miracase Magnetic Wallet with Stand User Manual

Model: Magnetic Wallet with Stand (D-White Minimalist)

Brand: Miracase

1. INTRODUCTION

This manual provides instructions for the Miracase Magnetic Wallet with Stand. This accessory is designed to securely attach to MagSafe-compatible iPhones and magnetic cases, offering card storage and a versatile stand function. Please read this manual thoroughly to ensure proper use and care of your product.

2. PRODUCT FEATURES

- **Strong Magnetic Attachment:** Features 4000g of holding force for secure attachment to your device.
- **Integrated Phone Stand:** Converts into a stand for both landscape and portrait viewing modes.
- **Card Holder:** Designed to securely hold 4 to 5 cards.
- **Detachable Design:** Allows for easy removal to facilitate wireless charging.
- **Premium Material:** Constructed from durable PU leather for a comfortable feel.
- **Wide Compatibility:** Compatible with iPhone 17 Pro Max/17 Pro/17/Air/16 Pro Max/16 Pro/16 Plus/16/15 Pro Max/15 Pro/15 Plus/15/14 Pro Max/14 Pro/14 Plus/14/13 Pro Max/13 Pro/13/12 Pro Max/12 Pro/12 without a case, or with a magnetic case. *Not compatible with iPhone 13/12 mini.*

3. PACKAGE CONTENTS

- 1 x Miracase Magnetic Wallet with Stand

4. SETUP AND INSTALLATION

Follow these steps to set up your Miracase Magnetic Wallet with Stand:

1. **Prepare Your Device:** Ensure your iPhone is a compatible model (iPhone 12-17 series, excluding mini models) and is either without a case or equipped with a MagSafe-compatible magnetic case.
2. **Attach the Wallet:** Align the Miracase Magnetic Wallet with the MagSafe area on the back of your iPhone or magnetic case. The wallet will snap into place securely due to its strong magnets.
3. **Insert Cards:** Open the wallet to access the card slots. Gently slide your cards (up to 4-5) into the designated slots. Ensure cards are fully inserted to prevent them from falling out.

Tri-Fold Magnetic Wallet

- Animal-friendly PU leather
- Six individual card slots
- Stand Function



Figure 4.1: Inserting cards into the Miracase Magnetic Wallet.

Enhanced Magnetic Attraction

The magnetic attraction is increased by **300%** compared with the official original product.



Figure 4.2: Demonstrating the strong magnetic attraction of the wallet.

5. OPERATING INSTRUCTIONS

The Miracase Magnetic Wallet offers versatile functionality:

5.1 Using the Stand Function

The wallet can be folded to create a stable stand for your iPhone in both landscape and portrait orientations.

- For Landscape Mode:** Fold the wallet outwards along its creases to form a triangular stand. Place your iPhone horizontally on a flat surface with the wallet supporting it.
- For Portrait Mode:** Fold the wallet in a similar manner, but position your iPhone vertically. The wallet will provide stable support for upright viewing.



Figure 5.1: Using the multi-view stand function.

5.2 Detaching for Wireless Charging

To use wireless charging, simply detach the magnetic wallet from your iPhone. The strong magnetic connection allows for easy removal and reattachment.

5.3 Card and Cash Storage

The wallet features multiple slots for cards and a dedicated area for folded cash. Ensure items are placed securely within the wallet before closing.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Miracase Tri-Fold Magnetic Stand Wallet features, including card and cash storage, and stand functionality.

6. MAINTENANCE

To maintain the appearance and functionality of your Miracase Magnetic Wallet:

- **Cleaning:** Wipe the PU leather surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the wallet in a cool, dry place away from direct sunlight when not in use.
- **Avoid Overfilling:** Do not overfill the card slots, as this can stretch the material and affect its ability to

hold cards securely over time.

7. TROUBLESHOOTING

If you encounter any issues with your Miracase Magnetic Wallet, refer to the following common solutions:

- **Wallet not attaching securely:**

- Ensure your iPhone is a MagSafe-compatible model (iPhone 12-17 series, excluding mini models).
- Verify that your phone case, if used, is MagSafe-compatible. Non-magnetic cases will prevent proper attachment.
- Check for any debris or obstructions between the wallet and your phone/case.

- **Cards falling out:**

- Ensure you are not exceeding the recommended capacity of 4-5 cards.
- Verify that cards are fully inserted into the slots.

- **Stand function is unstable:**

- Ensure the wallet is fully unfolded into its triangular stand shape.
- Place the phone and wallet on a flat, stable surface.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	0.5 x 3.9 x 2.7 inches
Item Weight	2.89 ounces
Material	PU Leather
Color	D-White
Card Capacity	4-5 cards
Magnetic Strength	4000Gs
Compatibility	MagSafe-compatible iPhones (12-17 series, excluding mini models) or magnetic cases

9. WARRANTY AND SUPPORT

Miracase products are designed for quality and durability. If you encounter any product problems or require assistance, please contact Miracase customer support. We are committed to offering a satisfactory solution for any issues you may experience.

For support, please visit the official Miracase store or contact us through the platform where you purchased the product.

