

## KOITAT FSC-SC307

# KOITAT Handheld Pressurized Steam Cleaner Instruction Manual

Model: FSC-SC307

Brand: KOITAT

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the KOITAT Handheld Pressurized Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Always ensure the safety cap is securely fastened during operation.
- Never open the safety cap while the unit is pressurized or hot.
- Keep the appliance out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank.
- Unplug the unit from the power outlet before filling, cleaning, or performing maintenance.
- Allow the unit to cool completely before storing.

## 2. PRODUCT COMPONENTS

The KOITAT Handheld Pressurized Steam Cleaner comes with a 10-piece accessory set designed for various cleaning tasks.



Image: The KOITAT Handheld Steam Cleaner unit with its 10-piece accessory set, including various nozzles, brushes, extension hose, fabric steamer tool, window squeegee, measuring cup, and funnel.

### Included Accessories:

- Angled Nozzle
- Bendable Extension Hose
- Nozzle with Brush (Round brushes)
- Fabric Steamer Tool
- Rubber Wiper for Window/Door (Window squeegee)
- Measuring Cup
- Funnel
- Straight Nozzle
- Extension Hose (flexible)
- Small cleaning cloth

## 3. SETUP AND PREPARATION

### 1. Fill the Water Tank:

- Ensure the unit is unplugged and cool.

- Unscrew the safety cap by pressing down and turning counter-clockwise.
- Use the provided measuring cup and funnel to add up to 250ML of clean tap water into the tank. Do not overfill (maximum capacity is 350ML, but 250ML is recommended for optimal use).
- Securely replace the safety cap by pressing down and turning clockwise until tight.

**Q: Why can't the steam keep the high temperature all the time?**

**A:** The steam dissipates heat very quickly, so we recommend that you always keep the power on during use.

**Q: Why can't I open the lid after use?**

**A:** Steam Cleaner with steam and high temperature inside the safety cap can not be opened to protect against accidents.  
Correct steps to open the cap:



Unplug the power outlet

Keep pressing down  
Push the steam gun switch and empty the steam

After the red dot sinks, open the cap

Wait 2-3 minutes before adding water or clearing the remaining water.

Image: Visual guide for filling the water tank, highlighting the recommended water level.

## 2. Attach Desired Accessory:

- Select the appropriate nozzle or brush for your cleaning task.
- Attach it firmly to the steam outlet. The steam outlet features a 360° rotation for versatile use.

**221°F** **99.9%**  
Deep Cleaning Stubborn Stains

**HIGH-TEMPERATURE  
STEAM CLEANER**  
Eliminates 99.9% germ and bacteria on the surface of items

Image: The steam cleaner with different attachments, demonstrating its versatility.

### 3. Power On and Heat Up:

- Plug the power cord into a grounded electrical outlet.
- The red indicator light will illuminate, signifying that the unit is heating.
- The steam cleaner heats up quickly in approximately 3 minutes, reaching 221°F (105°C).
- The red indicator light will turn off when the unit is ready to produce steam.



Image: Detailed view of the steam cleaner's features, including the indicator light for heating status.

## 4. OPERATING INSTRUCTIONS

Once the steam indicator light is off, the unit is ready for use. Press and hold the steam button to release steam.

Your browser does not support the video tag.

Video: Demonstrates the KOITAT Steam Cleaner in action, cleaning various surfaces like windows, kitchen counters, and car interiors. It highlights the ease of use and chemical-free cleaning.

- **General Cleaning:** Direct the steam nozzle towards the surface to be cleaned. For optimal results, keep the nozzle close to the surface (5-10mm distance for highest temperature).



Image: Guide on maintaining steam temperature by keeping the nozzle close to the cleaning surface.

- **Multi-Surface Cleaning:** The steamer is suitable for ceramic, marble, sealed hardwood, tile, sinks, stoves, windows, upholstery, car interiors, and more.



## HANDS-FREE STEAMING

cleans and squeegees flat surfaces like  
**windows, glass and mirrors.**

Image: Examples of different surfaces and areas where the steam cleaner can be effectively used.

- **Window/Glass Cleaning:** Use the rubber wiper attachment for streak-free cleaning on windows, glass, and mirrors.

# NATURALLY CLEANS

## A VARIETY OF SURFACES



Image: Using the steam cleaner with the window squeegee for cleaning glass surfaces.

- **Fabric Steaming:** Attach the fabric steamer tool to remove wrinkles from clothes, curtains, and upholstery.
- **Hard-to-Reach Areas:** Utilize the angled nozzle or bendable extension for crevices, grout lines, and tight spaces.

Your browser does not support the video tag.

Video: A user demonstrating the steam cleaner's effectiveness in cleaning baseboards and tight corners, showing steam being applied to remove dirt and grime.

- **Safety Lock:** The unit includes a safety lock on the handle to prevent accidental steam release. Engage the lock when not actively steaming.
- **Continuous Use:** The unit provides continuous steam for 10 minutes or more on a full tank. For prolonged use, keep the power on during use to maintain high temperature.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Emptying Water:** After each use, unplug the unit and allow it to cool completely. Carefully unscrew the safety cap and empty any remaining water.
- **Cleaning Accessories:** Wash all attachments with warm, soapy water and rinse thoroughly. Allow them to air dry before storing.

- **Descaling (if necessary):** If you notice reduced steam output or mineral buildup, descale the unit using a solution of white vinegar and water. Consult the full manual for detailed descaling instructions.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, out of reach of children.

## 6. TROUBLESHOOTING

Refer to this section for solutions to common issues.

### 1. No Steam Emission:

- Ensure the plug is tightly inserted into the power socket.
- Allow sufficient time for heating (approximately 3 minutes). The red indicator light should turn off when ready.
- Check if there is enough water in the tank. Refill if necessary.

**Q:** How to use a steam cleaner properly so that the steam doesn't get cold quickly?

**A:** The temperature of the steam engine is as follows:

"Distance from nozzle: 5-10MM, temperature: 194°F-176°F (90°C-80°C)"  
 "Nozzle distance: 20-50MM, temperature: 167°F-122°F (75°C-50°C)"  
 "Nozzle distance: 100-200MM, temperature: 113°F-86°F (45°C-30°C)"  
 "Distance from nozzle: 250MM, temperature: 77°F (25°C)"

**Therefore:** don't let the nozzle or attachment go too far from the target, or the steam will become cold and not clean well.

Image: Visual troubleshooting steps for when the steam cleaner does not emit steam.

### 2. Steam Gets Cold Quickly:

- Keep the nozzle or attachment close to the target surface (5-10mm) to maintain high temperature.
- For continuous high-temperature steam, it is recommended to keep the power on during use.

### 3. Cannot Open the Lid After Use:

- The safety cap is designed not to open when the unit is pressurized or hot to prevent accidents.
- To open: Unplug the power outlet. Push the steam gun switch to empty any remaining steam. Wait 2-3 minutes for the red indicator dot to sink, then open the cap.

**Q:** Why don't steam engines emit steam?

**A: Please check:**

1. Plug is not tightly inserted into the power socket
2. No waiting for heating
3. No water

**Solution:**

1. Plug in again or replace the socket
2. Wait for heating for 2 minutes
3. Refill water

Image: Steps to safely open the water tank cap after use.

## 7. SPECIFICATIONS

Feature	Detail
Brand	KOITAT
Model Name	KOITAT (FSC-SC307)
Wattage	1050 watts
Tank Volume	350 Milliliters (250ML recommended fill)
Heat Time	3 Minutes
Maximum Temperature	221°F (105°C)
Power Source	Electric
Voltage	120V
Cord Length	9.4ft (3m)
Item Weight	3.98 pounds
Dimensions	10.08 x 9.8 x 5.83 inches
UPC	762949802052

# 9.8FT

POWER CORD ENABLES

**YOU TO CLEAN THE  
HOUSE ANYWHERE**



Image: Visual representation of the product's specifications and dimensions.

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your product packaging or visit the official KOITAT website.



Image: KOITAT customer service is available to assist with any product-related questions.