

Effireli YK-AR-RAE1E

Effireli AR-RAE1E Replacement Remote Control User Manual

For Fujitsu Air Conditioner Models: ASYA09LGC, ASYA12LGC, ASYA14LGC, AOYR07LGC, AOYR09LGC, AOYR14LGC, ASYA07LGC

1. INTRODUCTION

This manual provides comprehensive instructions for the Effireli AR-RAE1E Replacement Remote Control, designed for various Fujitsu Air Conditioner models. This remote is a direct replacement and requires no programming or complex setup, allowing for immediate use.

Key Features:

- No programming or setup required.
- Direct replacement for original Fujitsu remotes.
- Easy to use with clearly labeled buttons.

2. SETUP

2.1 Battery Installation

The remote control operates on two AAA/R03/LR03X2 batteries. Proper installation is crucial for functionality.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) polarities align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Important: Do not mix old and new batteries. Do not mix different types of batteries. Remove batteries if the remote will not be used for an extended period.

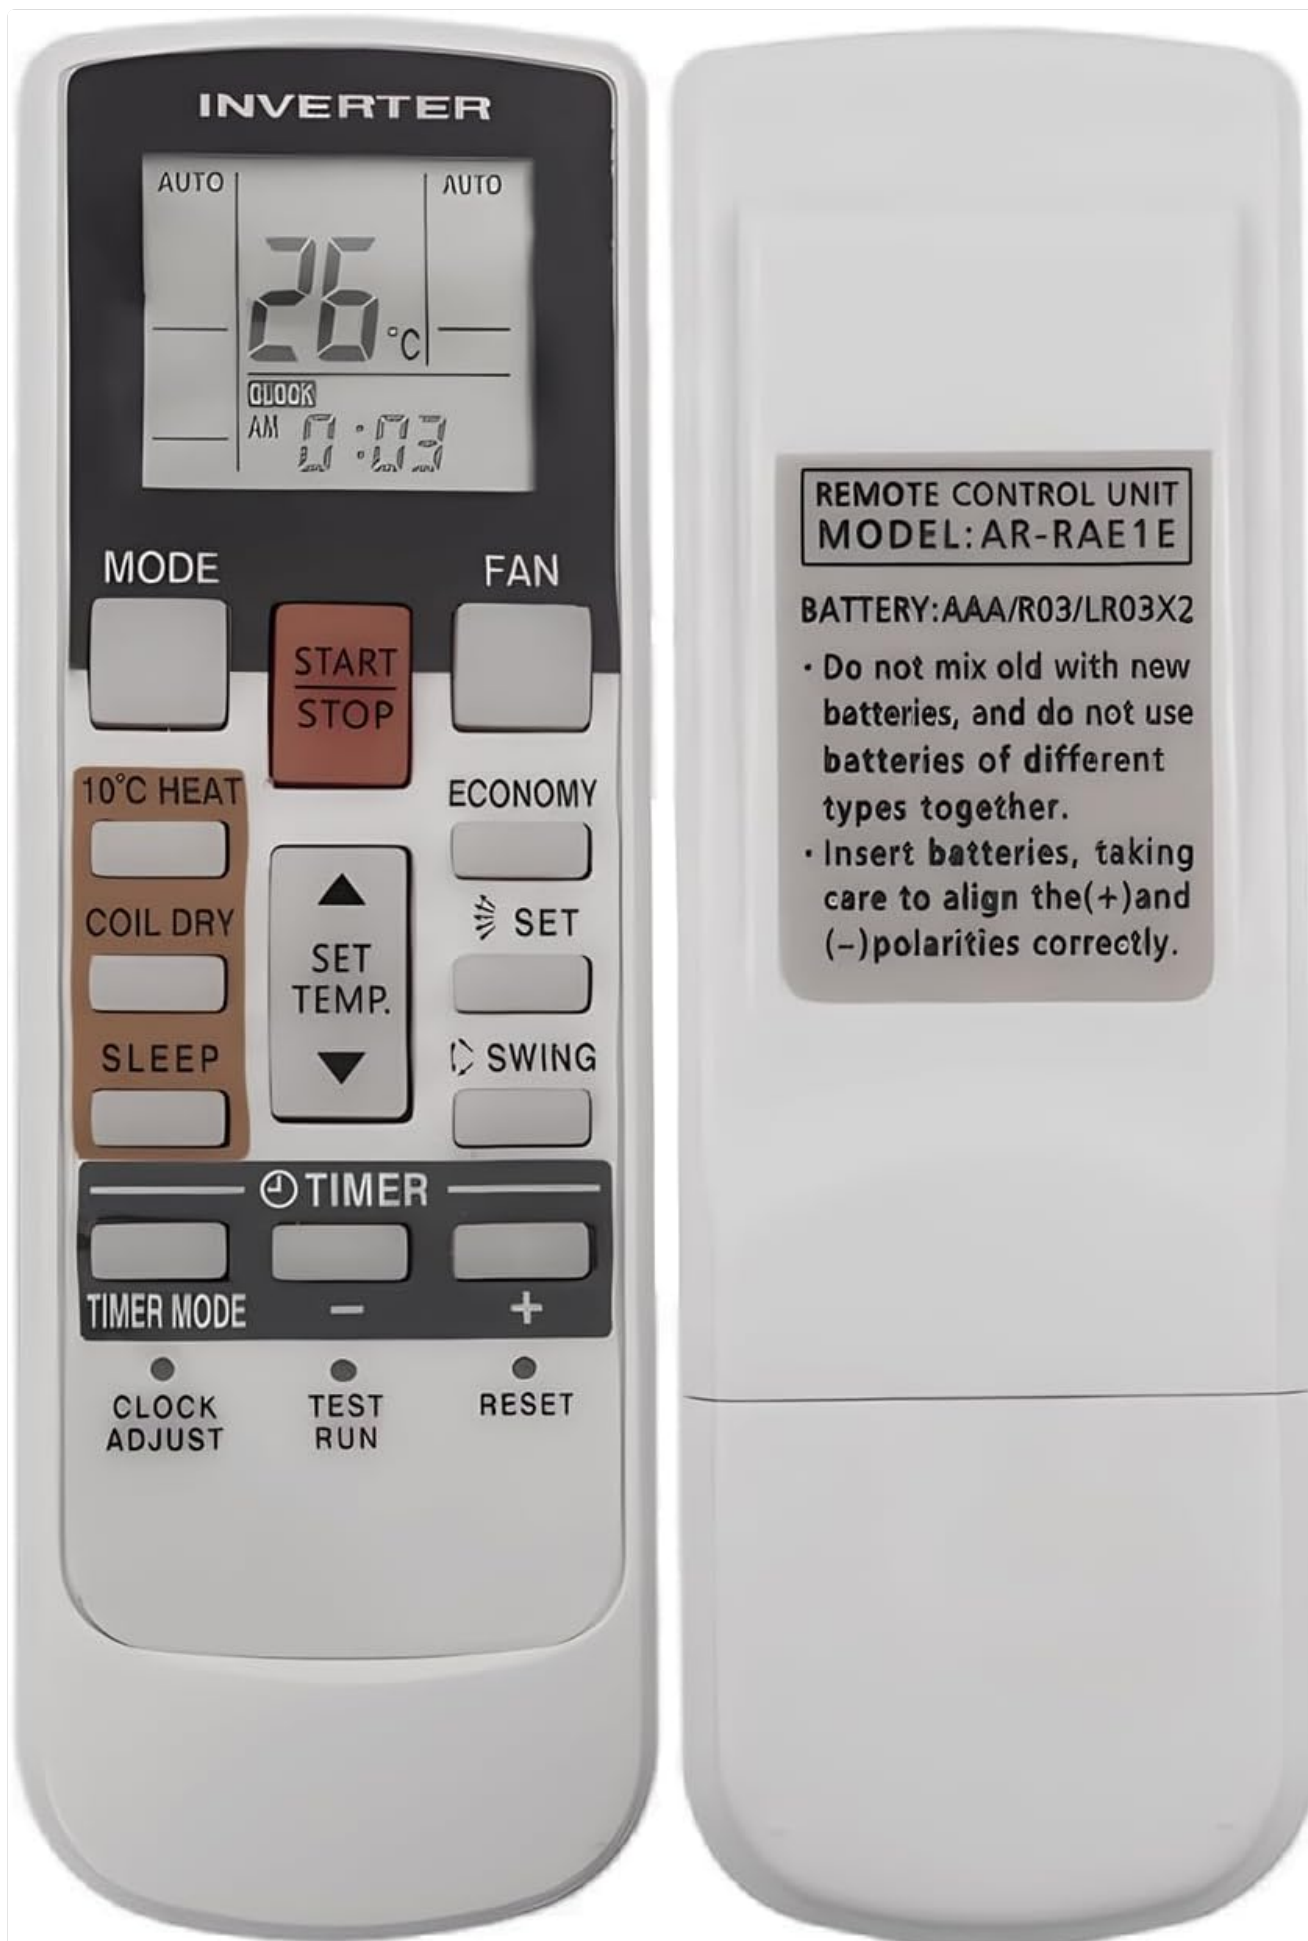


Figure 2.1: Front and back view of the remote control, highlighting the battery compartment and battery specifications.

2.2 Initial Use

Once batteries are installed, the remote is ready for use. No pairing or programming is required. Simply point the remote towards your Fujitsu Air Conditioner unit.

3. OPERATING INSTRUCTIONS

The AR-RAE1E remote control provides full functionality for your compatible Fujitsu Air Conditioner. Familiarize yourself with the buttons and their functions.



Figure 3.1: Front view of the remote control with button layout.

3.1 Button Functions

- **START/STOP:** Powers the air conditioner ON or OFF.
- **MODE:** Cycles through operating modes (e.g., Auto, Cool, Dry, Heat, Fan).
- **FAN:** Adjusts fan speed (e.g., Auto, Low, Medium, High).
- **SET TEMP. (▲/▼):** Increases or decreases the desired temperature.
- **SWING:** Activates or deactivates the louver swing function.
- **10°C HEAT:** Activates a low-temperature heating mode to prevent freezing.
- **COIL DRY:** Initiates a function to dry the indoor unit's coil, preventing mold growth.
- **SLEEP:** Activates sleep mode, which adjusts temperature gradually for comfortable sleep.
- **ECONOMY:** Activates energy-saving operation.
- **TIMER:** Used to set ON/OFF timers for the unit.
- **TIMER MODE:** Selects timer settings.
- **CLOCK ADJUST:** Adjusts the time displayed on the remote.
- **TEST RUN:** For service use only. Do not press during normal operation.
- **RESET:** Resets the remote control settings.

3.2 Basic Operation

1. Point the remote control directly at the air conditioner's indoor unit.
2. Press the **START/STOP** button to turn the unit on.
3. Press the **MODE** button repeatedly to select your desired operating mode (e.g., Cool, Heat, Fan).
4. Use the **SET TEMP. (▲/▼)** buttons to adjust the temperature.
5. Press the **FAN** button to select the desired fan speed.
6. To turn the unit off, press the **START/STOP** button again.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote.

4.2 Battery Replacement

Replace batteries when the remote's display becomes dim or when the air conditioner no longer responds to commands. Refer to Section 2.1 for battery installation instructions.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.

- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Make sure you are within the effective operating range of the air conditioner.
- **Air conditioner not performing desired function:**
 - Verify that the correct operating mode (e.g., Cool, Heat) is selected on the remote.
 - Check if the temperature setting is appropriate for the desired function.

Compatibility Note: If your air conditioner model number is not listed in the introduction or your original remote looks significantly different, please contact the seller directly to confirm compatibility before assuming a malfunction.

6. SPECIFICATIONS

Feature	Detail
Model Number	YK-AR-RAE1E
Product Dimensions	6.5 x 1.97 x 0.7 inches
Item Weight	3.25 ounces
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Compatible Devices	Air Conditioner
Max Number of Supported Devices	1

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Effireli remote control comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered.

Returns and exchanges are accepted within the warranty period for eligible issues.

7.2 Customer Support

For any questions regarding compatibility, troubleshooting, or warranty claims, please contact the seller or manufacturer directly. Provide your product model number (YK-AR-RAE1E) and a detailed description of your issue for prompt assistance.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question