

[Manuals.plus](#) /

› [Comenzar](#) /

› Comenzar Flameless Taper LED Candles Instruction Manual (Model A-12pack)

Comenzar A-12pack

Comenzar Flameless Taper LED Candles Instruction Manual

MODEL: A-12PACK

Introduction

Thank you for choosing Comenzar Flameless Taper LED Candles. This manual provides essential information for the safe and effective setup, operation, and maintenance of your new candles. These elegant, battery-operated taper candles, complete with stylish acrylic holders, are designed to enhance your home decor. They create a warm and inviting atmosphere with a realistic flickering effect, perfect for various occasions and settings.



Image: A set of twelve white flameless taper LED candles, each with a clear acrylic holder, arranged with two remote controls in the foreground.

Setup

1. Battery Installation

Each Comenzar Flameless Taper LED Candle requires two (2) AA batteries (not included). To install:

1. Gently twist and remove the bottom cap of the candle.
2. Insert two AA batteries, ensuring correct polarity (+/-).
3. Replace the bottom cap by twisting it securely.

2. Holder Assembly

The candles come with clear acrylic holders. Simply place the base of each candle into its corresponding holder. The candles can also stand freely without the holders if desired.



Image: A hand demonstrating how to place a white flameless taper LED candle into its clear acrylic holder.

Operating Instructions

Your Comenzar Flameless Taper LED Candles can be operated using the included remote control or the manual switch on the bottom of each candle.



Image: A visual guide detailing the dimensions of the taper candle and its holder, alongside an illustration of the remote control with its various function buttons labeled.

1. Power On/Off

- **Manual Switch:** Locate the ON/OFF switch at the bottom of each candle. Slide to 'ON' to activate, 'OFF' to deactivate.
- **Remote Control:** Press the **ON** button to turn on all candles within range. Press the **OFF** button to turn off all candles within range.

2. Timer Function

Set an automatic timer for your candles using the remote control:

- Press the **2H**, **4H**, **6H**, or **8H** button to set the desired operating time. The candles will remain on for the selected duration and then automatically turn off.
- The timer function will reset daily, turning on at the same time each day for the set duration.

3. Lighting Modes

Choose between two lighting effects:

- Press the **CANDLE** button for a realistic flickering flame effect.
- Press the **LIGHT** button for a steady, constant illumination.

4. Brightness Adjustment

Adjust the brightness level to suit your ambiance:

- Press the **DIM -** button to decrease brightness.
- Press the **DIM +** button to increase brightness.

Maintenance

- Clean the candles and holders with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the candles will not be used for an extended period, remove the batteries to prevent leakage and damage.
- Store candles in a cool, dry place away from direct sunlight or high temperatures to prevent deformation or damage to the acrylic material.
- These are flameless LED candles; do not attempt to light them with an open flame.

Troubleshooting

- **Candles not turning on:** Ensure batteries are inserted correctly with proper polarity. Replace old batteries with new ones. Check that the manual ON/OFF switch at the bottom of each candle is in the 'ON' position.
- **Remote control not working:** Ensure the remote control's battery is functional (typically a CR2025 coin cell, often included). Maintain a clear line of sight between the remote and the candles.
- **Inconsistent flickering or dim light:** This usually indicates low battery power. Replace the batteries in the affected candles.

Specifications

Brand	Comenzar
Model Name	Taper candle
Item Model Number	A-12pack
Part Number	TA-012
Product Dimensions	1.97"D x 1.97"W x 9.45"H (with holder)
Item Weight	5.6 ounces (per candle)
Material	Acrylic
Light Source Type	LED
Power Source	Battery Powered (2 AA batteries per candle, not included)
Number of Light Sources	12
Switch Type	Remote

Indoor/Outdoor Usage	Indoor
----------------------	--------

Warranty & Support

This product comes with a 1-year warranty from the date of purchase. For warranty claims, technical support, or any inquiries, please contact Comenzar customer service through the retailer's platform or visit the official Comenzar website.

© 2024 Comenzar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question