

[manuals.plus](#) /› [LEXiBOOK](#) /› [Lexibook Power Junior Bilingual Educational Laptop JC398i2 Instruction Manual](#)**LEXiBOOK JC398i2**

# Lexibook Power Junior Bilingual Educational Laptop

**MODEL: JC398i2***Instruction Manual*

---

## 1. Introduction

---

The Lexibook Power Junior Bilingual Educational Laptop (Model JC398i2) is designed to provide an interactive learning experience for children. This device features 40 activities in both English and Spanish, focusing on language, mathematics, and logic skills. It aims to support early learning through engaging and interactive methods.



Figure 1: Lexibook Power Junior Bilingual Educational Laptop with wired mouse.

## 2. Safety Information

**WARNING! Not suitable for children under 36 months. Choking Hazard - Small parts.**

## 3. What's in the Box

- 1 x Lexibook Power Junior Laptop
- 1 x Wired Mouse
- 1 x Instruction Manual



Figure 2: The Lexibook Power Junior Laptop as packaged.

## 4. Setup

### 4.1 Battery Installation

1. Locate the battery compartment on the underside of the laptop.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 x AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

### 4.2 Connecting the Mouse

The included wired mouse can be connected to the designated port on the side of the laptop. This allows for alternative navigation and interaction with certain activities.

## 5. Operating Instructions

### 5.1 Power On/Off

- To turn on the laptop, press the 'ON/OFF' button located on the keyboard.
- To turn off the laptop, press the 'ON/OFF' button again.

### 5.2 Language Selection

The laptop supports both English and Spanish. Use the 'Lang' button on the keyboard to switch between the two languages for all activities and prompts.

### 5.3 Activity Selection

The laptop offers 40 educational activities across various categories. To select an activity:

1. Press the 'Activities' button.
2. Use the number keys (0-9) to enter the two-digit code corresponding to the desired activity. The activity list is displayed on the laptop's screen surround.
3. Press 'Enter' or 'OK' to start the activity.

## 5.4 Activity Categories

- **Mathematics:** Activities for learning numbers, counting, addition, subtraction, multiplication, and division.
- **Language:** Focuses on letters, words, spelling, and interactive stories using a syllabic method to aid reading.
- **Typing:** Introduces typing skills through games and exercises.
- **Music:** Allows for musical note tests, playing music, and melody composition.
- **Logic & Games:** Includes various games and logic puzzles to develop problem-solving skills.
- **Clock & Time:** Activities related to learning to read and understand time.



Figure 3: Child engaging with the Lexibook Power Junior laptop.



Figure 4: Detailed view of the laptop's keyboard and screen.



Figure 5: Reading activity on the laptop screen.

## 5.5 Volume and Contrast Adjustment

- Use the 'Vol+' and 'Vol-' buttons to adjust the sound volume.
- Use the 'Contrast+' and 'Contrast-' buttons to adjust the screen display contrast.

## 5.6 Official Product Videos

Video 1: Lexibook Spider-Man Educational Laptop. This video demonstrates the features and activities of a similar Lexibook educational laptop, highlighting its bilingual capabilities and interactive learning modes.

Video 2: Lexibook Educational and Bilingual Laptop. This video showcases the various educational functions, including language, math, and games, available on a Lexibook bilingual laptop model.

Video 3: ZeenKind Spanish English Learning Laptop Toy. This video provides a quick overview of a bilingual learning laptop, demonstrating its size, keyboard, and the dual-language learning modes for children.

Video 4: Lexibook Bilingual and Educational Laptop. This video highlights the educational features of a Lexibook laptop, emphasizing its bilingual (English/Spanish) content and interactive learning activities.

## 6. Maintenance

### 6.1 Cleaning

- Wipe the laptop's surface with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Avoid getting moisture into any openings.

## 6.2 Battery Care

- Remove batteries if the device will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly.

## 7. Troubleshooting

- **No Power:** Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **No Sound:** Check the volume settings using the 'Vol+' button.
- **Screen Issues:** Adjust the screen contrast using the 'Contrast+' and 'Contrast-' buttons.
- **Unresponsive Buttons:** Turn the laptop off and then on again to reset the system.

## 8. Specifications

| Feature            | Detail                        |
|--------------------|-------------------------------|
| Model Number       | JC398i2                       |
| Product Dimensions | 8.7 x 7.5 x 0.1 inches        |
| Item Weight        | 1.15 pounds                   |
| Recommended Age    | 3 years and up                |
| Batteries Required | 2 AA batteries (not included) |
| Activities         | 40 (20 English, 20 Spanish)   |

## 9. Warranty and Support

Information regarding product warranty and customer support is not provided in the available data. Please refer to the product packaging or contact the manufacturer directly for details.