

Tikom V500

Tikom V500 Cordless Vacuum Cleaner User Manual

Model: V500

INTRODUCTION

Thank you for choosing the Tikom V500 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

WHAT'S INCLUDED

Your Tikom V500 package includes the following components:

- Vacuum Cleaner (Main Unit)
- Wall Dock
- Wall Screws with Plastic Expansion Anchor (x4)
- Battery
- Motorized Cleaner Head
- Crevice Tool
- 2-in-1 Soft Dusting Brush
- Length Adjustable Extension Wand
- Adapter
- User Manual



Figure 1: All components included with the Tikom V500 vacuum cleaner.

SETUP

1. Assembly

Assemble the main unit, extension wand, and motorized cleaner head. Ensure all connections click securely into place.



Figure 2: Visual guide for assembling the vacuum components.

2. Charging the Battery

The Tikom V500 features a 6*2000 mAh rechargeable battery. You can charge the battery in two ways:

1. **Direct Charging:** Detach the battery from the main unit and connect it directly to the adapter.
2. **Wall-Mounted Charging:** Place the entire vacuum onto the wall dock. The battery will charge automatically.

Rechargeable Battery



Figure 3: Battery charging methods for the Tikom V500.

Wall Mount & Flexible Charging

Mount the vacuum on any wall for convenient storage and charge



Figure 4: The vacuum mounted on its wall dock for charging and storage.

3. Wall Dock Installation

The wall dock provides convenient storage and charging. Use the provided screws and plastic expansion anchors to securely mount the dock to a suitable wall surface near a power outlet. Ensure the vacuum cleaner cannot be started while the battery is charging on the dock for safety.

OPERATING INSTRUCTIONS

1. Powering On/Off and Suction Modes

The Tikom V500 features an intuitive LED Smart Touch Screen. This display shows the working status, current suction level, remaining battery percentage, and any malfunction warnings. To power on the vacuum, press the power button. You can effortlessly switch between suction levels (Standard and Max) with a single touch on the screen, allowing you to adapt

to different cleaning needs.

LED Smart Touch Screen

Monitor Machine Status Whenever Needed



**Battery
Indicator**



**Touch
Control**



Figure 5: Close-up of the LED Smart Touch Screen on the vacuum's main unit.

2. Versatility and Attachments

The Tikom V500 is designed for 6-in-1 versatility, easily converting from a stick vacuum to a handheld vacuum, or for use on stairs. This allows you to tackle various cleaning tasks efficiently.

- **Motorized Cleaner Head:** Ideal for carpets, hard floors, and pet hair. Features 6 LED headlights to illuminate dark areas and reveal hidden dust.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas like kitchen crevices or car seats.
- **2-in-1 Soft Dusting Brush:** Suitable for delicate surfaces, upholstery, and pet beds.
- **Length Adjustable Extension Wand:** Use with various attachments for extended reach, such as cleaning ceilings or high shelves.

6 in 1 Easily Converts



Figure 6: The Tikom V500 configured for stick, handheld, and extended reach cleaning.

Never Touch the Mess

Remove Dust Cup Empties Debris in Seconds.



Figure 7: The motorized cleaner head with LED headlights effectively cleaning different floor surfaces.

3. Maneuverability

The vacuum cleaner head offers 90° vertical and 180° horizontal rotation, making it easy to navigate around furniture and clean hard-to-reach areas with precision.

MAINTENANCE

1. Emptying the Dust Cup

The 1.3L dust cup features a hygienic one-touch emptying design for quick disposal of dirt and debris. This large capacity allows for multiple cleaning sessions without frequent emptying.

Never Touch the Mess

Remove Dust Cup Empties Debris in Seconds.



Figure 8: Demonstrating the one-touch dust cup emptying process.

2. Filter Cleaning

The vacuum cleaner is equipped with a 7-stage HEPA Filtration Cyclone System that captures 99.99% of microscopic dust particles. The HEPA filter is detachable and washable. Regularly clean the filter to maintain optimal suction performance and prevent secondary pollution. Allow the filter to air dry completely before reinserting.

Clean Multiple Floor Types and Debris



Figure 9: Exploded view of the 7-stage HEPA filtration system.



Figure 10: Instructions for cleaning the detachable HEPA filter.

3. Anti-Tangle Design

The motorized cleaner head features an anti-tangle design to minimize hair wrapping around the brush roll, ensuring consistent cleaning performance. Periodically check the brush roll for any entangled hair or debris and remove as necessary.

TROUBLESHOOTING

If you encounter any issues with your Tikom V500, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged; Battery not properly inserted.	Charge the battery fully; Ensure battery is securely clicked into place.
Reduced suction power	Dust cup full; Filter clogged; Brush roll tangled.	Empty the dust cup; Clean the HEPA filter; Remove tangled hair from brush roll.
LED screen displaying error	Specific malfunction.	Refer to the LED screen's specific error code (if any) and consult the manufacturer's support for detailed guidance.

For issues not listed above, please contact Tikom customer support.

SPECIFICATIONS

Feature	Detail
Brand	Tikom
Model Name	V500
Motor Wattage	450W
Suction Power	Up to 40Kpa
Filter Type	HEPA Filter (7-stage Cyclone System)
Dust Cup Capacity	1.3 Liters
Battery Type	Lithium-Ion (6*2000 mAh)
Runtime	Up to 32 minutes (Low Suction)
Noise Level	70 dB
Product Dimensions	12.8"L x 7.3"W x 17.13"H
Item Weight	5.5 pounds
Control Method	Touch

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Tikom V500 Cordless Vacuum Cleaner, please contact Tikom customer service. Refer to the product packaging or the official Tikom website for the most up-to-date contact details.

Each item has a unique code that Tikom verifies before shipping, ensuring product authenticity.

© 2024 Tikom. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question