

[Manuals.plus](#) /

> [Veken](#) /

> Veken 39.4" Small Electric Standing Desk Instruction Manual

Veken ODHOME123

Veken 39.4" Small Electric Standing Desk Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Veken 39.4" Small Electric Standing Desk. This height-adjustable desk is designed to enhance your workspace by allowing seamless transitions between sitting and standing positions. Key features include a durable wood-textured desktop, electric height adjustment, memory presets, a safety lock, and a sedentary reminder function.

Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SETUP INSTRUCTIONS

Assembly of the Veken Electric Standing Desk is required. All necessary accessories are pre-labeled, and the holes are pre-drilled for convenience. A screwdriver is recommended for assembly. Please note that the desktop is provided in two pieces, which are joined during assembly.

QUICK AND SIMPLE INSTALLATION

All Holes Pre-drilled, All Accessories Pre-labeled Clearly



Image: The desk includes integrated cable clips and headphone hooks for organization.

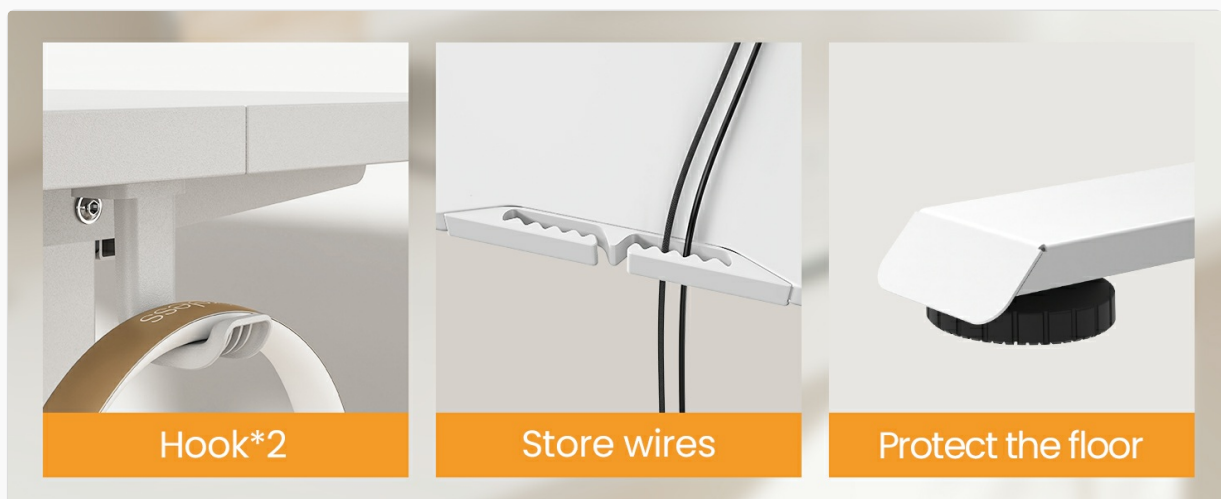


Image: Included accessories such as headphone hooks, cable clips, and feet pads are designed for user convenience and floor protection.

OPERATING INSTRUCTIONS

Your Veken Electric Standing Desk offers smooth and quiet height adjustment, allowing you to easily switch

between sitting and standing positions. The desk can be adjusted from a minimum height of 28.3 inches to a maximum height of 46.5 inches.

Height Adjustment

Use the up and down arrows on the control panel to manually adjust the desk height. The current height is displayed on the digital screen.

Memory Presets

The control panel features memory preset buttons (e.g., 1, 2, 3) to store your preferred sitting and standing heights. To set a memory position, adjust the desk to your desired height, then press and hold a memory button until the display flashes or beeps, indicating the position is saved.

Safety Lock

Activate the safety lock feature on the control panel to prevent accidental height adjustments. This is particularly useful in households with children or pets.

Sedentary Reminder

The integrated sedentary reminder can be set to prompt you to change positions after a customizable period, promoting healthier work habits.



Image: The desk allows for smooth and effortless transitions between sitting and standing positions.

MAINTENANCE

To ensure the longevity and optimal performance of your Veken Electric Standing Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desktop surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Surface Care:** The desktop features a scratch-resistant and corrosion-resistant laminated engineered wood surface. While durable, avoid placing extremely hot items directly on the surface without protection.
- **Motor Care:** Keep the motor and lifting columns free from dust and debris. Do not attempt to lubricate the motor or internal mechanisms.
- **Cable Management:** Regularly check and organize cables using the provided cable clips to prevent tangles and damage.
- **Tighten Fasteners:** Periodically check all screws and bolts to ensure they are securely tightened, especially after initial assembly and a few weeks of use.



Image: The desktop is designed to be scratch-resistant and corrosion-resistant for long-term durability.

TROUBLESHOOTING

If you encounter issues with your Veken Electric Standing Desk, refer to the following common solutions:

- **Desk Not Adjusting:** Ensure all cables are securely connected to the control box and power outlet. Check if the safety lock is engaged.
- **Uneven Height Adjustment:** This may indicate a loose connection in the control rod mechanism. Carefully flip the desk and ensure the set screw connecting the control rod is fully tightened.
- **Motor Noise:** A slight motor noise during adjustment is normal. If the noise is excessive or unusual, ensure the desk is on a level surface and that no obstructions are interfering with the lifting columns. Always use the desk in a well-ventilated area to avoid prolonged exposure to motor noise.
- **Control Panel Unresponsive:** Disconnect the power for 10-15 seconds, then reconnect. This may reset the control system.

If problems persist after attempting these solutions, please contact customer support.

SPECIFICATIONS

DESK DIMENSIONS



Image: Detailed dimensions of the Veken 39.4" Electric Standing Desk.

Feature	Detail
Model Number	ODHOME123
Product Dimensions (D x W x H)	23.64" x 39.4" x 28.3"
Height Adjustment Range	28.3 Inches (Min) to 46.5 Inches (Max)
Desktop Material	Engineered Wood (Laminated, Wood Texture)
Base Material	Carbon Steel
Item Weight	37 Pounds
Maximum Weight Recommendation	154 Pounds
Lifting Mechanism	Electric

Included Components	2 Headphone Hooks, Cable Clip, User Manual, Control Panel Instruction, 4 Feet Pads
Assembly Required	Yes (Recommended 2 people, screwdriver needed)



Image: The desk is designed to support a maximum weight of 154 pounds (69.85 kg).



Image: The desk features a high-efficiency electric motor for smooth and reliable height adjustments.

WARRANTY & SUPPORT

Warranty Information

The Veken Electric Standing Desk comes with a **2-Year Limited Warranty**. This warranty covers manufacturing defects and ensures the product meets quality standards under normal use. Please retain your proof of purchase for warranty claims.

Safety Information

Always use the desk in a well-ventilated area. Be cautious when adjusting the desk height to prevent injury. Always engage the safety lock when the desk is not in use, especially if children or pets are present.

Customer Support

For any questions, concerns, or technical assistance, please refer to the contact information provided in your product packaging or visit the official Veken website. Our customer service team is available to assist you.

