

[Manuals.plus](#) /

› [Gahenwo](#) /

› Gahenwo 68-inch All-in-1 Selfie Stick Tripod Instruction Manual

Gahenwo YJ98

Gahenwo 68-inch All-in-1 Selfie Stick Tripod Instruction Manual

Model: YJ98

Brand: Gahenwo

1. INTRODUCTION

Thank you for choosing the Gahenwo 68-inch All-in-1 Selfie Stick Tripod. This versatile device combines the functionality of a selfie stick, a handheld monopod, and a stable tripod, designed for use with smartphones and action cameras. Its compact and lightweight design makes it an ideal companion for capturing photos, videos, live streams, and vlogs in various settings.

2. PACKAGE CONTENTS

- Gahenwo Selfie Stick Tripod (Model YJ98)
- Detachable Bluetooth Remote Control
- Phone Holder
- Action Camera Adapter (1/4" screw compatible)
- Charging Cable for Remote Control

3. PRODUCT OVERVIEW



The Gahenwo Selfie Stick Tripod is engineered for convenience and stability. It features an 8-section retractable aluminum alloy pole, a 1-button unlock tripod design, and a detachable remote control. The device is compatible with both smartphones and action cameras like GoPro or Insta360.

Key Features:

- **All-in-1 Design:** Seamlessly switches between selfie stick, handheld monopod, and tripod modes.
- **Extendable Height:** Adjustable from 11.8 inches (30 cm) to 68 inches (173 cm) for diverse shooting needs.
- **Versatile Shooting Angles:** Phone stand head supports 360° horizontal rotation and 110° vertical rotation. The phone clamp can also rotate 360° for quick horizontal/vertical screen switching.
- **Detachable Bluetooth Remote Control:** Rechargeable remote for hands-free photo and video capture up to 10 meters away. Compatible with iOS 7.0+ and Android 5.0+ devices.
- **Enhanced Stability:** Tripod legs extend to 8.3 inches (21 cm) in length with a 13.5-inch (34.5 cm) base side

length for increased stability.

- **Wide Compatibility:** Equipped with a 1/4" screw, suitable for cell phones, GoPro, Insta360, and DJI action cameras.
- **Lightweight & Portable:** Weighs only 0.69 lb (311.1 g) and folds to 11.8 inches (30 cm) for easy transport.

4. SETUP

4.1 Unfolding the Tripod

1. Hold the main body of the selfie stick tripod.
2. Locate the 'BUTTON' at the bottom of the handle.
3. Press the 'BUTTON' to release the three tripod legs.
4. Gently pull the legs outwards until they are fully extended and stable.



Image: The tripod base with legs extended, highlighting the release button and leg dimensions for stability.

4.2 Attaching Your Device (Phone or Action Camera)

1. **For Smartphones:** Screw the phone holder onto the 1/4" screw at the top of the selfie stick. Ensure it is tightened securely. Place your smartphone into the spring-loaded clamp.
2. **For Action Cameras (GoPro/Insta360/DJI):** Attach the provided action camera adapter to the 1/4" screw at the top of the selfie stick. Then, mount your action camera onto the adapter using its standard mounting mechanism.



Image: Illustration of how to attach different devices like phones, fill lights, and action cameras using the 1/4" screw and adapter.

4.3 Pairing the Bluetooth Remote Control

1. Remove the detachable remote control from its storage slot on the handle.
2. Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).

3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select the device named 'Gahenwo' or similar (refer to remote for specific name) to pair.
5. Once paired, the indicator light on the remote will stop flashing.



Image: The detachable remote control, illustrating its placement on the selfie stick handle.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Height

1. To extend the selfie stick, gently pull the top section upwards. The 8-section aluminum alloy pole will extend smoothly.
2. Adjust to your desired height, from 11.8 inches (30 cm) to a maximum of 68 inches (173 cm).
3. To retract, push the pole downwards until it is fully collapsed.

Adjustable up to 68in in Height

8-section aluminum pole, adjust the height from **11.8in-68in**

Folded size
11.8"/30cm

Desktop tripod
14.3"/36.5cm

Standing use
31"/78cm

Max height
68in/173cm



Image: Visual representation of the tripod's height adjustments, from folded to desktop, standing, and maximum extension.

5.2 Adjusting Shooting Angles

1. **Horizontal Rotation:** The phone stand head can rotate 360° horizontally. Loosen the knob, adjust the angle, and tighten to secure.
2. **Vertical Rotation:** The phone stand head supports 110° vertical rotation. Loosen the knob, tilt to your desired angle, and tighten to secure.
3. **Phone Clamp Rotation:** The phone clamp itself can rotate 360°. Use the adjustment knob on the clamp to switch between horizontal and vertical screen orientations without tilting the entire head.

360°
rotation



110°
angle adjustment



Remote control
storage slot



**Vertical and horizontal screen &
110° rotation vertically**



Image: Illustrations demonstrating the 360° rotation, 110° angle adjustment, and the remote control storage slot.

5.3 Using the Remote Control

1. Ensure the remote control is paired with your smartphone (see Section 4.3).
2. Open your smartphone's camera application.
3. Press the button on the remote control to capture photos or start/stop video recording.
4. When not in use, store the remote control back in its designated slot to prevent loss.

5.4 Switching Between Modes

1. **Selfie Stick/Monopod Mode:** Keep the tripod legs folded and retracted. Hold the handle firmly.
2. **Tripod Mode:** Press the 'BUTTON' to extend the tripod legs for stability on a flat surface. Extend the pole to your desired height.

All-in-1 Design Tripod

Versatile tripod with detachable remote can be used as a action camera/cell phone tripod or as a selfie stick.



Image: Visual guide to the tripod's multi-functional design, showing its transformation between different modes.

6. MAINTENANCE

- Clean the device with a soft, dry cloth. Avoid harsh chemicals or abrasive materials.
- Store the tripod in a cool, dry place when not in use.
- Ensure the remote control is charged regularly to maintain functionality.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- The aluminum alloy construction is rust-resistant, allowing for safe use even in rainy conditions, but prolonged exposure to water is not recommended.

7. TROUBLESHOOTING

7.1 Remote Control Not Connecting

- Ensure the remote control is charged.
- Check if Bluetooth is enabled on your smartphone.
- Unpair and re-pair the remote control in your smartphone's Bluetooth settings.
- Ensure the remote is within the 10-meter operating range.

7.2 Tripod Instability

- Ensure the tripod legs are fully extended and locked into place.
- Place the tripod on a flat, stable surface.
- Avoid extending the pole to its maximum height in windy conditions or on uneven terrain.

7.3 Phone Not Fitting in Clamp

- The phone clamp is designed to accommodate most 4-7 inch cell phones.
- Ensure your phone is within this size range.
- Remove any bulky phone cases if necessary.

8. SPECIFICATIONS

Feature	Detail
Model Number	YJ98
Brand	Gahenwo
Material	Acrylonitrile Butadiene Styrene (ABS), Aluminum, Plastic
Item Weight	311.1 Grams (0.69 lb)
Folded Length	11.8 inches (30 cm)
Maximum Height	68 Inches (173 cm)
Minimum Height	30 Centimeters
Tripod Leg Length	8.3 inches (21 cm)
Tripod Base Side Length	13.5 inches (34.5 cm)
Compatible Devices	Camera, Smartphone (iOS 7.0+, Android 5.0+)
Special Features	1/4" screw and cold shoe, Lightweight, Remote Control, Slip Resistant, Telescopic
Batteries	1 Lithium Polymer battery required (included)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Gahenwo customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question