

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Instax Mini SE Instant Camera User Manual

Fujifilm FUJI INSTAX MINI SE LAVENDER

Fujifilm Instax Mini SE Instant Camera User Manual

Model: FUJI INSTAX MINI SE LAVENDER | Brand: Fujifilm

INTRODUCTION

The Fujifilm INSTAX Mini SE Camera is designed for capturing and instantly printing memorable moments. This compact and stylish instant camera is perfect for both travel and everyday use, delivering good quality photos, especially in natural light. This manual provides essential information for setting up, operating, and maintaining your camera.



Figure 1: Front angled view of the Fujifilm Instax Mini SE camera, showcasing its compact design.

WHAT'S IN THE BOX

- Fujifilm INSTAX Mini SE Instant Camera Body
- Camera Case
- Photo Album
- INSTAX Mini Instant Film Pack (10 sheets)
- Sticker Frames (20 pieces)
- AA Batteries (4 included)

SETUP

1. Battery Installation

Locate the battery compartment on the side of the camera. Open the cover and insert four AA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.



Figure 2: Side view of the camera, indicating the battery compartment.

2. Film Loading

Open the film compartment door on the back of the camera. Align the yellow mark on the film pack with the yellow mark on the camera. Insert the film pack straight into the compartment. Close the film compartment door. The film counter will display 'S' (Start) and then '10' after the first dark slide is ejected upon turning on the camera.



Figure 3: Rear view of the camera, showing the film compartment.

OPERATING THE CAMERA

1. Turning On/Off

To turn on the camera, press the power button located next to the lens. The lens will extend. To turn off, gently push the lens back into the camera body.

2. Taking Photos

Look through the viewfinder to frame your shot. The camera automatically adjusts brightness. For best results, especially in natural light, ensure your subject is well-lit. Press the shutter button to take a picture.



Figure 4: Front view of the camera, showing the lens and shutter button.

3. Film Ejection

After taking a photo, the film will automatically eject from the top slot of the camera. Allow the photo to develop for a few minutes in a warm, dark place for optimal results.

MAINTENANCE

Cleaning

Gently wipe the camera body with a soft, dry cloth. For the lens, use a lens cleaning cloth. Avoid using abrasive

cleaners or solvents. Keep the film ejection slot clear of debris.

Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Camera not turning on:** Check if the batteries are inserted correctly and are not depleted. Replace with new AA batteries if necessary.
- **Film not ejecting:** Ensure there is film loaded in the camera and that the film compartment door is securely closed. Check the film counter to see if it indicates film remaining.
- **Photos are too dark/light:** The camera has automatic exposure. Ensure the flash is not covered and that you are shooting in appropriate lighting conditions. Natural light often yields the best results.
- **Blank photos:** This may indicate an issue with the film pack or the camera's internal mechanism. Try a new film pack.

If problems persist, please contact Fujifilm customer support.

SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	Instax Mini SE
Item Model Number	FUJI INSTAX MINI SE LAVENDER
Film Format Type	Instax Mini
Film Color	Color
Exposure Control Type	Automatic
Shutter Type	Mechanical
Batteries	4 AA batteries (included)
Item Weight	1.23 pounds (0.56 Kilograms)
Package Dimensions	6.34 x 5.59 x 3.9 inches

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Fujifilm website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Official Fujifilm Website: www.fujifilm.com

© 2024 Fujifilm. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question