

Merax SA00324

Merax 46.3" Chenille Accent Chair Instruction Manual

Model: SA00324

INTRODUCTION

Thank you for choosing the Merax 46.3" Chenille Accent Chair. This manual provides essential information for the safe assembly, proper use, and maintenance of your new chair. Please read these instructions carefully before assembly and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Keep away from open flames or high heat sources to prevent fire hazards.
- Supervise children and pets around the chair to avoid entrapment risks or injury.
- Ensure all components are securely fastened before use. Periodically check and tighten all connections.
- Do not stand on the chair or use it as a step stool.
- Avoid placing heavy objects on the armrests.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact Merax customer service.

- Accent Chair Frame (1)
- Seat Cushion (1)
- Backrest Cushion (1)
- Throw Pillows (2)
- Legs (4)
- Assembly Hardware (screws, washers, Allen wrench)
- Assembly Instructions (this manual)

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully.

1. **Unpack all components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Locate the pillows:** The two throw pillows are placed inside the armrests for shipping. Gently remove them before proceeding with assembly.



Figure 1: Pillows are stored inside the armrests. Remove them before assembly.

3. **Attach the legs:** Turn the chair frame upside down. Attach each of the four legs to the designated corners of the chair base using the provided screws and Allen wrench. Ensure they are tightened securely.



Figure 2: Securely attach the legs using the provided hardware and Allen wrench.

4. **Position the cushions:** Place the seat cushion onto the chair frame. Then, position the backrest cushion and the two throw pillows as desired.
5. **Final check:** Verify that all connections are tight and the chair is stable before use.

OPERATING INSTRUCTIONS

The Merax Chenille Accent Chair is designed for comfortable seating in living rooms, offices, or apartments. It is intended for indoor use only.

- **Seating:** Use the chair for sitting and lounging. The generous 33.9" wide seat cushion provides ample space.
- **Pillow Adjustment:** Adjust the two included throw pillows for optimal back or lumbar support.
- **Placement:** Position the chair on a flat, stable surface.



Figure 3: The Merax Chenille Accent Chair ready for use.

Product Overview Video



Video 1: An overview of the Merax Accent Armchair, showcasing its design and features. (Duration: 0:24)

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your Merax Accent Chair.

- **Cleaning Covers:** The pillow, backrest, and seat cushion covers are removable and washable. Follow the care instructions on the fabric label for best results. Typically, machine wash cold on a gentle cycle and tumble dry low, or air dry.
- **Spot Cleaning:** For small spills, blot immediately with a clean, dry cloth. Avoid rubbing, which can spread the stain. Use a mild fabric cleaner if necessary, testing on an inconspicuous area first.
- **Frame Cleaning:** Wipe the chair frame and legs with a soft, damp cloth. Avoid harsh chemicals.

- **Regular Maintenance:** Periodically vacuum the chair to remove dust and debris. Fluff cushions and pillows regularly to maintain their shape and comfort.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.



High Density Comfortable Chenille Fabric



Elegant Rubberwood Leg



Pillow, backrest and seat cushion cover are removable and washable

32.3" Wide Seat width

Figure 4: High-density chenille fabric and rubberwood leg detail. Cushion covers are removable and washable.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair feels wobbly	Loose leg connections or uneven floor.	Ensure all leg screws are tightened securely. If the floor is uneven, place a small shim under the affected leg.
Cushions appear flat	Normal compression from use.	Fluff cushions and pillows regularly to restore their shape and loft.

Problem	Possible Cause	Solution
Fabric fading	Prolonged exposure to direct sunlight.	Relocate the chair away from direct sunlight or use curtains/blinds to protect it.

SPECIFICATIONS

Feature	Detail
Brand	Merax
Model Number	SA00324
Product Dimensions (D x W x H)	36.2"D x 46.3"W x 33.1"H
Item Weight	40 Pounds
Seating Capacity	1
Upholstery Fabric Type	Chenille
Frame Material Type	Wood
Furniture Leg Material	Rubberwood
Fill Material	High Density Foam
Included Throw Pillow Quantity	2
Assembly Required	Yes
Removable Seat Cushion Cover	Yes
Product Care Instructions	Wash Removable Covers



Figure 5: Detailed product dimensions.

WARRANTY AND SUPPORT

Merax stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Merax website.

If you encounter any issues or have questions regarding your Merax 46.3" Chenille Accent Chair, please contact Merax customer support for assistance. You can typically find contact information on the Merax website or on your purchase documentation.

Merax Official Website: [Visit the Merax Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question