

[Manuals.plus](#) /

› [Audio Pro](#) /

› Audio Pro A10 MKII Wireless Multiroom Speaker User Manual

Audio Pro A10 MKII-WiiM Edition

Audio Pro A10 MKII Wireless Multiroom Speaker, WiiM Edition User Manual

Model: A10 MKII-WiiM Edition

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your Audio Pro A10 MKII Wireless Multiroom Speaker. Designed for high-fidelity audio, this speaker offers versatile connectivity options including Bluetooth, WiFi, AirPlay 2, Google Cast, and integration with the WiiM Home App.

WHAT'S IN THE BOX

- A10 MKII Wireless Speaker
- Power Cable
- Quick Start Guide



The Audio Pro A10 MKII speaker in dark gray, showcasing its cylindrical design and fabric finish.

SETUP

Initial Connection

1. **Step 1: Power Connection**

Plug the provided power cable into the speaker's power input port and then into a wall outlet.

2. **Step 2: Wi-Fi Setup via WiiM Home App**

Download the WiiM Home App from your device's app store. Open the app and follow the on-screen instructions to connect your A10 MKII speaker to your Wi-Fi network. This process typically takes 30-60 seconds for initial setup.

3. **Step 3: Configure Music Services**

Within the WiiM Home App, configure your preferred music streaming services and link your accounts to begin streaming high-resolution audio instantly.



Visual guide illustrating the three simple steps for setting up the speaker: plug in, connect via WiiM Home App, and configure music.

Physical Connections

The A10 MKII speaker features various input options on its rear panel for wired connections.



The back of the Audio Pro A10 MKII speaker, highlighting the power input, AUX input, and reset button.

OPERATING

Control Panel Overview


The top panel of the A10 MKII speaker features intuitive controls for power, playback, volume, and input selection.



Close-up of the speaker's top panel, showing buttons for power, play/pause, volume up/down, Bluetooth pairing, Wi-Fi, and four preset buttons.

Key Features and Functions

- **Crystal-Clear Hi-Res Audio:** Stream music in stunning clarity with support for up to 192 kHz/32-bit, delivering studio-quality sound.
- **Powerful 50W Output:** Equipped with a woofer, BMR tweeter, and dual low-frequency radiators, providing rich, detailed sound.
- **Seamless Streaming & Multi-Service Support:** Access over 20 popular music services via the WiiM Home App or stream directly via Apple AirPlay, Google Cast, and Spotify Connect.
- **Built-In Room Correction:** Automatically adapts to your room's acoustics, optimizing sound quality for the best audio performance.
- **Hands-Free Voice Control:** Effortlessly control your music with Google Assistant or Siri.

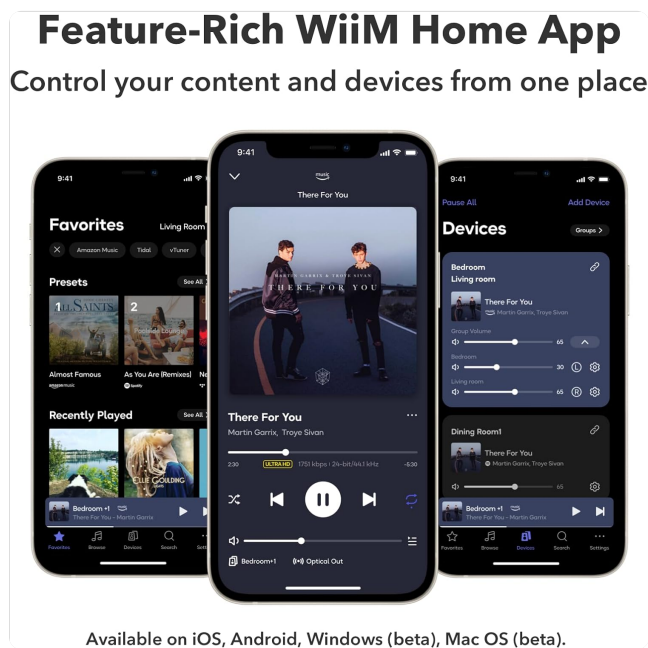

Screenshots of the WiiM Home App interface, demonstrating music playback, device control, and access to various streaming services.

Multi-Room Audio & Stereo Pairing

Control multiple speakers in different rooms or pair two A10 MKII speakers for a stereo experience using the WiiM Home App.



An illustration depicting multiple Audio Pro speakers placed in different rooms, controlled by the WiiM Home App for a multi-room audio experience.

Official Product Video: WiiM Home App Guide

This video provides a comprehensive guide to using the WiiM Home App, covering setup, multi-room management, streaming services, smart presets, alarm/sleep timers, room correction, equalizer settings, and seamless device switching.

MAINTENANCE

To ensure the longevity and optimal performance of your Audio Pro A10 MKII speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surfaces. Avoid using liquid cleaners or abrasive materials.
- **Placement:** Place the speaker on a stable, flat surface. Avoid direct sunlight, heat sources, or areas with high humidity.
- **Ventilation:** Ensure proper ventilation around the speaker to prevent overheating. Do not block any ventilation openings.
- **Power Off:** If the speaker will not be used for an extended period, unplug it from the power outlet.

TROUBLESHOOTING

If you encounter issues with your Audio Pro A10 MKII speaker, refer to the following common troubleshooting steps:

Problem	Possible Solution
No power	Check if the power cable is securely connected to both the speaker and the wall outlet. Try a different outlet.
No sound	Ensure the volume is not muted or set too low. Verify the correct input source is selected in the WiiM Home App or via the speaker's controls. Check audio cables if using AUX input.
Cannot connect to Wi-Fi	Ensure your Wi-Fi network is active and within range. Restart your router and the speaker. Re-attempt Wi-Fi setup through the WiiM Home App.
Bluetooth pairing issues	Ensure the speaker is in Bluetooth pairing mode (BT indicator blinking). Make sure your device's Bluetooth is enabled and visible. Forget the speaker from your device's Bluetooth list and try pairing again.
Sound distortion	Reduce the volume. Check the audio source quality. Adjust equalizer settings in the WiiM Home App.

SPECIFICATIONS

- Model Name:** A10 MKII-WiiM Edition Speaker
- Speaker Type:** Multi Room
- Special Features:** AirPlay 2, Google Cast, Spotify Connect, TIDAL Connect, DLNA, SqueezeLite
- Compatible Devices:** Desktop, Laptop, Smartphone, Tablet
- Controller Type:** Google Assistant, Siri
- Surround Sound Channel Configuration:** 2.0
- Color:** Dark Gray
- Product Dimensions:** 5.51"D x 5.5"W x 7.64"H
- Item Weight:** 3.1 Pounds
- Maximum Range:** 100 Feet (Wireless)
- Control Method:** App, Voice
- Wireless Communication Technology:** Airplay, Bluetooth, Wi-Fi
- Speaker Size:** 3 Inches (Woofer), 1.25 Inches (Tweeter)
- Power Source:** Corded Electric
- Speaker Maximum Output Power:** 50 Watts
- Connectivity Technology:** Bluetooth, Auxiliary, Wi-Fi

Audio Output Mode: Stereo
Mounting Type: Wall Mount (accessories sold separately)

WARRANTY AND SUPPORT

Your Audio Pro A10 MKII speaker comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Audio Pro website.

For technical support, troubleshooting assistance beyond this manual, or customer service inquiries, please contact Audio Pro customer support through their official website or the WiiM Home App's in-app feedback feature. An active user community and in-app feedback are available for rapid problem resolution.

© 2025 Audio Pro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question