

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [acer](#) /
- › [Acer OMR242 Wireless Mouse User Manual](#)

acer OMR242

Acer OMR242 Wireless Mouse User Manual

Model: OMR242

PRODUCT OVERVIEW

The Acer OMR242 is a slim, portable 2.4G wireless mouse designed for seamless connectivity and comfortable use across various devices. It features adjustable DPI settings for precise control and an efficient power management system.



Image: The Acer OMR242 wireless mouse in black, shown alongside its compact USB receiver.

PACKAGE CONTENTS

- Acer OMR242 Wireless Mouse
- USB Receiver
- User Manual (this document)

Note: AAA batteries are not included and must be purchased separately.

SETUP GUIDE

1. Installing Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Illustration showing the battery compartment and the storage location for the USB receiver on the mouse's underside.

2. Connecting the USB Receiver

1. Remove the USB receiver from its storage slot in the battery compartment of the mouse.
2. Plug the USB receiver into an available USB-A port on your computer (laptop, desktop, PC, Chromebook, iMac, etc.).
3. The computer should automatically detect and install the necessary drivers. No additional software installation is required.



Work with Devices with USB A Port

Image: The compact USB receiver plugged into the side of a laptop, with the Acer wireless mouse positioned nearby.

OPERATING INSTRUCTIONS

Mouse Buttons and Functions

Button Description

Left Button

Scroll Wheel

Right Button

DPI Adjustment Button



Power Switch

Sensor

2 ×AAA Battery (Not included)



USB Receiver Stored

acer
Gadget

Image: A diagram illustrating the various buttons and components of the Acer OMR242 wireless mouse, including the left button, scroll wheel, right button, DPI adjustment button, power switch, sensor, and battery compartment.

- **Left Button:** Standard click function.
- **Right Button:** Standard right-click function.
- **Scroll Wheel:** Scroll up or down through documents and web pages. Can also be clicked for middle-click functionality.
- **DPI Adjustment Button:** Located below the scroll wheel. Press to cycle through DPI settings.
- **Power Switch:** Located on the underside of the mouse. Slide to turn the mouse ON or OFF.

Adjusting DPI (Sensitivity)

The mouse offers three adjustable DPI levels: 800, 1200, and 1600. DPI (Dots Per Inch) determines how sensitive the mouse cursor is to movement. A higher DPI means the cursor moves further with less physical mouse movement.

1. To change the DPI setting, press the DPI adjustment button located on the top of the mouse, below the scroll wheel.
2. Each press will cycle to the next DPI level (800 → 1200 → 1600 → 800).
3. Select the DPI level that best suits your task and screen resolution.

3-Level Adjustable DPI

The Cursor Sensitivity Can be Easily Changed Depending on Your Needs

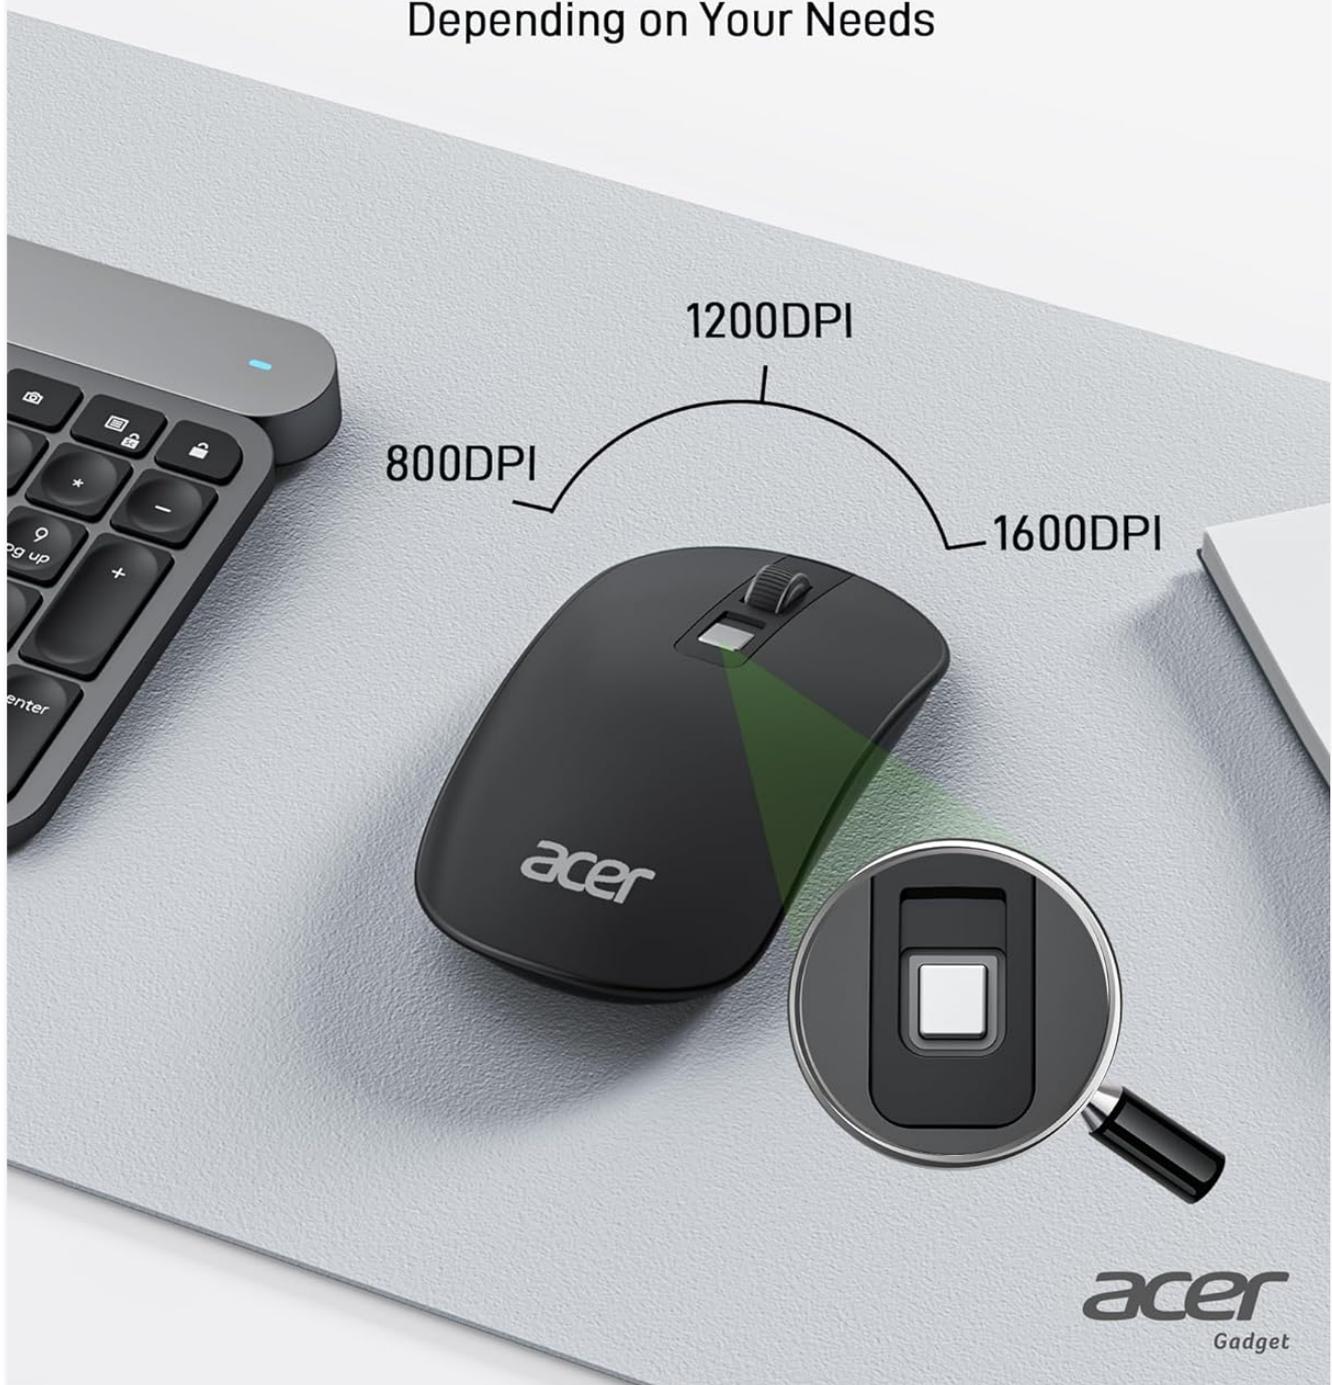


Image: A visual representation of the 3-level adjustable DPI settings (800, 1200, 1600) and how to change them using the DPI button on the mouse.

Power Saving Mode

To conserve battery life, the mouse automatically enters sleep mode after 10 minutes of inactivity. To wake the mouse, simply click any button.

MAINTENANCE

Cleaning the Mouse

- Use a soft, dry cloth to wipe the surface of the mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the mouse's finish.
- Do not immerse the mouse in water or any liquid.

Battery Replacement

When the mouse performance degrades or stops responding, it is likely time to replace the batteries. Follow the "Installing Batteries" steps in the Setup Guide to replace the two AAA batteries.

Battery life typically ranges from 3 to 6 months, depending on usage and computing conditions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding	Low or dead batteries. Mouse is turned off. USB receiver not properly connected. Out of range.	Replace batteries. Turn on the mouse using the power switch. Ensure USB receiver is firmly plugged into a working USB port. Try a different port. Ensure the mouse is within the valid range of 32.8 feet (10 meters) from the receiver.
Cursor movement is erratic or jumpy	Dirty sensor. Using on an unsuitable surface. Low battery.	Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective, opaque surface or a mouse pad. Replace batteries.
Lag or delay in response	Interference from other wireless devices. Distance from receiver.	Move the mouse closer to the USB receiver. Move other wireless devices away from the mouse and receiver.

SPECIFICATIONS

Model Number	OMR242
Connectivity Technology	2.4G Wireless (USB Receiver)
DPI Settings	800 / 1200 / 1600 adjustable DPI

Buttons	4 Buttons (Left, Right, Scroll Wheel, DPI Adjustment)
Power Source	2 x AAA Batteries (not included)
Wireless Range	Up to 32.8 feet (10 meters)
Dimensions (L x W x H)	4.5 x 2.6 x 0.04 inches (11.43 x 6.6 x 0.1 cm)
Item Weight	1.98 ounces (56 grams)
Compatibility	Windows, macOS, Linux, Chrome OS

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Acer support website or contact Acer customer service. Details can typically be found on the product packaging or the Acer official website. You may also find additional support resources and FAQs on the [Acer Store on Amazon](#).
