



Manuals.plus /

› Shiptree /

› Shiptree Wireless Controller User Manual

Shiptree B0DJ2FJVTH

Shiptree Wireless Controller User Manual

Brand: Shiptree

Model: Wireless Controller for PS-4/Slim/Pro (ASIN: B0DJ2FJVTH)

INTRODUCTION

Thank you for choosing the Shiptree Wireless Controller. This high-performance game controller is designed for seamless compatibility with PS-4, PS-4 Slim, and PS-4 Pro consoles. It features advanced functionalities such as dual vibration, a 6-axis gyro sensor, a responsive touch panel, and a 3.5mm audio jack, providing an immersive gaming experience. Additionally, it includes two programmable buttons and a Turbo function for enhanced gameplay customization. Please read this manual carefully to ensure proper use and maintenance of your controller.



Figure 1: Front view of the Shiptree Wireless Controller.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present.

- 1 x Shiptree Wireless Controller
- 1 x USB Charging Cable (1.0M)
- 1 x User Manual



Figure 2: Front of the Shiptree Wireless Controller retail box, showing the controller, USB cable, and manual icons.

SETUP AND INITIAL CONNECTION

First-Time Pairing with PS-4 Console

1. Ensure your PS-4 console is powered on.
2. Connect the Shiptree Wireless Controller to your PS-4 console using the provided USB charging cable.
3. Press the "PS" button (Home button) on the controller. The light bar on the controller will flash and then glow steadily, indicating successful pairing.
4. Once paired, you can disconnect the USB cable to use the controller wirelessly. The controller will automatically connect via Bluetooth for future use.

Charging the Controller

The controller has a built-in 800mAh rechargeable battery.

- Connect the controller to your PS-4 console or a standard USB charger (5V/1A) using the provided USB cable.
- The light bar will slowly flash orange during charging.
- The light bar will turn off when fully charged. A full charge takes approximately 3 hours.
- A fully charged controller provides approximately 8-10 hours of continuous gameplay.

Wireless Controller für PS4/Pro/Slim



Figure 3: Controller connected via USB cable, illustrating key features.



Figure 4: Battery life and charging time details.

OPERATING INSTRUCTIONS

Basic Controls

The Shiptree Wireless Controller features standard PS-4 button layouts, including:

- **Directional Pad (D-Pad):** For directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.
- **Left and Right Analog Sticks:** For precise movement and camera control.
- **L1/R1 and L2/R2 Buttons:** Shoulder and trigger buttons.
- **SHARE Button:** For sharing gameplay content.
- **OPTIONS Button:** For in-game menus and options.
- **PS Button (Home Button):** To access the PS-4 home screen.
- **Touchpad:** A responsive multi-touch surface for specific game interactions.
- **3.5mm Audio Jack:** For connecting headphones or headsets.

Hochempfindliches Touchpad



Figure 5: High-sensitivity touchpad for interactive gameplay.

Advanced Features

6-Axis Gyroscope & Dual Vibration

The controller integrates a 6-axis gyroscope for precise motion sensing, enhancing immersive gameplay. Built-in dual vibration motors provide tactile feedback, reacting accurately to in-game events like explosions, impacts, and environmental effects.

Doppelte Vibration und 6-Achsen-Somatosensorik

Steuern sie das spiel durch schwingen, um den spielspaß zu steigern



Figure 6: Experience enhanced immersion with dual vibration and 6-axis motion control.

Turbo Function

The Turbo function allows for rapid, automatic button presses, which can be useful in certain games.

- To activate Turbo: Press and hold the **Turbo button** (located below the touchpad) and then press the desired action button (e.g., X, O, Square, Triangle, L1, R1, L2, R2). The button will now rapidly repeat its input when held down.
- To deactivate Turbo: Repeat the same process (hold Turbo button and press the action button again).

Turbo-Funktion

Feuer mit einem klick ausführen



Figure 7: The Turbo function button for rapid input.

Macro Programming (Assignable Advanced Buttons)

The controller features two programmable buttons on the back (often referred to as L3/R3 or paddle buttons). These can be assigned to perform complex sequences or frequently used button combinations, giving you an edge in gameplay. Up to 12 buttons can be freely combined for macro programming.

- Refer to the detailed instructions in the included physical user manual for specific steps on how to program these buttons, as the process can vary.

Zuweisbare erweiterte Schaltflächen

Unterstützt die benutzerdefinierte Marco-programmierung für zwei hintere Tasten, was die einfache bedienung in spielen erleichtert



Figure 8: Assignable advanced buttons on the back of the controller.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. If storing for an extended period, charge the battery to about 50% every few months.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect to PS-4.	Not paired, out of range, low battery, interference.	Ensure controller is charged. Connect via USB cable to PS-4 and press the PS button to re-pair. Ensure controller is within 8 meters of the console. Restart the PS-4 console and the controller.
Buttons or joysticks are unresponsive.	Software glitch, physical damage, low battery.	Charge the controller fully. Reset the controller (locate the small reset hole on the back, use a pin to press for 3-5 seconds). Ensure no debris is lodged around buttons.
Controller does not charge.	Faulty cable, faulty charging port, faulty charger.	Try a different USB cable. Try a different charging port on the PS-4 or a different USB wall adapter. Ensure the cable is fully inserted into both the controller and the charging source.
Vibration or Gyroscope not working.	Game setting, software issue, hardware malfunction.	Check in-game settings to ensure vibration/motion control is enabled. Reset the controller. Ensure the controller's firmware is up to date (if applicable, check manufacturer's website).

SPECIFICATIONS

Feature	Detail
Model	Wireless Controller for PS-4/Slim/Pro (ASIN: B0DJ2FJVTH)
Compatibility	PS-4, PS-4 Slim, PS-4 Pro
Connectivity	Bluetooth (up to 8 meters range), USB wired
Battery Capacity	800mAh Lithium-ion
Playtime	Approx. 8-10 hours (fully charged)
Charging Time	Approx. 3 hours
Dimensions	17.1 x 14 x 7.1 cm (Package dimensions)
Weight	360 g (Package weight)
Key Features	6-Axis Gyroscope, Dual Vibration, Turbo Function, Macro Programming (2 back buttons), Responsive Touch Panel, 3.5mm Audio Jack

WARRANTY AND SUPPORT

Shiptree products are manufactured with high quality standards. For information regarding warranty coverage and support, please refer to the warranty card included with your purchase or visit the official Shiptree website.

If you encounter any issues not covered in the troubleshooting section, or require further assistance, please contact Shiptree customer support through the contact information provided on the product packaging or official website.



