

[Manuals.plus](#) /

› [Jeazans](#) /

› Jeazans Jzpad-A10L Android Tablet 10.1 Inch User Manual

Jeazans Jzpad-A10L

Jeazans Jzpad-A10L Android Tablet 10.1 Inch User Manual

Model: Jzpad-A10L

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Jeazans Jzpad-A10L Android Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.



Image: The Jeazans Jzpad-A10L Android Tablet with its detachable keyboard.

2. GETTING STARTED

2.1. Unboxing Your Tablet Kit

Carefully unpack all items from the box. Ensure all components are present and undamaged.

What's in the box



Keyboard



Mouse



Tablet Case



User Manual



USB-C Cable



5V/2A Charger



Capacitive Stylus



Image: All components included in the Jeazans Jzpad-A10L tablet kit.

The Jeazans Jzpad-A10L tablet kit includes:

- Jeazans Jzpad-A10L Android Tablet
- Bluetooth Keyboard
- Bluetooth Mouse
- Protective Case
- USB-C Cable
- 5V/2A Charger
- Capacitive Stylus
- Headphones

2.2. Initial Charge and Power On

1. Connect the tablet to the provided 5V/2A charger using the USB-C cable. Allow the tablet to charge for at least 30

minutes before first use, or until the battery indicator shows sufficient charge.

2. Press and hold the power button (usually located on the side or top edge) for a few seconds until the Jeazans logo appears on the screen.
3. Follow the on-screen prompts to complete the initial Android 14 setup, including language selection, Wi-Fi connection, and Google account login.

3. SETUP AND CONNECTIVITY

3.1. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle the Wi-Fi switch to the **On** position.
3. Select your desired Wi-Fi network from the list of available networks.
4. Enter the network password if prompted, then tap **Connect**. The tablet supports 802.11ax (Wi-Fi 6) for faster and more stable connections.

3.2. Pairing Bluetooth Accessories

Your tablet kit includes a Bluetooth keyboard and mouse. Follow these steps to pair them:

3.2.1. Connecting the Bluetooth Keyboard

1. Push the power switch on the keyboard to the 'ON' position.
2. Press the 'Connect' button on the keyboard. The Bluetooth indicator light will start flashing.
3. On your tablet, go to **Settings > Connected devices > Bluetooth**. Ensure Bluetooth is enabled.
4. Tap 'Pair new device' and select 'Bluetooth keyboard' from the list to establish a connection.



Image: Visual guide for connecting the Bluetooth keyboard.

3.2.2. Connecting the Bluetooth Mouse

1. Open the battery cover on the back of the mouse and insert the required batteries (not included in the set).
2. Push the power switch on the mouse to the 'ON' position. The Bluetooth indicator light will start flashing.
3. On your tablet, go to **Settings > Connected devices > Bluetooth**. Ensure Bluetooth is enabled.
4. Tap 'Pair new device' and select 'BT5.2 mouse' from the list to establish a connection.

10.1 Inch LCD, Better Visual Experience

Experience stunning visuals on the 10.1-inch IPS touchscreen with 1280x800 resolution and extremely high color contrast for lifelike images.



1280*800 Resolution



Eye-protection(Low blue light)



10" IPS Touchscreen



Vibrant Colors



Image: Visual guide for connecting the Bluetooth mouse.

4. BASIC OPERATION

4.1. Touch Screen Navigation

The 10.1-inch IPS HD touch screen supports standard Android gestures:

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Navigate through screens or scroll content.
- **Pinch:** Zoom in or out on images and web pages.

4.2. Installing Applications

Your tablet comes with Google Play pre-installed, providing access to millions of applications.

1. Open the **Google Play Store** app.
2. Search for the desired application.
3. Tap **Install** to download and install the app.

4.3. Camera Usage

The tablet features a 5MP front camera and an 8MP rear camera.

1. Open the **Camera** app.
2. Switch between front and rear cameras using the icon on the screen.
3. Tap the shutter button to take a photo or start/stop video recording.



Image: Overview of the tablet's camera features and Face Unlock.

4.4. Face Unlock

For convenient and secure access, the tablet supports Face Unlock.

1. Go to **Settings > Security & privacy > Face unlock**.
2. Follow the on-screen instructions to register your face.
3. Once set up, simply look at the front camera to unlock your device.

4.5. Storage Management

The tablet comes with 64GB of internal storage, expandable up to 1TB via a TF (microSD) card.



Image: Storage and memory capabilities of the Jeazans Jzpad-A10L tablet.

1. To insert a TF card, locate the card slot on the side of the tablet and gently push the card in until it clicks.
2. To view storage usage, go to **Settings > Storage**.

5. BATTERY MANAGEMENT

5.1. Charging the Tablet

The Jeazans Jzpad-A10L is equipped with a 5000mAh battery and supports Type-C fast charging.

- Use the provided USB-C cable and 5V/2A charger for optimal charging speed.
- Avoid using uncertified chargers, which may damage the battery or device.

5.2. Optimizing Battery Life

The tablet offers an average battery life of 8 hours under typical usage. To extend battery life:

- Reduce screen brightness.
- Disable Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable Battery Saver mode in **Settings > Battery**.

Long-Lasting battery to immerse yourself in entertainment mode all day



Video 5h



Music 9h



Browsing 9h



Standby 2 Months

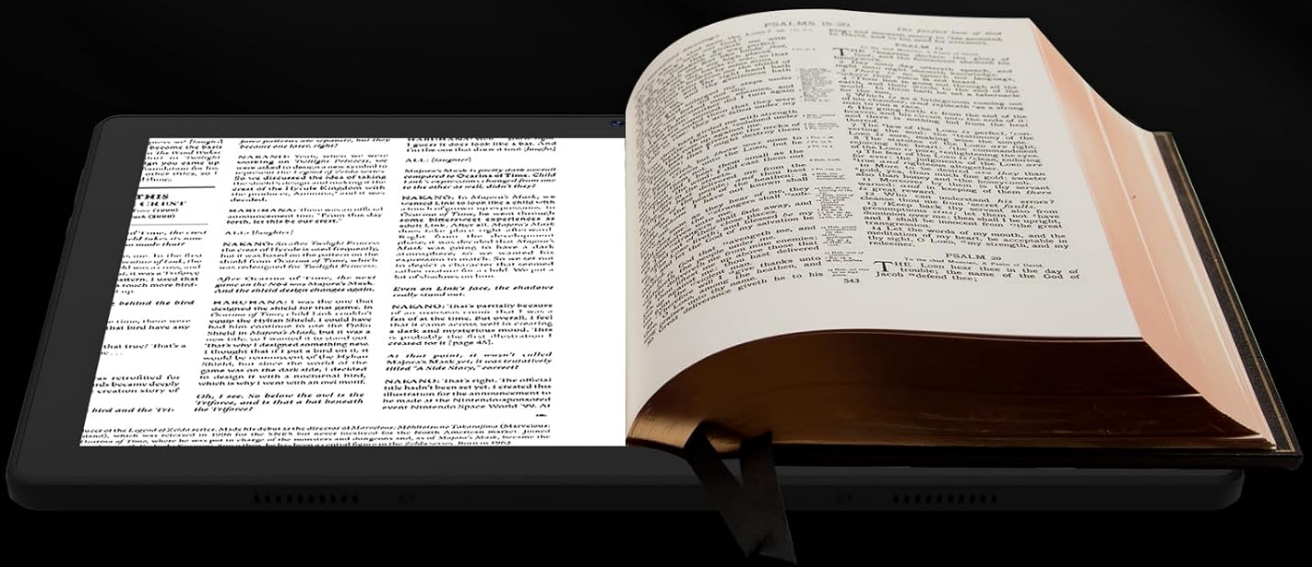


Image: Battery performance estimates for various activities.

6. MAINTENANCE AND CARE

6.1. Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.
- Do not spray cleaners directly onto the screen.

6.2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates.

6.3. Storage Optimization

To maintain smooth operation, periodically manage your tablet's storage.

- Delete unnecessary files and applications.
- Move large files (photos, videos) to the expandable TF card.
- Clear cache data for applications in **Settings > Apps > [App Name] > Storage & cache**.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger and wait a few minutes before attempting to power it on again.
- **Wi-Fi connectivity issues:** Restart your tablet and your Wi-Fi router. Verify the Wi-Fi password is correct. Try connecting to a different Wi-Fi network if available.
- **Slow performance:** Close unused applications. Clear app caches. Check for available software updates. Consider performing a factory reset as a last resort (back up your data first).
- **Bluetooth accessory not pairing:** Ensure the accessory is in pairing mode and fully charged. Restart Bluetooth on both the tablet and the accessory.
- **Screen unresponsive:** Restart the tablet by holding the power button until it shuts down, then power it back on.

8. SPECIFICATIONS

Below are the technical specifications for the Jeazans Jzpad-A10L Android Tablet:

Feature	Specification
Brand	Jeazans
Model Name	Jzpad-A10L
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (IPS HD)
Processor	2 GHz Allwinner Octa-Core
RAM	12GB (3GB physical + 9GB virtual)
Internal Storage	64 GB
Expandable Storage	Up to 1TB via TF Card (microSD)
Rear Camera	8MP

Front Camera	5MP
Battery Capacity	5000mAh
Average Battery Life	8 Hours
Wireless Connectivity	Wi-Fi 6 (802.11ax), Dual-band (5G/2.4G)
Bluetooth	Bluetooth 5.4
Dimensions (LxWxH)	9.8 x 6.6 x 0.5 inches
Item Weight	2.42 pounds

9. WARRANTY AND SUPPORT

9.1. Warranty Information

The Jeazans Jzpad-A10L Android Tablet comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

9.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact our dedicated customer support team. You can typically find contact information on the Jeazans official website or through your purchase platform. Please have your model number (Jzpad-A10L) and proof of purchase ready when contacting support.

© 2025 Jeazans. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question