

EUHOMY XEF-72

EUHOMY 73-inch Electric Fireplace (Model XEF-72) Instruction Manual

User Guide for Recessed, Wall-Mounted, and Freestanding Installations

1. IMPORTANT SAFETY INFORMATION

Please read this entire instruction manual carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always disconnect power before cleaning, performing maintenance, or relocating the fireplace.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the fireplace and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not operate any fireplace with a damaged cord or plug or after the fireplace malfunctions, has been dropped, or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fireplace is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate fireplace where it may fall into a bathtub or other water container.
- Connect to properly grounded outlets only.
- Do not use this fireplace outdoors.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- EUHOMY 73-inch Electric Fireplace Unit
- Remote Control
- Tempered Glass Panels
- Log Set
- Crystal Media
- Mounting Hardware (screws, brackets)
- Instruction Manual

3. INSTALLATION

The EUHOMY 73-inch Electric Fireplace offers versatile installation options: recessed, wall-mounted, or freestanding. Ensure the chosen location is near a grounded electrical outlet and away from flammable materials. Refer to the provided dimensions for precise measurements.

3.1 Product Dimensions



≤ 45-50 dB

LOW NOISE

2 HEATING POWER

750W or 1500W heating power can be selected to cover **400**

TIMER 0.5-8 H



SECURE

Overheating Protection



Image: Diagram illustrating the overall dimensions of the 73-inch electric fireplace, including width, height, and depth for installation planning.

3.2 Installation Methods

PRODUCT DIMENSIONS





PRODUCT DIMENSIONS						
Model Number	A	B	C	D	E	F
EF-72	73.23"	17.72"	5.55"	58.7"	12.2"	68.0"

PRODUCT DIMENSIONS			
Model Number	W	H	D
EF-72	70.70" in	16.30" in	5.98" in

Image: Visual representation of the three available installation methods: fully recessed into a wall, mounted directly onto a wall, and freestanding with a base.

3.2.1 Recessed Installation

For a flush, built-in look, create an opening in your wall according to the fireplace's dimensions (73"W x 17.7"H x 5.6"D). Ensure proper framing and electrical access. Secure the unit within the opening using the provided mounting brackets and screws.

3.2.2 Wall-Mounted Installation

Attach the wall-mounting bracket securely to a wall stud at the desired height. Lift the fireplace unit and hook it onto the bracket. Ensure it is level and stable before final tightening.

3.2.3 Freestanding Installation

Attach the included freestanding base to the bottom of the fireplace unit using the provided screws. Place the unit on a flat, stable surface.

3.3 Media Installation (Logs & Crystals)

Carefully place the decorative log set and crystal media into the designated fuel bed area of the fireplace. Ensure they are evenly distributed for optimal visual effect.

Your browser does not support the video tag.

Video: Official EUHOMY Electric Fireplace overview, demonstrating the installation of logs and crystals, and various features.

4. OPERATING INSTRUCTIONS

The fireplace can be operated using the touch control panel on the unit or the included remote control.

4.1 Control Panel & Remote Control

EASY BUTTON CONTROL & CLEAR DISPLAY



Image: Detailed view of the concealed touch buttons on the fireplace unit and the handheld remote control, highlighting their functions.

4.1.1 Power On/Off

Press the power button () on the control panel or remote to turn the fireplace on or off.

 
4.1.2 Flame Color & Brightness Adjustment

Use the flame color button () to cycle through 12 different flame color combinations. Use the dimmer button () to adjust between 5 flame brightness levels. The flame effect can run independently without heat.


12




COLOUR COMBINATIONS

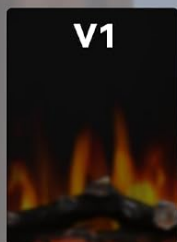


V1

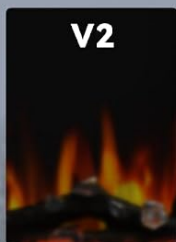 

V2

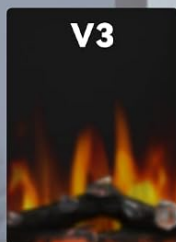 

V3

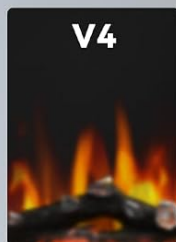 

V4



V5

Dimmer

Brighter

5



FLAME BRIGHTNESSES



Image: Visual representation of the 12 distinct flame color options and 5 adjustable brightness settings available for the fireplace.

4.1.3 Heater Operation

Press the heater button () to activate the heating function. Toggle between 750W (energy-saving) and 1500W (efficient heating) modes. Adjust the temperature from 62°F to 82°F using the temperature control button (F). The unit features an automatic heat-off safety feature.

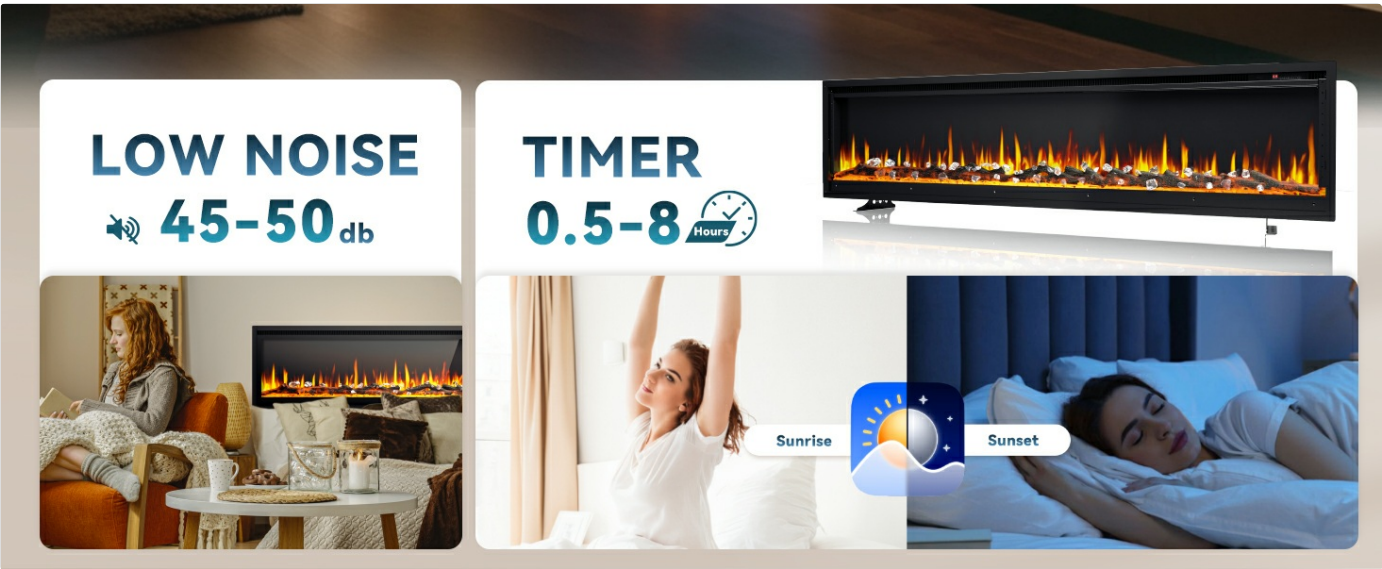 


Image: Illustrates the low noise operation, two heating power settings (750W and 1500W), and the 0.5-8 hour timer function.

4.1.4 Timer Function

Use the timer button () to set an automatic shut-off time between 0.5 and 8 hours.

5. MAINTENANCE

- **Cleaning:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Air Vents:** Regularly check and clean the air inlet and outlet vents to ensure unobstructed airflow. Blocked vents can lead to overheating.
- **Storage:** If storing the fireplace for an extended period, ensure it is clean, dry, and stored in a safe location.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, main switch off, remote battery low.	Check power outlet, ensure main power switch is on, replace remote batteries.
No heat output.	Heater function not activated, thermostat set too low, air vents blocked.	Activate heater, adjust thermostat, clear air vents.
Flame effect not working.	Flame effect off, LED lights malfunction.	Activate flame effect. If issue persists, contact customer support.
Remote control not working.	Batteries dead, obstruction, remote out of range.	Replace batteries, remove obstructions, operate within range.

7. SPECIFICATIONS

Feature	Detail
Brand	EUHOMY
Model Name	XEF-72

Feature	Detail
Product Dimensions (D x W x H)	5.6"D x 73"W x 17.7"H
Material	Tempered Glass
Installation Type	Wall Mount, Recessed, Freestanding
Heat Output	750W / 1500W
Temperature Range	62°F to 82°F
Flame Colors	12 combinations
Flame Brightness	5 levels
Timer	0.5 - 8 hours
Control Methods	Remote Control, Touch Buttons
Noise Level	45-50 dB

8. WARRANTY AND SUPPORT

EUHOMY is committed to providing premium products. This electric fireplace comes with a limited warranty. For any questions regarding the use, installation, or troubleshooting of your fireplace, please contact EUHOMY customer support. Our 7/24-hour customer support team is available to assist you. For further assistance, visit the official EUHOMY Store:[EUHOMY Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question