

[Manuals.plus](#) /

› [whall](#) /

› Whall Cold Press Juicer Machine with Touchscreen User Manual

whall Cold Press Juicer Machine

Whall Cold Press Juicer Machine with Touchscreen User Manual

Model: Cold Press Juicer Machine

Brand: Whall

IMPORTANT SAFETY PRECAUTIONS

Please read all instructions carefully before using the Whall Cold Press Juicer Machine. Keep this manual for future reference.

- Always ensure the juicer is properly assembled before operation.
- Do not immerse the motor base in water or any other liquid.
- Keep hands and utensils away from the feeding chute during operation to prevent injury.
- Unplug the juicer from the power outlet before cleaning or when not in use.
- Do not operate the juicer if the power cord or plug is damaged.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Only use accessories recommended by the manufacturer.
- Avoid juicing hard seeds, ice, or frozen fruits as this can damage the auger and motor.

PRODUCT OVERVIEW: COMPONENTS

Familiarize yourself with the various parts of your Whall Cold Press Juicer Machine.



This image displays the complete Whall Cold Press Juicer Machine, featuring its sleek design, the main motor base, the juicing assembly, and two collection cups for pulp and juice. Various fresh fruits are visible in the background, illustrating its purpose.

- **Pusher:** Used to gently guide ingredients into the feeding chute.
- **Feeding Chute:** Wide opening for inserting fruits and vegetables.
- **Hopper:** Top part of the juicing assembly where ingredients are placed.
- **Auger:** The slow-rotating spiral component that crushes and presses ingredients.
- **Filter Screen:** Separates juice from pulp.
- **Juice Outlet:** Where the extracted juice flows out.
- **Pulp Outlet:** Where the dry pulp is expelled.
- **Motor Base:** Contains the motor and control panel with touchscreen.
- **Juice Cup:** Collects the fresh juice.
- **Pulp Cup:** Collects the expelled pulp.

ASSEMBLY INSTRUCTIONS

Follow these steps to correctly assemble your juicer before first use.

1. Place the motor base on a stable, flat surface.
2. Align the juicing bowl with the motor base and rotate it clockwise until it locks into place.
3. Insert the filter screen into the juicing bowl.
4. Place the auger into the center of the filter screen, pushing down firmly until it seats correctly.
5. Attach the hopper and feeding chute assembly onto the juicing bowl, aligning the arrows, and rotate clockwise until it locks.
6. Place the juice cup under the juice outlet and the pulp cup under the pulp outlet.



This image highlights the juicer's wide 3-inch feeding chute, demonstrating how whole or large pieces of fruit, such as a pineapple, can be easily inserted, reducing pre-cutting time.

OPERATING INSTRUCTIONS

Learn how to effectively use your Whall Cold Press Juicer for optimal results.

1. Preparing Ingredients

- Wash all fruits and vegetables thoroughly.
- For ingredients with hard peels (e.g., oranges, lemons), peel them before juicing.
- Remove large seeds or pits from fruits like peaches, plums, or cherries.
- While the 3-inch chute accommodates large pieces, for very fibrous vegetables (e.g., celery, kale), it is recommended to cut them into smaller pieces (1-2 inches) to prevent clogging.

2. Juicing Process

1. Plug the juicer into a 120V AC power outlet.
2. The touchscreen display will illuminate.
3. Select the desired mode: **Soft** for softer fruits and vegetables (e.g., oranges, grapes, tomatoes) or **Hard** for harder produce (e.g., carrots, apples, celery).
4. Slowly feed the prepared ingredients into the feeding chute. Use the pusher only if necessary and with gentle pressure.
5. Allow the juicer to process the ingredients at its slow speed. The juice will flow into the juice cup, and pulp will be expelled into the pulp cup.
6. If the juicer becomes clogged or stops, press the **Reverse (REV)** button on the touchscreen. Hold it for a few seconds, then release. This will rotate the auger in reverse to clear any blockages. Repeat if necessary, then resume normal operation.
7. Once juicing is complete, press the **OFF** button on the touchscreen and unplug the appliance.



Multi-Edge Cutting



Deep Cutting



Masticating



Extracting



+30%
Juice Yield
Improvement

This diagram illustrates the advanced functionality of the juicer's spiral auger, detailing its multi-edge cutting, deep cutting, masticating, and extracting stages, which contribute to efficient juice yield.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your juicer.

1. Disassembly for Cleaning

1. Ensure the juicer is unplugged from the power outlet.
2. Remove the juice and pulp cups.
3. Rotate the hopper and feeding chute assembly counter-clockwise to unlock and remove it.
4. Lift out the auger and then the filter screen from the juicing bowl.
5. Rotate the juicing bowl counter-clockwise to unlock and remove it from the motor base.

2. Cleaning Components

- Rinse all detachable parts (pusher, hopper, auger, filter screen, juicing bowl, cups) under running water immediately after use.
- Use the provided cleaning brush to remove any pulp residue from the filter screen and other components.
- Wash parts with warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.
- The motor base should be wiped clean with a damp cloth. Never immerse it in water.

3. Storage

Store the clean and dry juicer in a cool, dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; not assembled correctly; power outage.	Check power connection; ensure all parts are locked in place; check household power.
Motor stops during operation.	Overload due to too much or too hard ingredients; blockage.	Press the Reverse button to clear blockage; reduce amount of ingredients; cut hard ingredients into smaller pieces.
Excessive vibration or noise.	Improper assembly; hard object in juicer.	Disassemble and reassemble correctly; check for foreign objects.
Low juice yield or wet pulp.	Filter screen clogged; incorrect mode selected.	Clean filter screen thoroughly; ensure Soft/Hard mode is appropriate for ingredients.

TECHNICAL SPECIFICATIONS

- **Model:** Cold Press Juicer Machine
- **Brand:** Whall
- **Power:** 180 Watts
- **Voltage:** 120 Volts (AC)
- **Blade Material:** Stainless Steel (Auger)
- **Features:** Touchscreen, 3-inch Extra Large Feed Chute, Reverse Function, Soft & Hard Modes

WARRANTY AND SUPPORT

Whall products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship under normal household use.

For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official Whall website. Please have your model number and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question