

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec ReadyWarm 1500 Ceramic Heater Instruction Manual

Cecotec A01_EU01_100571

Cecotec ReadyWarm 1500 Ceramic Heater Instruction Manual

Model: A01_EU01_100571

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the Cecotec ReadyWarm 1500 Ceramic Heater. Keep this manual for future reference.

- Always ensure the heater is placed on a stable, flat surface to prevent accidental tip-over.
- Do not cover the heater or block its air inlets/outlets. This can lead to overheating.
- Keep flammable materials (curtains, furniture, clothing) at least 1 meter (3 feet) away from the heater.
- Do not use the heater in bathrooms, laundry areas, or similar wet locations.
- Unplug the heater when not in use or before cleaning.
- This appliance is equipped with a triple safety system: automatic shut-off in case of tip-over, overheat protection, and a protective grille to prevent finger entry.

2. PRODUCT OVERVIEW

The Cecotec ReadyWarm 1500 Ceramic Heater is a compact and efficient heating solution designed for rooms up to 15 m². It features a retro design, ceramic heating technology, and user-friendly controls.



Front view of the Cecotec ReadyWarm 1500 Ceramic Heater, showcasing its retro design and protective grille.



Back view of the Cecotec ReadyWarm 1500 Ceramic Heater, showing the air intake vents.

Components:

- **Main Unit:** Ceramic heating element and fan.
- **Control Knob:** For power and mode selection.
- **Thermostat Dial:** To adjust the desired temperature.
- **Protective Grille:** Front safety grille.
- **Integrated Handle:** For easy portability.

3. SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for storage or transport.
2. **Placement:** Place the heater on a firm, level, heat-resistant surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater to allow for proper airflow and to prevent fire hazards. Do not place it directly under a power outlet.
3. **Power Connection:** Plug the power cord into a suitable 230V electrical outlet. Ensure the outlet is in good condition and not overloaded.

4. OPERATING INSTRUCTIONS

The ReadyWarm 1500 Ceramic Heater offers two operating modes and an adjustable thermostat for personalized comfort.



A hand adjusting the control knob, which

manages power and mode selection.



The heater effectively warming a user's legs, demonstrating its heat output.

- 1. **Power On/Off:** Turn the main control knob to the 'I' or 'II' position to power on the heater. Turn it to '0' to power off.
- 2. **Mode Selection:**
 - **Mode I:** Low heat setting.
 - **Mode II:** High heat setting (1500W).
- 3. **Thermostat Adjustment:** Rotate the thermostat dial to set your desired room temperature. The heater will cycle on and off to maintain this temperature.
- 4. **Silent Operation:** This heater is designed for quiet operation, allowing for comfortable use in various environments without significant noise disturbance.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- 1. **Cleaning:** Before cleaning, always unplug the heater and allow it to cool completely. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- 2. **Dust Removal:** Periodically use a vacuum cleaner with a brush attachment to remove dust from the air intake and outlet grilles.
- 3. **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.

6. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, unit unplugged, safety switch activated (tip-over or overheat).	Check power cord connection. Ensure the heater is upright. Allow to cool if overheated. Check household circuit breaker.

Problem	Possible Cause	Solution
Insufficient heat output.	Low heat mode selected, thermostat set too low, room too large.	Select Mode II (high heat). Increase thermostat setting. Ensure heater is appropriate for room size (up to 15 m²).
Unusual noise or smell.	Dust accumulation, new unit smell.	Clean grilles as per maintenance section. New units may emit a slight odor initially, which should dissipate. If noise or smell persists, discontinue use and contact support.
Heater turns off unexpectedly.	Overheat protection activated, tip-over switch activated, thermostat reached set temperature.	Ensure heater is not covered and has adequate ventilation. Check if it was tipped over. This is normal operation if the room reached the set temperature.

7. SPECIFICATIONS

- **Brand:** Cecotec
- **Model Number:** A01_EU01_100571
- **Power:** 1500 Watts
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 18 x 31 x 31 cm
- **Weight:** 2 Kilograms
- **Recommended Room Size:** Up to 15 m²
- **Operating Modes:** 2 (Low Heat, High Heat)
- **Special Features:** Ceramic Technology, Adjustable Thermostat, Silent Operation, Triple Safety System (Tip-over auto-off, Overheat Protection, Protective Grille)
- **Color:** White
- **Power Source:** Corded Electric

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Cecotec website.

- **Spare Parts Availability:** Spare parts for this model are available for up to 10 years from the date of purchase.
- **Customer Support:** For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Cecotec customer support through their official channels. Contact information can typically be found on the product packaging or the brand's website.