

[Manuals.plus](#) /

> [BERGNER](#) /

> BERGNER by Vissani Double Grill Pan Oven Effect 32x24x7.2cm Instruction Manual

BERGNER BG-35818-MBG

BERGNER by Vissani Double Grill Pan Instruction Manual

Model: BG-35818-MBG

INTRODUCTION

Thank you for choosing the BERGNER by Vissani Double Grill Pan. Designed in collaboration with Chef Gianfranco Vissani, this innovative cookware offers a unique 'oven effect' for healthier cooking with less smoke and odors. Crafted from durable cast aluminum with a high-performance non-stick stone effect coating, it features separable bodies and a secure magnetic closure for versatile use. Please read this manual carefully before first use to ensure proper operation and maintenance.



Image: The BERGNER by Vissani Double Grill Pan in its closed position, showcasing the sleek black exterior and the 'BERGNER by

SAFETY INSTRUCTIONS

To ensure safe and effective use of your double grill pan, please observe the following safety guidelines:

- **Not Suitable for Induction Hobs:** This product is specifically **NOT** designed for use on induction cooktops. Please use on gas, electric, or ceramic hobs only.
- **Handle Heat:** The handles are heat-resistant but may become hot during prolonged cooking. Always use oven mitts or a cloth when handling the pan.
- **Avoid Overheating:** Do not heat the empty pan for extended periods, as this can damage the non-stick coating and the pan itself.
- **Utensil Use:** Use only wooden, silicone, or plastic utensils to protect the non-stick surface from scratches. Avoid metal utensils.
- **Cool Before Cleaning:** Always allow the pan to cool completely before washing to prevent warping and damage to the non-stick coating.
- **Children Safety:** Keep the pan out of reach of children, especially when hot.
- **Ventilation:** Ensure adequate ventilation when cooking, especially when grilling, to dissipate any cooking fumes.

SETUP

Before using your BERGNER by Vissani Double Grill Pan for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and labels from the pan.
2. **Wash:** Wash the pan thoroughly with warm soapy water and a soft sponge. Rinse well and dry completely.
3. **Initial Seasoning (Recommended):** Although the pan has a non-stick coating, a light seasoning can enhance its performance and longevity. Lightly coat the interior cooking surfaces with a small amount of cooking oil (e.g., vegetable oil). Heat the pan over low heat for 1-2 minutes, then remove from heat and wipe off any excess oil with a paper towel.


OPERATING INSTRUCTIONS

The BERGNER by Vissani Double Grill Pan is designed for versatile cooking. Here's how to use its key features:

Separable Bodies

The pan consists of two separable halves, allowing you to use them as individual pans or combine them for the 'oven effect'.

- **Separating:** To separate the pans, unlatch the hinge mechanism located at the back. Gently pull the two halves apart.
- **Reattaching:** Align the hinge pins of one pan with the corresponding slots on the other. Push them together until they click securely into place.

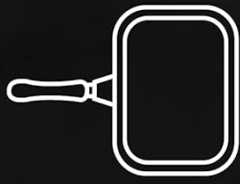

Corpi separabili in
**alluminio
pressofuso**



Image: The two halves of the grill pan are shown separated, highlighting the cast aluminum construction and the hinge mechanism that allows them to detach.

Magnetic Closure and Silicone Gasket

The pan features a magnetic closure on the handles and a removable silicone gasket to create an airtight seal, trapping heat and moisture for an 'oven effect' and preventing smoke and odors from escaping.

- **Closing:** Bring the two handles together. The integrated magnets will securely lock the handles, ensuring a tight seal.
- **Gasket:** The red silicone gasket fits into a groove along the rim of one pan. Ensure it is properly seated before closing for optimal sealing. It can be removed for cleaning.



Image: A close-up view of the bakelite handle, showing the integrated magnet that ensures a secure closure when the two pan halves are brought together.



Image: A detailed view of the red silicone gasket, which fits into the rim of the pan to create an airtight seal for the 'oven effect' cooking.

Cooking Surfaces

The pan features two distinct cooking surfaces:

- **Ribbed Surface:** Ideal for grilling meats, fish, and vegetables, creating characteristic grill marks and allowing fats to drain.

- **Smooth Surface:** Suitable for frying, searing, or cooking dishes that require a flat surface.

You can cook on either side by flipping the closed pan, ensuring even cooking and browning.

~~~~~

## Rivestimento con rilievi

per ottimizzare la cottura



Image: A close-up of the ribbed cooking surface, showing a piece of grilled meat and chili peppers, demonstrating its use for optimal grilling.



Image: The double grill pan opened, revealing both the ribbed and smooth non-stick cooking surfaces, ready for use.

## MAINTENANCE AND CARE

Proper care will extend the life of your BERGNER by Vissani Double Grill Pan and maintain its non-stick properties:

- **Cleaning:** Hand washing is recommended. After each use, allow the pan to cool completely. Wash with warm soapy water and a soft sponge or cloth. Avoid abrasive cleaners, steel wool, or harsh scouring pads, as these can damage the non-stick coating.

- **Silicone Gasket:** The silicone gasket can be removed for thorough cleaning. Wash it separately with warm soapy water and ensure it is dry before reinserting.
- **Drying:** Dry the pan thoroughly after washing to prevent water spots and maintain its appearance.
- **Storage:** Store the pan in a dry place. If stacking with other cookware, place a soft cloth or paper towel between the pans to protect the non-stick surface.

## TROUBLESHOOTING

Here are some common issues and their solutions:

| Problem                                 | Possible Cause                                                   | Solution                                                                                                                                 |
|-----------------------------------------|------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Food sticking to the pan.               | Pan not hot enough; insufficient oil; damaged non-stick coating. | Preheat the pan properly; use a small amount of oil; avoid metal utensils to protect coating.                                            |
| Handles become too hot to touch.        | Prolonged cooking at high heat.                                  | Always use oven mitts or a thick cloth when handling the pan during or immediately after cooking.                                        |
| Pan does not close securely.            | Silicone gasket is misplaced or damaged; hinge not aligned.      | Check that the silicone gasket is correctly seated in its groove. Ensure the hinge mechanism is properly aligned and clicked into place. |
| Smoke or odors escaping during cooking. | Pan not sealed properly.                                         | Ensure the handles are securely locked with the magnets and the silicone gasket is correctly in place, creating an airtight seal.        |

## SPECIFICATIONS

| Feature            | Detail                                                                        |
|--------------------|-------------------------------------------------------------------------------|
| Brand              | BERGNER                                                                       |
| Model              | BG-35818-MBG                                                                  |
| Color              | Black                                                                         |
| Product Dimensions | 24 x 32 x 7 cm                                                                |
| Weight             | 700 grams                                                                     |
| Material           | Cast Aluminum                                                                 |
| Special Features   | Non-stick, Scratch-resistant, Separable bodies, Magnetic closure, Oven effect |
| Handle Material    | Bakelite                                                                      |
| Compatibility      | Not suitable for induction hobs                                               |

## WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your BERGNER by Vissani Double Grill Pan, please contact the manufacturer or your point of purchase. Keep your proof of purchase for warranty purposes.