

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby Activity Wall - Water & Ball Play Center Instruction Manual](#)

Smoby 7600840300FLR

Smoby Activity Wall - Water & Ball Play Center Instruction Manual

Model: 7600840300FLR

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Smoby Activity Wall. Please read all instructions carefully before use and retain this manual for future reference. This product is designed for children aged 24 months to 10 years.

SAFETY INFORMATION

- Adult supervision is required at all times during play.
- Ensure all components are securely assembled before allowing children to play.
- Do not modify the product in any way.
- Use only the provided accessories with the activity wall.
- Regularly inspect the product for any damage or wear. Discontinue use if damage is found.
- This product is intended for domestic use only.

WHAT'S INCLUDED

Your Smoby Activity Wall package includes:

- 1 x Activity Wall base unit
- 29 x Interactive accessories (gutters, reservoirs, rocker and paddle wheels, tic-tac-toe board, ball toss game, scoreboard, balls, etc.)



Figure 1: Included Accessories. This image displays all 29 interactive accessories that come with the Smoby Activity Wall, including various colored gutters, cups, wheels, balls, a chalkboard, and game pieces, laid out neatly for identification.

SETUP INSTRUCTIONS

Follow these steps to assemble your Smoby Activity Wall:

- Unpack Components:** Carefully remove all parts from the packaging. Verify that all 29 accessories and the main wall unit are present.
- Assemble Base:** Attach the main wall panels to the sturdy base unit. Ensure they click securely into place. The wall is designed to be two-sided.
- Attach Accessories:** The activity wall features multiple attachment points. Customize the layout by attaching the gutters, reservoirs, wheels, and other interactive elements to create various water and ball pathways. Experiment with different configurations.
- Positioning:** Place the assembled activity wall on a flat, stable surface, either indoors or outdoors. If using water, ensure the play area is suitable for splashes.



Figure 2: Assembled Activity Wall. This image shows the fully assembled Smoby Activity Wall from two perspectives, highlighting its two-sided design with various accessories attached for water and ball play.



Figure 3: Two-Sided Play. This image illustrates two children interacting with different sides of the Smoby Activity Wall, demonstrating its dual-sided play functionality for water and ball activities.

OPERATING INSTRUCTIONS

The Smoby Activity Wall offers multiple ways to play:

- **Water Play:**

Pour water into the top funnel. Observe as it flows through the customized gutters, reservoirs, and wheels. Children can adjust the accessory placement to change the water's path.



Figure 4: Water Flow Activity. A child is shown pouring water into the top funnel of the Smoby Activity Wall, initiating the water flow through the various channels and accessories.

- **Ball Play:**

Place the included balls into the top funnel or directly onto the pathways. Watch them roll down through the configured accessories. The wall includes elements like a ball toss game and tic-tac-toe for additional ball-related activities.

- **Interactive Games:**

Utilize the integrated tic-tac-toe board, ball toss game, scoreboard, and activity wheel for structured play. The chalkboard allows for creative drawing and scorekeeping.



Figure 5: Game Side Interaction. Two children are engaged with the game side of the Smoby Activity Wall, featuring a chalkboard for drawing and a circular game board with colored slots.

MAINTENANCE AND CARE

- **Cleaning:** Wipe down the activity wall and accessories with a damp cloth and mild soap. Rinse thoroughly with water. Avoid abrasive cleaners.
- **Drying:** Ensure all components are completely dry before storage to prevent mold or mildew, especially after water play.
- **Storage:** Store the activity wall in a cool, dry place away from direct sunlight when not in use. Prolonged exposure to harsh weather conditions may affect product longevity.
- **Inspection:** Periodically check all parts for cracks, breaks, or loose connections. Replace any damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Accessories do not fit securely.	Incorrect orientation or debris in attachment points.	Ensure accessories are aligned correctly with the attachment points. Clear any obstructions. Apply gentle, firm pressure to secure.
Water/balls do not flow smoothly.	Accessories are not properly aligned or are blocked.	Re-arrange accessories to create a clear, downward path. Ensure no accessories are inverted or misaligned. Check for debris.
Product appears unstable.	Base not fully assembled or placed on an uneven surface.	Verify that the main wall panels are securely attached to the base. Move the activity wall to a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Model Number	7600840300FLR
Product Dimensions (L x W x H)	18.46 x 7.28 x 32.24 inches
Item Weight	11.73 pounds
Recommended Age	24 months - 10 years
Number of Accessories	29
Features	Two-sided play, water and ball activities, tic-tac-toe, ball toss, scoreboard, activity wheel, chalkboard.

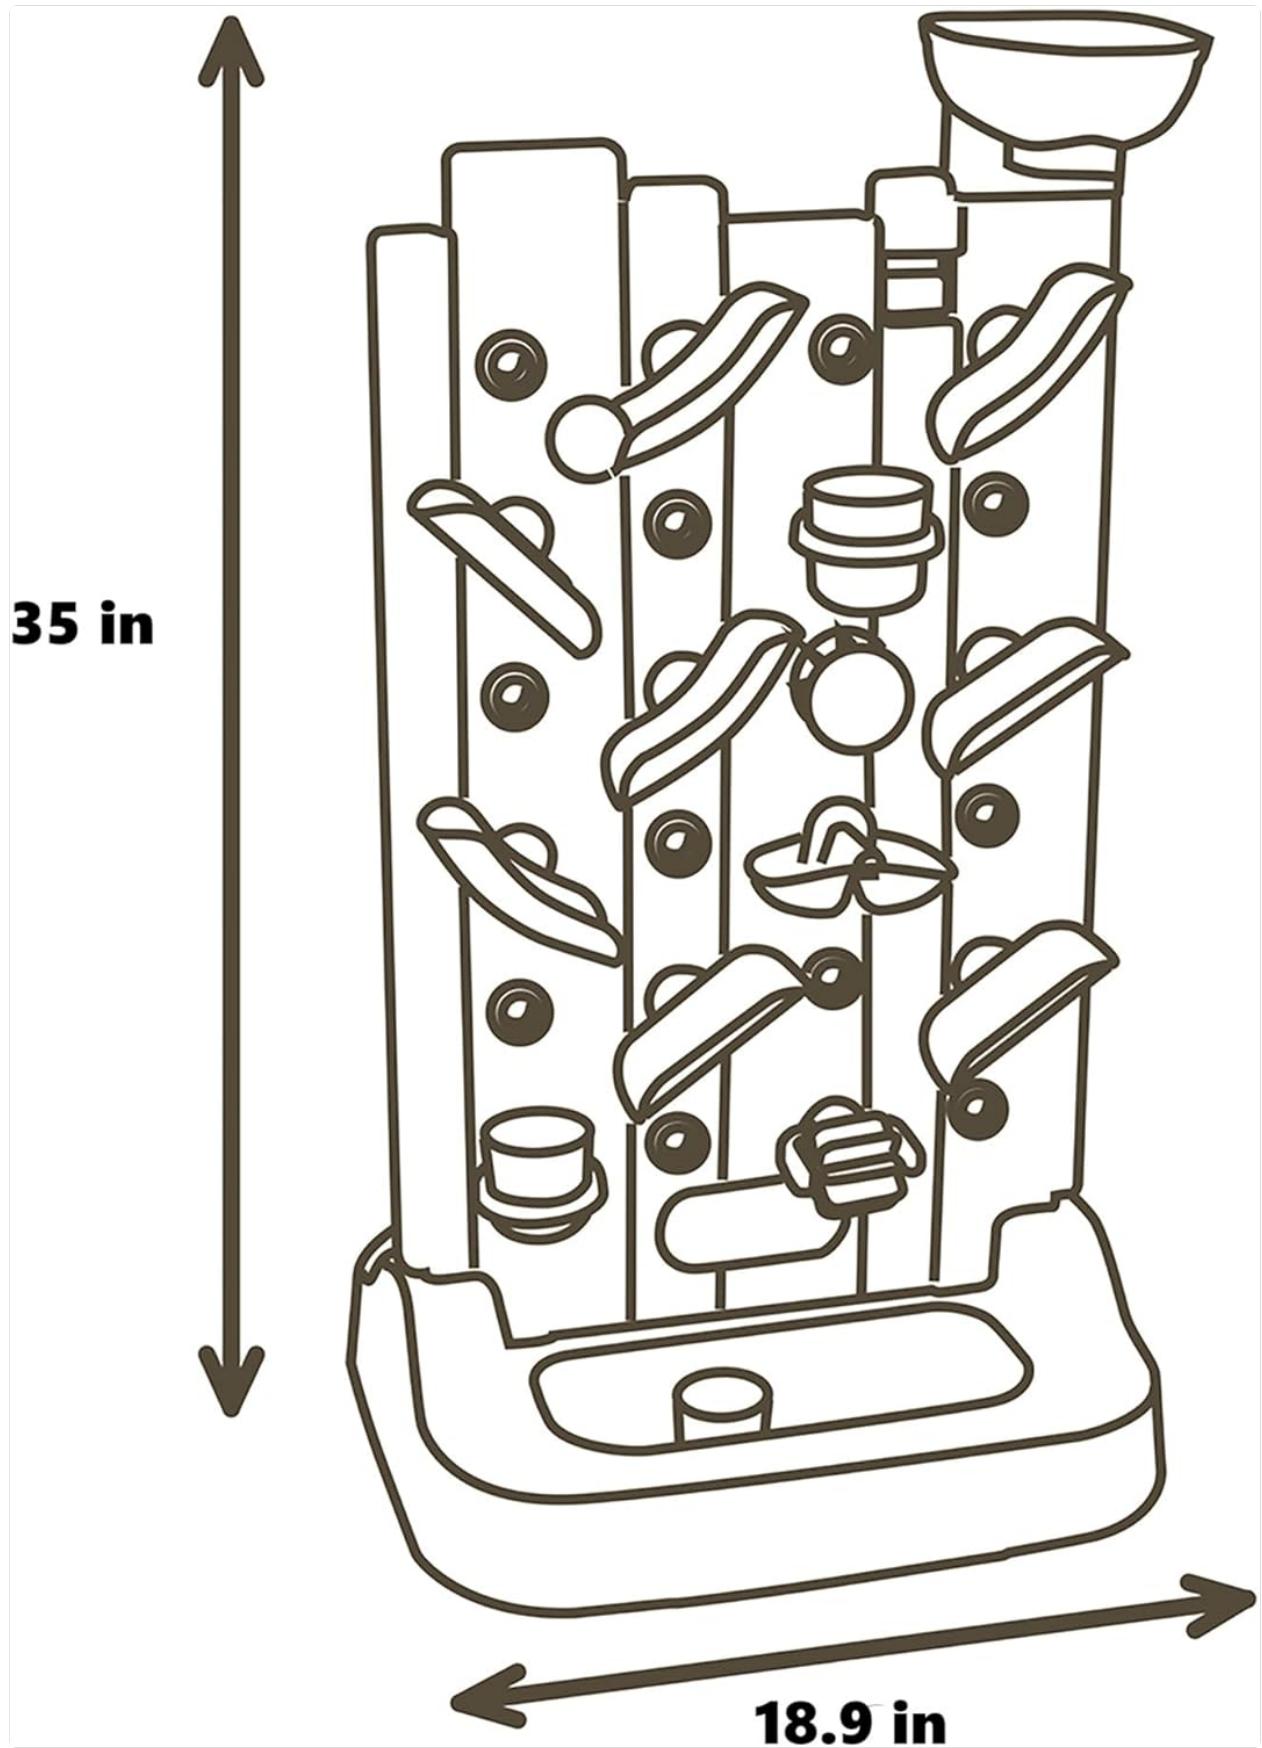
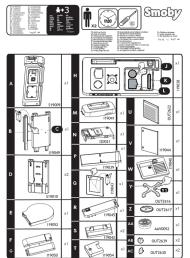
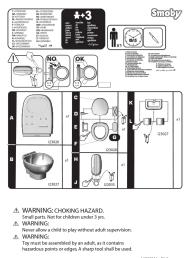
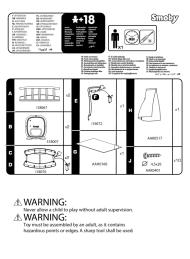



Figure 6: Product Dimensions. This diagram illustrates the approximate height (35 inches) and width (18.9 inches) of the Smoby Activity Wall, providing a visual reference for its size.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Smoby website. Keep your proof of purchase for any warranty claims.

Related Documents - 7600840300FLR

	<p>Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>
	<p>Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.</p>
	<p>Smoby Playhouse Slabs: Configurations and Requirements</p> <p>A guide to Smoby's modular slab system for playhouses, detailing configurations and the number of slab sets required for various models like Jura Lodge, Chef House, Friends House, and Tipi. Includes product references and coverage information.</p>
	<p>Smoby Bercelonnette Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>
	<p>Smoby Pushchair + Pram Assembly Instructions</p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>

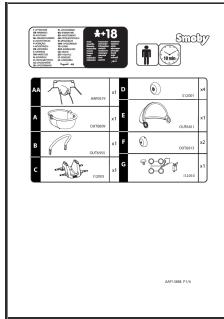

[Smoby Landau Calin Baby Doll Stroller Assembly Instructions](#)

This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.